
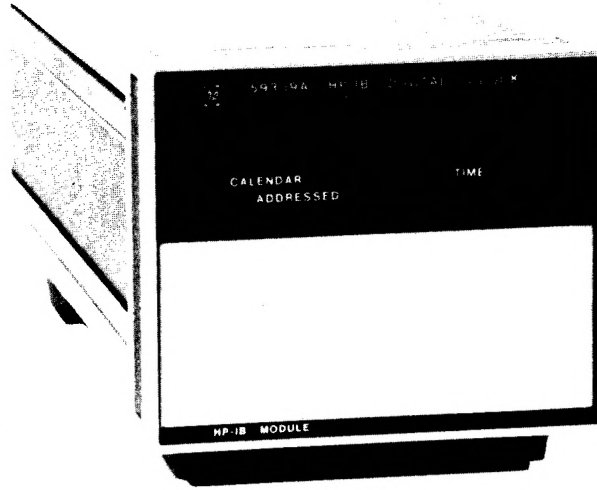


HP-IB DIGITAL CLOCK

59309A

**FAILURE TO RETURN
THIS MANUAL WILL
RESULT IN A MINIMUM
OF A \$25.00 CHARGE.**

U.S. INSTRUMENT RENTALS, INC.

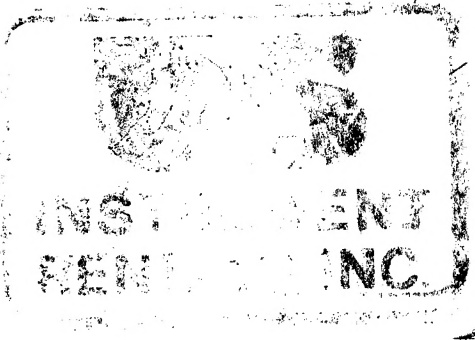

HEWLETT *hp* PACKARD

CERTIFICATION

Hewlett-Packard Company certifies that this instrument met its published specifications at the time of shipment from the factory. Hewlett-Packard Company further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY AND ASSISTANCE

This Hewlett-Packard product is warranted against defects in materials and workmanship for a period of one year from the date of shipment. Hewlett-Packard will, at its option, repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard, and provided the preventive maintenance procedures in this manual are followed. Repairs necessitated by misuse of the product are not covered by this warranty. NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT-PACKARD IS NOT LIABLE FOR CONSEQUENTIAL DAMAGES.

Service contracts or customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

OPERATING AND SERVICE MANUAL

59309A

HP-IB DIGITAL CLOCK

SERIAL NUMBERS

This manual applies directly to Model 59309A HP-IB Digital Clock with serial prefix 1632A.

For serial prefixes above 1632A, a "Manual Changes" sheet is included with this manual. For serial prefixes below 1632A, refer to Section VII of this manual.

Copyright HEWLETT-PACKARD COMPANY 1976
5301 STEVENS CREEK BLVD., SANTA CLARA, CALIF. 95050

MANUAL PART NO. 59309-90004
Microfiche Part No. 59309-90005

Printed: DEC 1976

HEWLETT  PACKARD

TABLE OF CONTENTS

| Section | | Page |
|---------|--|------|
| I | GENERAL INFORMATION | 1-1 |
| | 1-1. Scope of Manual | 1-1 |
| | 1-11. Description | 1-1 |
| | 1-18. Applications | 1-2 |
| | 1-20. Specifications | 1-3 |
| | 1-24. Options | 1-4 |
| | 1-28. Manual Microfiche | 1-4 |
| II | INSTALLATION | 2-1 |
| | 2-1. Introduction | 2-1 |
| | 2-3. Unpacking and Inspection | 2-1 |
| | 2-5. Preparation for Use | 2-1 |
| | 2-6. Power Requirements and Line Voltage | 2-1 |
| | 2-10. Standby Power | 2-3 |
| | 2-11. Standby Power Input | 2-3 |
| | 2-14. 9-Volt Battery Installation | 2-3 |
| | 2-20. Operating Environment | 2-3 |
| | 2-22. Packaging for Reshipment | 2-4 |
| | 2-23. Original Packaging | 2-4 |
| | 2-27. Other Packaging Methods | 2-4 |
| | 2-29. Storage | 2-4 |
| | 2-31. Interconnecting Cables | 2-4 |
| III | OPERATING AND PROGRAMMING | 3-1 |
| | 3-1. Introduction | 3-1 |
| | 3-3. Controls, Indicators, and Connectors | 3-1 |
| | 3-5. Operation | 3-1 |
| | 3-7. Time Base | 3-1 |
| | 3-9. Clock Functions | 3-1 |
| | 3-11. Clock Error Indicators | 3-4 |
| | 3-13. Long Term Standby Power | 3-4 |
| | 3-15. Short Term Standby | 3-4 |
| | 3-17. Stand-Alone Operating Procedures | 3-4 |
| | 3-19. System Operation | 3-5 |
| | 3-21. Programming | 3-5 |
| | 3-23. Listen Function | 3-5 |
| | 3-25. Talk Function | 3-5 |
| | 3-27. Talk Only Mode | 3-5 |
| | 3-29. Addressable Mode | 3-7 |
| | 3-31. Bus Output Format Selection | 3-7 |
| | 3-33. System Operating Procedures | 3-8 |
| | 3-34. Program Example | 3-10 |
| | 3-36. Program Example Using 9820A Calculator | 3-11 |
| | 3-40. Program Example Using 9830A Calculator | 3-12 |
| | 3-44. Automatic Clock Setting Program Examples | 3-15 |

TABLE OF CONTENTS (Continued)

| Section | | Page |
|---------|---|------|
| IV | THEORY OF OPERATION | 4-1 |
| | 4-1. General | 4-1 |
| | 4-4. Overall Theory of Operation | 4-1 |
| | 4-6. 1 MHz Oscillator | 4-1 |
| | 4-8. Time Base Divider | 4-1 |
| | 4-10. Seconds, Minutes, and Hours Counters | 4-1 |
| | 4-12. Digit Position Decoder | 4-1 |
| | 4-14. Days and Months Counters | 4-3 |
| | 4-16. Input Processing | 4-3 |
| | 4-18. Output State Machine | 4-3 |
| | 4-20. Seven-Segment Decoder | 4-3 |
| | 4-22. Segment Drivers | 4-3 |
| | 4-24. Clock Loss Detector | 4-3 |
| | 4-26. Display | 4-3 |
| | 4-28. Integrated Circuit Operation | 4-3 |
| | 4-30. 256-Bit Read-Only-Memory A5U15 (1816-0353) | 4-3 |
| | 4-32. 1024-Bit Read-Only-Memory A5U18 (1816-0354) | 4-5 |
| | 4-34. 4096-Bit Read-Only-Memory A5U2 (1818-2193) | 4-5 |
| | 4-36. BCD-to-Decimal Decoder/Driver A4U18 (1820-0491) | 4-6 |
| | 4-38. 64-Bit Random-Access-Memory (RAM) A5U14 (1820-0628) | 4-6 |
| | 4-40. Eight Input Multiplexer A5U8 (1820-0658) | 4-7 |
| | 4-42. Low Power One-to-Sixteen Decoder A5U17 (1820-0702) | 4-8 |
| | 4-44. Quad Two-Input Multiplexer A5U7 (1820-0710) | 4-9 |
| | 4-46. Low Power TTL Five-Bit Comparator A5U19 (1820-0904) | 4-9 |
| | 4-48. Seven0Segment Decoder A1U2 (1820-0914) | 4-10 |
| | 4-50. BCD Up/Down Counter A3U7 (1820-1189) | 4-11 |
| | 4-52. Timer A1U3 (1826-0180) | 4-11 |
| V | MAINTENANCE | 5-1 |
| | 5-1. Introduction | 5-1 |
| | 5-3. Test Equipment | 5-1 |
| | 5-5. In-Cabinet Performance Test | 5-1 |
| | 5-7. Adjustments | 5-7 |
| | 5-9. Troubleshooting | 5-7 |
| | 5-12. ROM Listings | 5-7 |
| | 5-14. Operational Flowcharts | 5-13 |
| VI | REPLACEABLE PARTS | 6-1 |
| | 6-1. Introduction | 6-1 |
| | 6-4. Ordering Information | 6-4 |
| | 6-7. HP Part Number Organization | 6-4 |
| | 6-9. Component Parts and Materials | 6-4 |
| | 6-12. General Usage Parts | 6-5 |
| | 6-14. Specific Instrument Parts | 6-5 |
| VII | MANUAL CHANGES AND OPTIONS | 7-1 |
| | 7-1. Options | 7-1 |
| | 7-3. Manual Changes | 7-1 |
| | 7-5. Newer Instruments | 7-1 |
| | 7-7. Older Instruments | 7-1 |
| | 7-9. Julian Oscillator (Option 001) 59309-60007 | 7-3 |

TABLE OF CONTENTS (Continued)

| Section | | Page |
|---------|---|------|
| VIII | SCHEMATIC DIAGRAMS | 8-1 |
| | 8-1. Introduction | 8-1 |
| | 8-3. Schematic Diagram Notes, Assembly Numbers, and Reference Designations | 8-2 |
| | 8-5. Reference Designations | 8-1 |
| | 8-7. Identification Markings on Printed-Circuit Boards | 8-1 |
| | 8-11. Component Locators | 8-1 |

LIST OF TABLES

| Table | | Page |
|-------|---|------|
| 1-1. | Specifications | 1-3 |
| 1-2. | Equipment Supplied | 1-4 |
| 1-3. | Accessories Available | 1-4 |
| 3-1. | Addressing | 3-6 |
| 3-2. | Programming Codes | 3-9 |
| 5-1. | Recommended Test Equipment | 5-1 |
| 5-2. | In-Cabinet Performance Test | 5-2 |
| 5-3. | A5U18 ROM Listing | 5-7 |
| 5-4. | A5U15 ROM Listing | 5-8 |
| 5-5. | A5U2 ROM Bit Pattern, Talk Enable = 1 | 5-9 |
| 5-6. | A5U2 ROM Bit Pattern, Talk Enable = 0 | 5-10 |
| 6-1. | 59309A Cabinet Parts | 6-5 |
| 6-2. | Replaceable Parts | 6-6 |
| 6-3. | Manufacturers Code List | 6-11 |
| 7-1. | Manual Changes for Older Instruments | 7-1 |
| 7-2. | Julian Oscillator Option 001, Replaceable Parts | 7-4 |

LIST OF FIGURES

| Figure | | Page |
|--------|--|------|
| 1-1. | Model 59309A and Equipment Supplied | 1-0 |
| 2-1. | Power Cables | 2-2 |
| 2-2. | Pin Connections of the 10631A, B, C, Cables | 2-5 |
| 3-1. | Digital Clock Front Panel, Hinged Portion Lifted | 3-2 |
| 3-2. | Digital Clock Rear Panel | 3-3 |
| 3-3. | Format Switch Settings | 3-7 |
| 3-4. | Flowchart of Example Programs | 3-10 |
| 4-1. | HP 59309A Block Diagram | 4-2 |
| 4-2. | 256-Bit Read-Only-Memory (ROM) A5U15 | 4-4 |
| 4-3. | 1024-Bit Read-Only-Memory (ROM) A5U18 | 4-5 |
| 4-4. | 4096-Bit Read-Only-Memory (ROM) A5U2 | 4-5 |
| 4-5. | BCD-to-Decimal Decoder/Driver A4U18 | 4-6 |
| 4-6. | Random-Access-Memory (RAM) A5U14 | 4-6 |
| 4-7. | Eight Input Multiplexer A5U8 | 4-7 |
| 4-8. | Low Power One-to-Sixteen Decoder A5U17 | 4-8 |
| 4-9. | Quad Two Input Multiplexer A5U7 | 4-9 |
| 4-10. | Low Power Input Multiplexer A5U7 | 4-9 |
| 4-11. | Seven-Segment Decoder A1U2 | 4-10 |
| 4-12. | BCD Up/Down Counter A3U7 | 4-11 |
| 4-13. | Timer A1U3 | 4-11 |
| 5-1. | A5U2 Talk Disabled Flowchart | 5-14 |
| 5-2. | A5U2 Talk Enable Flowchart, Sheet 1 through 5A | 5-15 |
| 6-1. | 59309A Cabinet Parts | 6-3 |
| 7-1. | Julian Oscillator A3 Option 001, Component Locator | 7-6 |
| 7-2. | Julian I/O Board Assembly A5 Option 001, Component Locator | 7-7 |
| 7-3. | Julian Oscillator Option 001, Schematic Diagram | 7-9 |
| 8-1. | Schematic Diagram Notes | 8-2 |
| 8-2. | Digital Bus Connector Pin Designation | 8-3 |
| 8-3. | Display Assembly A1 (59309-60001), Schematic Diagram | 8-5 |
| 8-4. | Motherboard/Power Supply Assembly A2 (59309-60002), Schematic Diagram | 8-7 |
| 8-5. | Calendar Oscillator Assembly A3 (59309-60003), Schematic Diagram | 8-9 |
| 8-6. | Time Assembly A4 (59309-60004), Schematic Diagram (Sheet 1 of 2) | 8-11 |
| 8-7. | Bus I/O Assembly A5 (59309-60005), Schematic Diagram (Sheet 1 of 2) .. | 8-15 |

SAFETY CONSIDERATIONS

GENERAL

This is a Safety Class I instrument. This instrument has been designed and tested according to IEC Publication 348, "Safety Requirements for Electronic Measuring Apparatus".

OPERATION

BEFORE APPLYING POWER verify that the power transformer primary is matched to the available line voltage and the correct fuse is installed (see Section II, Paragraph 2-6). Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuseholders must be avoided.

SERVICE

Although this instrument has been designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to ensure safe operation and to retain the instrument in safe condition. Service and adjustments should be performed only by qualified service personnel.

Any adjustment, maintenance, and repair of the opened instrument under voltage should be avoided as much as possible and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.

Whenever it is likely that the protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

WARNING

IF THIS INSTRUMENT IS TO BE ENERGIZED VIA AN AUTOTRANSFORMER (FOR VOLTAGE REDUCTION) MAKE SURE THE COMMON TERMINAL IS CONNECTED TO THE EARTHED POLE OF THE POWER SOURCE.

WARNING

BEFORE SWITCHING ON THE INSTRUMENT, THE PROTECTIVE EARTH TERMINALS OF THE INSTRUMENT MUST BE CONNECTED TO THE PROTECTIVE CONDUCTOR OF THE (MAINS) POWER CORD. THE MAINS PLUG SHALL ONLY BE INSERTED IN A SOCKET OUTLET PROVIDED WITH A PROTECTIVE EARTH CONTACT. THE PROTECTIVE ACTION MUST NOT BE NEGATED BY THE USE OF AN EXTENSION CORD (POWER CABLE) WITHOUT A PROTECTIVE CONDUCTOR (GROUNDING).

WARNING

THE SERVICE INFORMATION FOUND IN THIS MANUAL IS OFTEN USED WITH POWER SUPPLIED AND PROTECTIVE COVERS REMOVED FROM THE INSTRUMENT. ENERGY AVAILABLE AT MANY POINTS MAY, IF CONTACTED, RESULT IN PERSONAL INJURY.

CAUTION

BEFORE SWITCHING ON THIS INSTRUMENT:

1. Make sure the instrument is set to the voltage of the power source.
2. Ensure that all devices connected to this instrument are connected to the protective (earth) ground.
3. Ensure that the line power (mains) plug is connected to a three-conductor line power outlet that has a protective (earth) ground. (Grounding one conductor of a two-conductor outlet is not sufficient.)
4. Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuseholders must be avoided.

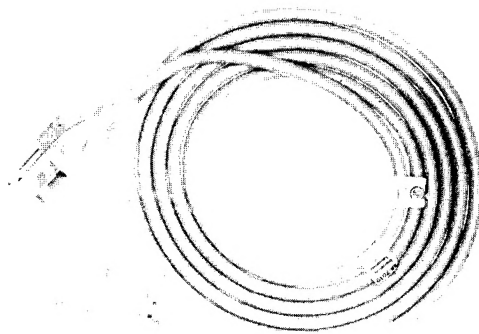
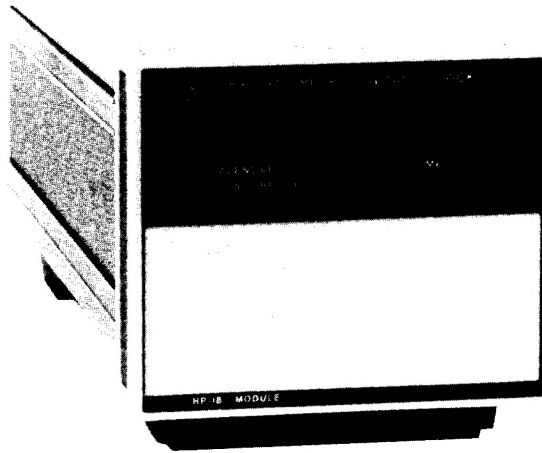


Figure 1-1. Model 59309A and Equipment Supplied

SECTION I

GENERAL INFORMATION

1-1. SCOPE OF MANUAL

1-2. This is an operating and service manual containing information about the Hewlett-Packard 59309A HP-IB Digital Clock. This manual is divided into sections as described in the following paragraphs.

1-3. Section I, General Information. This section describes the scope of the manual, the Model 59309A HP-IB Digital Clock, its applications, specifications, identification, options, equipment supplied with the instrument, accessories available, and safety considerations.

1-4. Section II, Installation. This section gives information for unpacking, inspection, preparation for use, storage, and power requirements.

1-5. Section III, Operation and Programming describes operating characteristics, controls, indicators, and connectors. It also describes stand-alone and remote operations of the 59309A, Hewlett-Packard Interface Bus (HP-IB). Programming setup procedures, programming, and programming examples are provided.

1-6. Section IV, Theory of Operation. This section describes, at a block diagram level, how the 59309A functions electronically.

1-7. Section V, Maintenance and Troubleshooting. This section describes how to keep the 59309A operating properly, and how to locate and repair the cause of malfunctions.

1-8. Section VI, Replaceable Parts. This section lists the replaceable parts along with Hewlett-Packard part numbers and/or other manufacturers part numbers and manufacturers code numbers. An explanation of the Hewlett-Packard part numbering system is furnished, as is a manufacturers code-to-name list for all applicable codes.

1-9. Section VII, Manual Changes. This section contains information needed to adapt this manual to older and/or newer instruments than those with serial prefixes shown on the title page.

1-10. Section VIII, Schematic Diagrams. This section contains schematic diagrams, component locator illustrations and individual assembly theory-of-operation.

1-11. DESCRIPTION

1-12. The 59309A provides a front-panel display of the date and time on a 24-hour basis. When used in a system, the 59309A is fully programmable and outputs the date and time onto the HP-IB for printout or other systems use. The display is a row of digits indicating:

| | Month | Day of Month | Hour | Minute | Second |
|--------------|-------|--------------|------|--------|--------|
| | MM | DD | HH | MM | SS |
| For example: | 01 | 25 | 09 | 54 | 26 |

1-13. The 59309A output to the bus is formatted in the same sequence as the display and is followed by CR (carriage return), LF (linefeed).

1-14. The 59309A can be set or updated by switches located under the hinged lower portion of the front panel, or by remote programming on the interface bus. During programming of the new setting, the clock continues to keep time to maintain synchronization.

1-15. The 59309A contains a 1 MHz crystal as a time base (see specifications in *Table 1-1*) and has provisions for connecting an external frequency standard of 1, 5, or 10 MHz.

1-16. The 59309A contains provisions for two different types of standby power supplies. A standard 9-volt dry cell battery (not supplied) can be plugged onto the A2 board to supply standby power in case of momentary power line failure. The internal battery will supply power for approximately one day of operation (display cannot be illuminated).

1-17. For longer periods of standby operation, an 8- to 10-volt dc power supply may be connected via the STANDBY POWER INPUT connector on the rear panel. An accessory available for this purpose is the K10-59992 Standby Power Supply, packaged in a module identical in size to the 59309A. With the external power supply connected the display can be illuminated by pushing the PUSH TO READ button on the front panel.

1-18. APPLICATIONS

1-19. The 59309A can be used as a stand-alone digital clock or as a system time-of-day source. The operation of the 59309A can be controlled locally by front-panel controls or remotely via the HP-IB. Examples of specific applications are:

- a. Stand-alone operation, with internal or external dc power supply, to provide a digital clock immune to power line noise or failure.
- b. A data source for the HP-IB to provide calendar and time-of-day data for use by a system. For example, the 59309A can be used to start and stop measurements by having the controller run in a software loop looking for correct time or it can be used to supply information to data logging devices to record time of events.
- c. A master clock to control remote readout devices such as the HP 59304A Numeric Display.
- d. Used in conjunction with the HP 59308A Timing Generator for interval timing and pacing for precise execution of functions. Use of the 59308A provides the capability to have a system automatically schedule a sequence of measurements on a time-of-day basis.
- e. Data logging complete with time information. The time at which data points are taken, or a printout made, is a vital part of a data record. With the 59309A in a System, time and data can be recorded simultaneously.

1-20. SPECIFICATIONS

1-21. Specifications for the HP 59309A are given in Table 1-1.

Table 1-1. Specifications

POWER REQUIREMENTS:

Line Voltage: 115 Vac or 230 Vac $\pm 10\%$

Line Frequency: 48 to 440 Hz

Power Consumption: 20 VA max.

Load on Bus: 3.3 mA per line

Standby Power: Internal 9V dry cell battery (not supplied) can maintain time for about a day (display off). The K10-59992A Standby Power Supply can maintain time for up to a year (available as an accessory).

ENVIRONMENTAL: Operating Temperature: 0° to 50°C. Relative humidity to 95% at 40°C.

ACCURACY: Internal Time Base: Provides overall accuracy greater than one minute per month.

External Time Base: External frequency standard of 1, 5, or 10 MHz (1 Vrms into 1K Ω) can be applied to control the accuracy. (50 ohm termination required at EXT FREQ STD input connector when a 50 ohm source is used.)

FORMAT SELECTION: Output Format: Selectable by internal mini-switches. Selects colons or commas as delimiters, or deletes delimiters. Selects calendar with time-of-day or deletes calendar.

DIMENSIONS: Height: 101,6 mm (4 inches) including cabinet feet.

Width: 105,9 mm (4.17 inches)

Depth: 276,9 mm (10.9 inches)

WEIGHT: Net weight: 1,23 kg (2 lb. 11½ oz)

Shipping Weight: 1,58 kg (3 lb. 8 oz)

1-22. INSTRUMENT IDENTIFICATION

1-23. Each Hewlett-Packard instrument has a 10-character serial number (e.g., 0000A00000). The 4-digit serial prefix identifies a group of identical instruments, and the 5-digit suffix is a serial number unique to each instrument. If the serial prefix on your instrument is not on the title page of this manual, your instrument is different from this manual. If the serial prefix on your instrument is lower, the differences are covered in Section VII; if the serial prefix is higher, the differences are covered in a "Manual Change Sheet" included with this manual. If the change sheet is missing, request one from the nearest Hewlett-Packard Sales and Service Office listed at the back of this manual.

1-24. OPTIONS

1-25. No options are available. Some early versions of the 59309A were available as Option 001. This option provided a Julian calendar display and an output formatted in day-of-year digits, 001 to 365 or 366 days. See Section VII for details.

1-26. EQUIPMENT SUPPLIED AND ACCESSORIES AVAILABLE

1-27. *Table 1-2* lists the equipment supplied with the HP 59309A and *Table 1-3* lists accessories available.

Table 1-2. Equipment Supplied

| Description | HP Part Number |
|---|----------------|
| Detachable Power Cord 229 cm 7½ ft. long | 8120-1378 |

Table 1-3. Accessories Available

| Description | HP Part Number |
|--|----------------|
| Circuit Board Extender, 15-pin (two required) | 5060-0049 |
| Standby Power Supply | K10-59992A |
| HP Interface Bus Interconnect Cables | 10631A, B,C |

1-28. MANUAL MICROFICHE

1-29. On the title page of this manual, below the manual part number, is a "Microfiche" part number. This number may be used to order 4x6-inch microfilm transparencies of the manual. The microfiche package also includes the latest Manual Changes supplement as well as pertinent Service Notes.

SECTION II

INSTALLATION

2-1. INTRODUCTION

2-2. This section contains information for unpacking, inspection, repacking, storage, and installation.

2-3. UNPACKING AND INSPECTION

2-4. If the shipping carton is damaged, inspect the instrument for damage. If the instrument is damaged or fails to meet electrical specifications, notify the carrier and the nearest Hewlett-Packard Sales and Service Office immediately (offices are listed at the back of this manual). Retain the shipping carton and padding material for the carrier's inspection. The Sales and Service office will arrange for the repair or replacement of your instrument without waiting for the claim against the carrier to be settled.

2-5. PREPARATION FOR USE

CAUTION

Before connecting this instrument to an ac power line, be sure that the AC Input Voltage Selector switch is set to the proper position as shown in Figure 3-2.


2-6. Power Requirements and Line Voltage

2-7. This instrument operates on single-phase 115 or 230 volts, 48 to 440 Hz only. The DC standby power capability keeps the clock running but does not provide access to or from the HP-IB bus. Before applying power, the slide switch on the rear panel must be set to the correct position (115 or 230) and the correct fuse (as labeled on the rear panel) must be installed. Power requirements are 20 VA maximum. For a description of standby power supply requirements, refer to paragraph 1-16.


WARNING

TO PROTECT OPERATING AND SERVICING PERSONNEL, THIS INSTRUMENT IS EQUIPPED WITH A THREE-PIN POWER RECEPTACLE. THE CENTER PIN OF THE RECEPTACLE CONNECTS THE INSTRUMENT CHASSIS AND PANELS TO EARTH GROUND WHEN USED WITH A PROPERLY WIRED THREE CONDUCTOR OUTLET AND POWER CABLE. IMPROPERLY GROUNDED EQUIPMENT CAN RESULT IN HAZARDOUS POTENTIALS BETWEEN EQUIPMENT.


2-8. To accommodate the different power receptacles used throughout the world, this instrument is supplied with one of the power cables shown in Figure 2-1. The cable supplied for use in the United States meets the specifications established by the International Electrotechnical Commission (IEC). The male connector of this cable is a NEMA type and the female connector is C.E.E. type.

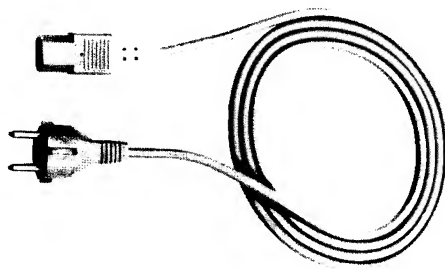


POWER CABLE HP NO. 8120-1689
(Germany, France, Sweden, Netherlands,
Yugoslavia, Belgium, Norway, Finland)

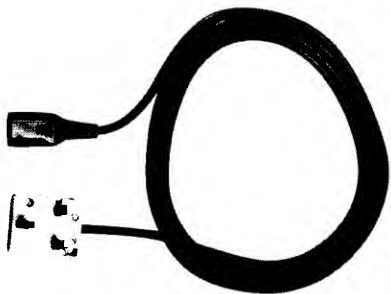

POWER CABLE HP NO. 8120-1351
Great Britain

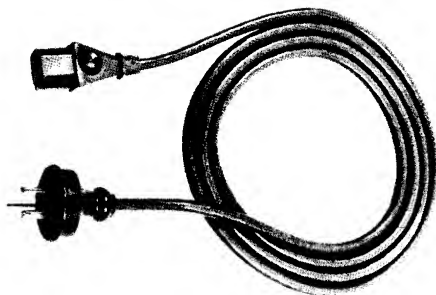

POWER CABLE HP NO. 8120-1369
Australia, New Zealand

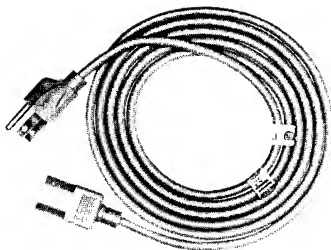

POWER CABLE HP NO. 8120-1378
U.S.A., Canada

Figure 2-1. Power Cables

2-9. Connect the power cable to a power source that has a grounded third conductor. If the line power receptacle is a two-pin type instead of a three-pin receptacle, use a two-to-three pin type adaptor (HP Part No. 1251-0048 for USA applications) and connect the green lead on the adaptor to earth ground. See warning in paragraph 2-7.

2-10. STANDBY POWER

2-11. Standby Power Input

2-12. Extended periods of standby operations are possible by using the standby power input feature. Input DC power must be 8-10 volt at 2 mA from any external DC source. Connect the external DC source to rear-panel STANDBY POWER connector then disconnect the AC power input.

2-13. The HP 59309A clock circuits keep operating when on standby DC power, but the display is off and may be lighted by the front-panel PUSH TO READ Switch. Data transfer to or from the HP-IB is disabled when standby power is used.

2-14. 9-Volt Battery Installation

CAUTION

The 9-Volt dc battery is not a user serviceable component, hazardous live parts may be exposed with covers removed, refer servicing or installation to qualified service personnel.

2-15. To keep the clock circuits operating when ac power is removed for periods of less than 1 day, a 9-volt battery may be used.

2-16. The number of hours the 9-volt battery will supply power depends on its condition when installed into the 59309A.

2-17. To install the 9-volt battery, keep ac power connected to the instrument and remove the instrument top cover.

CAUTION

Use caution near the ac power connector when removing the shorting pin or install the battery.

2-18. Locate the battery connector at the right-rear of A2 Motherboard assembly and carefully remove the shorting pin. Install the 9-volt battery then remove ac power from the instrument. Reinstall the top cover. To remove the 9-volt battery, reapply ac power, remove the 9-volt battery and reinstall the shorting pin.

2-19. When the 59309A is operating from the 9-volt battery, only the clock circuits are working. The display is automatically turned off and the PUSH TO READ switch is disabled. Data transfer via the HP-IB is also disabled.

2-20. OPERATING ENVIRONMENT

2-21. Maximum and minimum allowable operating temperatures are listed in *Table 1-1*. If these limits are exceeded at the installation site, auxiliary heating or cooling should be used to keep the environment within limits.

2-22. PACKAGING FOR RESHIPMENT

2-23. Original Packaging

2-24. The same containers and materials used in factory packaging can be obtained through the Hewlett-Packard Sales and Service Offices listed at the rear of this manual.

2-25. If the instrument is being returned to Hewlett-Packard for service, attach a tag indicating the type of service required, your return address, HP model number, and full serial number. Mark the container FRAGILE to assure careful handling.

2-26. In any correspondence refer to the instrument by HP model number and full serial number.

2-27. Other Packaging Methods

2-28. If it becomes necessary to reship an instrument, good commercial packing should be used. Contract packaging companies in many cities can provide dependable custom packaging on short notice. The following general instructions should be followed when repackaging with commercially available materials.


- a. If shipping to a Hewlett-Packard Service Office or Center, attach a tag indicating the type of service required, your return address, HP model number, and full serial number.
- b. Wrap the instrument in heavy paper or plastic.
- c. Use a strong shipping container. A double-wall carton made of 350 pound test material is adequate.
- d. Use enough shock-absorbing material (3- to 4-inch layer) around all sides of the instrument to provide a firm cushion and prevent movement inside the container. Protect the control panel with cardboard.
- e. Seal the shipping container securely.
- f. Mark the shipping container FRAGILE to assure careful handling.

2-29. STORAGE

2-30. If the instrument is to be stored for an extended period of time, it should be enclosed in a clean, sealed container.

2-31. INTERCONNECTING CABLES

2-32. The 59309A includes a 10631A cable (3 feet) for interconnection to the HP-IB. This cable has one overall shield to reduce susceptibility to external electrical noise. The cable uses a mixture of individual wires and twisted pairs to minimize crosstalk. Cable ends are identical and terminated into two, 24-pin piggy-back connectors: one male and one female. Pin connections of these connectors are shown in *Figure 2-2*.

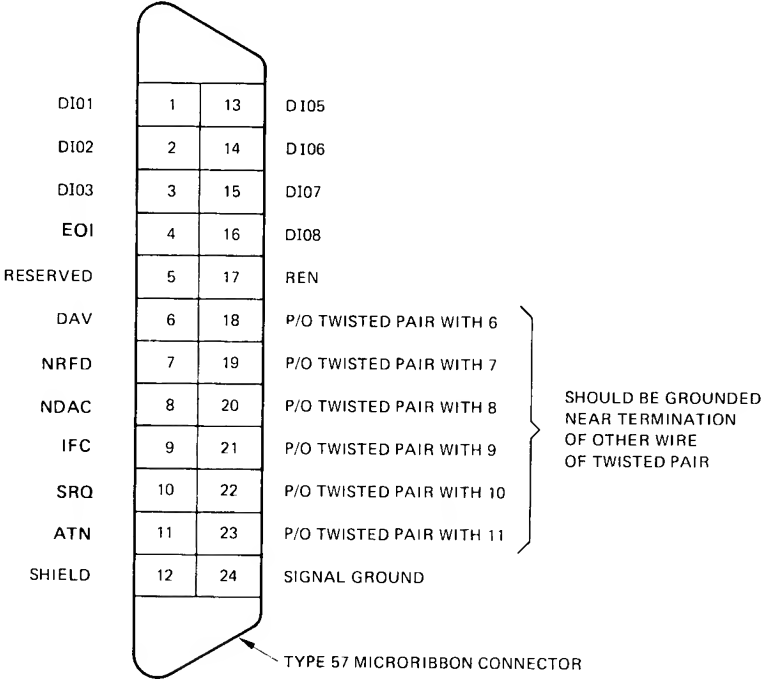

NOTE 1: Pins 18 through 23 should be grounded near the termination of the other wire of its twisted pair.

Figure 2-2. Pin Connections of the 10631A, B, C Cables

SECTION III

OPERATION AND PROGRAMMING

3-1. INTRODUCTION

3-2. This section contains operating information including a description of controls, indicators and connectors, types of operation, programming, and programming examples.

3-3. CONTROLS, INDICATORS, AND CONNECTORS

3-4. *Figure 3-1* identifies and describes front-panel controls and indicators. *Figure 3-2* identifies and describes rear-panel connectors and controls.

3-5. OPERATION

CAUTION

Prior to operating the 59309A, set the voltage selector switch on the rear panel to correspond with the line voltage to be used (115V or 230V). Install the correct line fuse (0.5 amp for 115V source or 0.25 amp for 230V source) and connect the 59309A to the power source. The front-panel display should illuminate.

3-6. The 59309A can operate as a stand-alone clock or as a system clock. When operating stand-alone, the clock can be started, stopped, or set by the controls described in *Figure 3-1*. When operating in a system, the clock can be started, stopped, or set by the front panel controls or by ASCII coded characters sent by a controller on the HP-IB. For details and definitions of the HP-IB, refer to "Condensed Description of the Hewlett-Packard Interface Bus", HP Part No. 59401-90030.

3-7. Time Base

3-8. A crystal controlled 1 MHz oscillator is the time base and provides an overall accuracy of approximately 1-minute-per-month. If greater accuracy is desired, an external frequency standard of 1, 5, or 10 MHz (1 Vrms into 1 k Ω) can be connected via a rear-panel connector. To use the external frequency standard, the front-panel switch (INT/EXT) on the 59309A is set to EXT and the internal 1 MHz - 5 MHz - 10 MHz switch on the A2 board is set to the frequency of the external frequency standard.


3-9. Clock Functions

3-10. The 59309A provides a 24-hour clock display on the front panel and also provides the time information to the HP-IB. The front-panel display formats:

| | | | | |
|-------|-----|------|--------|--------|
| Month | Day | Hour | Minute | Second |
| 01 | 01 | 00 | 00 | 00 |

The output format to the bus (when addressed to talk and with packed format) is:

| | | | | | | | | |
|-----------------------------------|---------------------------|-------|--------------|------|--------|---------|---------------------------|---------------------------|
| (? or $\textcircled{\text{SP}}$) | $\textcircled{\text{SP}}$ | 12 | 28 | 11 | 23 | 14 | $\textcircled{\text{CR}}$ | $\textcircled{\text{LF}}$ |
| Status | Space | Month | Day of Month | Hour | Minute | Seconds | Carriage Return | Linefeed |

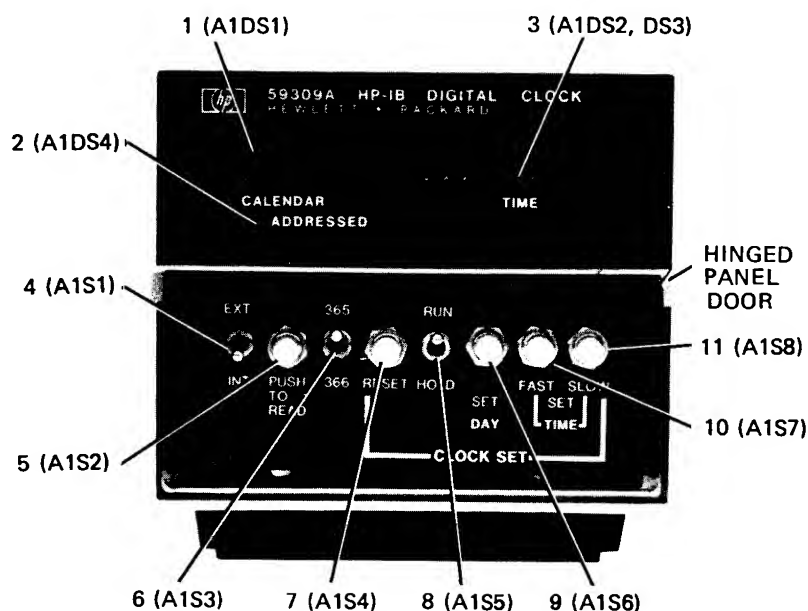


NOTE

To gain access to the front panel controls, the hinged lower portion of the front panel must be lifted. Insert the tip of a pencil or pen in the hole in the lower right corner and lift to a horizontal position.

1. CALENDAR indicator: When illuminated, indicates the month and the day of the month.
2. ADDRESSED indicator: When illuminated, indicates the 59309A is addressed to talk or listen.
3. TIME indicator. When illuminated, indicates the hour, minute, and second.
4. EXT/INT switch; When set to INT, an internal crystal-controlled time base (1.0 MHz) provides accuracy of approximately 1 minute per month. When set to EXT, an external frequency standard is accepted at a rear-panel connector.
5. PUSH TO READ switch (for use with external standby power): When pushed, display illuminates. Standby time is significantly shortened by this lighting. This switch is inoperative (display cannot be illuminated) when 59309A is powered by internal dc battery.
6. 365/366 switch: Set to 365 for common year, set to 366 for leap year.
7. RESET switch: When pushed, resets display to 01 01 00 00 00 and starts the clock.
8. RUN/HOLD switch: When set to RUN position, clock advances at a 1-second rate. When set to HOLD position, clock stops advancing.
9. SET DAY switch: When pushed momentarily, the day display is updated one count. When pushed and held, the display updates continuously.
10. SET TIME FAST switch: When pushed, the minutes and seconds displays are updated rapidly.
11. SET TIME SLOW switch: When pushed, the minutes and seconds displays are updated slowly to permit arriving at desired time display.

Figure 3-1. Digital Clock Front Panel, Hinged Portion Lifted

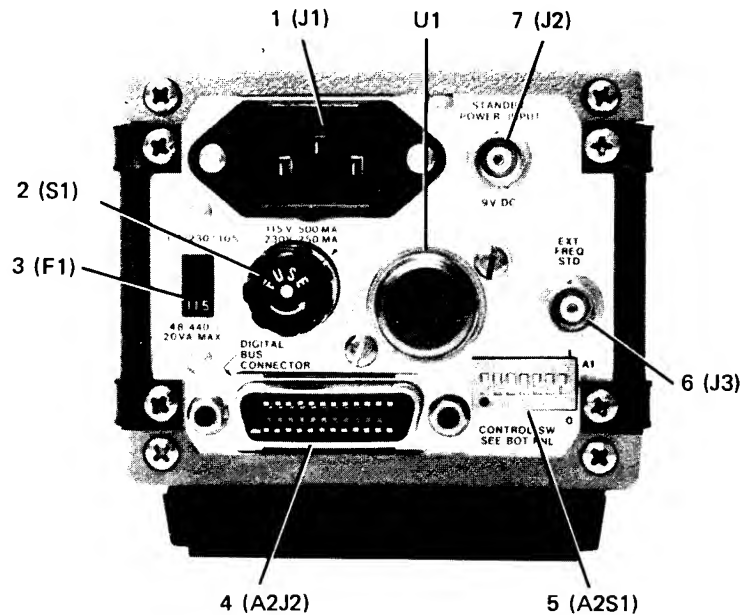

1. AC Input Connector: AC power receptacle. IEC type with offset pin connected to the rear panel. Accepts 115 or 230 volts $\pm 10\%$, 48 to 440 Hz.
2. AC Input Voltage Selector Switch: Selects 115 volt ac input operation or 230 volt ac input operation.
3. FUSE: Requires 500 mA fuse for 115 volt or 250 mA fuse for 230 volt operation.
4. DIGITAL BUS CONNECTOR: 24-pin connector used to convey data and programming information to and from the interface bus cable.
5. CONTROL Switch Assembly: The switch labeled A1 is switch 1 and the switches are numbered in consecutive order from right to left. Switches A1 through A5 establish the talk and listen addresses. Switches A6 and A7 select the mode of operation; set to the "0" state, the clock operates in a controllerless environment and outputs on the bus at a rate of 40 readings-per-second, set to the "1" state, the clock is addressable.
6. EXT FREQ STD connector: Provides a connection for an external frequency standard of 1, 5, or 10 MHz (1 Vrms into 1 k Ω). A 50-ohm termination is required at this connector when a 50-ohm source is used. A selector switch for selecting a 1, 5, or 10 MHz input is contained on the A2 board inside the 59309A.
7. STANDBY POWER INPUT Connector: Provides a connection for a K10-59992A Standby Power Supply (or any reserve power supply capable of providing 8 to 10 volts dc, 2 mA at 8V (display off)).

Figure 3-2. Digital Clock Rear Panel

3-11. Clock Error Indicators

3-12. If the operation of the internal oscillator is disrupted, such as when a power failure occurs (without standby power) an indication of error is present on the front-panel display and on the interface bus when power returns. On the display, all decimal points illuminate to indicate error. On the interface bus, the status word changes from an ASCII **SP** to an ASCII **?** to indicate error. These error indications remain until the 59309A is reset via either the front panel or the HP-IB. An error indication may also occur when an external frequency standard is initially connected or switched into the circuit.

3-13. LONG TERM STANDBY POWER

3-14. To provide standby power for extended periods of time, the 59309A STANDBY POWER rear-panel connector accepts 8 to 10 volts from an external dc power supply. An HP accessory available for this purpose is the K10-59992 Standby Power Supply. The K10-59992 contains D-size batteries packaged in a module identical in size with the 59309A. With a full set of fresh batteries, the K10-59992 can supply power to the 59309A and maintain accurate time for approximately 1 year (or for the shelf life of the batteries). The display can be illuminated by pressing the front panel pushbutton PUSH TO READ. However, the life of the standby power supply is significantly shortened by the additional power required to illuminate the display. Data transfer to or from the HP-IB lines is disabled when on standby power. Also, see paragraph 2-11.

3-15. SHORT-TERM STANDBY

3-16. The 59309A accepts a standard 9-volt dry cell battery which is plugged onto the A2 board. This battery allows the clock to continue operating during power line variations or failures for short periods of time (up to about 1 day). The front-panel display and the digital bus output are disabled when the internal battery is used for operating power. Also, see paragraph 2-14.

3-17. Stand-Alone Operating Procedures (Observe Caution of Paragraph 2-5)

3-18. When operating in a stand-alone environment, the 59309A is controlled by the front panel controls. Lift the hinged lower portion of the front panel and set the controls as follows:

- a. Set the EXT/INT switch to the INT position if the internal time base is to be used. Set to EXT if an external frequency standard is connected to the rear-panel EXT FREQ STD connector. The EXT FREQ STD switch on the A2 board must be set to the 1 MHz, 5 MHz, or 10 MHz position to correspond with the output frequency of the external frequency standard used.
- b. Set the 365/366 switch to 365 for a common year; to 366 for a leap year.
- c. Set the RUN/HOLD switch to RUN, if synchronization with a reference clock is not desired.
- d. Push and release the RESET button to clear the display of decimal points (error indicators) and reset the display to 01 01 00 00. The clock will start.
- e. Push and hold the SET DAY button until the CALENDAR display indicates the month and day desired.
- f. Push and hold the SET TIME FAST button to update the TIME display rapidly. Before the correct hour is reached, release the pushbutton and push the SET TIME SLOW button to arrive at the desired hours, minutes, and seconds display.

3-19. SYSTEM OPERATION

3-20. With the 59309A installed in a system, the clock can be controlled from the 59309A front panel switches or by ASCII-coded characters from an HP-IB controller. For details and definitions of the HP-IB, refer to "Condensed Description of the Hewlett-Packard Interface Bus", HP Part No. 59401-90030. Three system configurations are possible:

- a. A system with no controller. Data transfer is direct between a device manually set to "talk only" and one or more devices manually set to "listen only".
- b. A system with a single controller. Data transfer can be:
 1. Direct transfer between talkers and listeners.
 2. Transfer from a device to a controller.
 3. Transfer from a controller to a device.
- c. A system with multiple controllers. Data transfer is the same as in item b except one controller must be designated "system controller".

3-21. Programming

3-22. A summary of the following programming information is provided on a label located on the 59309A bottom cover.

3-23. Listen Function

3-24. The start, stop, and clock set functions of the 59309A can be controlled by the interface bus when the 59309A is addressed to listen. An address is set on the rear-panel control switch assembly as shown in *Table 3-1*. When the ASCII listen address on the bus corresponds to the switch setting, as shown in *Table 3-1*, the ADDRESSED indicator illuminates. The 59309A will then respond to the programming codes listed in *Table 3-2*.

3-25. Talk Function

3-26. When the 59309A is addressed to talk, the ADDRESSED indicator illuminates and the time value is output on the bus in the format shown below. The talk address must correspond to the rear panel control switch setting as shown in *Table 3-1*. When the front-panel display is the following:

| | | | | |
|-------|-----|------|--------|--------|
| Month | Day | Hour | Minute | Second |
| 12 | 28 | 11 | 23 | 14 |


The output to the bus (when addressed to talk and with packed format) is in the following format:

| | | | | | | | | |
|--------------|-------|-------|--------------|------|--------|---------|-----------------|----------|
| (? or (SP)) | (SP) | 12 | 28 | 11 | 23 | 14 | (CR) | (LF) |
| Status | Space | Month | Day of Month | Hour | Minute | Seconds | Carriage Return | Linefeed |

3-27. Talk Only Mode

3-28. When the two mode switches on the control switch assembly shown in *Table 3-1* are set to the "Ø", the 59309A is in the Talk Only mode. In this mode, the 59309A outputs data to the bus continuously at a rate of 40 readings per second without being addressed (operates in a controllerless environment). The 59309A cannot be programmed when operating in this mode.

Table 3-1. Addressing

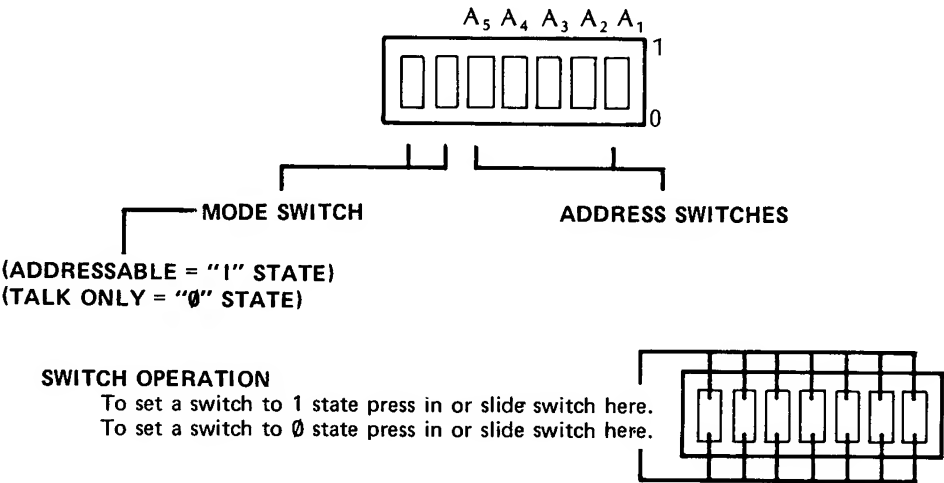

ASCII ADDRESS CODES

| A ₅ | A ₄ | A ₃ | A ₂ | A ₁ | ASCII LISTEN ADDRESS | ASCII TALK ADDRESS |
|----------------|----------------|----------------|----------------|----------------|----------------------------|--------------------------|
| 0 | 0 | 0 | 0 | 0 | SP | @ |
| 0 | 0 | 0 | 0 | 1 | ! | A |
| 0 | 0 | 0 | 1 | 0 | " | B |
| 0 | 0 | 0 | 1 | 1 | # | C |
| 0 | 0 | 1 | 0 | 0 | \$ | D |
| 0 | 0 | 1 | 0 | 1 | % | E |
| 0 | 0 | 1 | 1 | 0 | & | F |
| 0 | 0 | 1 | 1 | 1 | ' | G |
| 0 | 1 | 0 | 0 | 0 | (| H |
| 0 | 1 | 0 | 0 | 1 |) | I |
| 0 | 1 | 0 | 1 | 0 | * | J |
| 0 | 1 | 0 | 1 | 1 | + | K |
| 0 | 1 | 1 | 0 | 0 | , | L |
| 0 | 1 | 1 | 0 | 1 | - | M |
| 0 | 1 | 1 | 1 | 0 | . | N |
| 0 | 1 | 1 | 1 | 1 | / | O |
| 1 | 0 | 0 | 0 | 0 | 0 | P |
| 1 | 0 | 0 | 0 | 1 | 1 | Q |
| 1 | 0 | 0 | 1 | 0 | 2 | R |
| 1 | 0 | 0 | 1 | 1 | 3 | S |
| 1 | 0 | 1 | 0 | 0 | 4 | T |
| 1 | 0 | 1 | 0 | 1 | 5 | U |
| 1 | 0 | 1 | 1 | 0 | 6 | V |
| 1 | 0 | 1 | 1 | 1 | 7 | W |
| 1 | 1 | 0 | 0 | 0 | 8 | X |
| 1 | 1 | 0 | 0 | 1 | 9 | Y |
| 1 | 1 | 0 | 1 | 0 | : | Z |
| 1 | 1 | 0 | 1 | 1 | ; | [|
| 1 | 1 | 1 | 0 | 0 | < | \ |
| 1 | 1 | 1 | 0 | 1 | = |] |
| 1 | 1 | 1 | 1 | 0 | > |) |

3-29. Addressable Mode

3-30. When the two mode switches on the control switch assembly shown in *Table 3-1* are set to the "1" state, the 59309A is in the Addressable mode. In this mode the 59309A can be addressed to listen or to talk. The listen function is described in paragraph 3-23 and the talk function is described in paragraph 3-25.

3-31. Bus Output Format Selection

3-32. The 59309A contains a switch assembly (*Figure 3-3*) near the top edge of board A5 to provide selection of various output formats to suit different applications. For example, the printout most legible to an operator uses colons to separate the units. However, colon delimiters are generally not acceptable to computers and controllers. Depending on the programming task, the use of commas or packed format (no delimiters), for numerical computations may be most convenient. The settings of the switch assembly, shown in *Figure 3-3*, allow selection of delimiters or not; colons or commas; calendar and time-of-day; or just time. The following output formats may be selected:

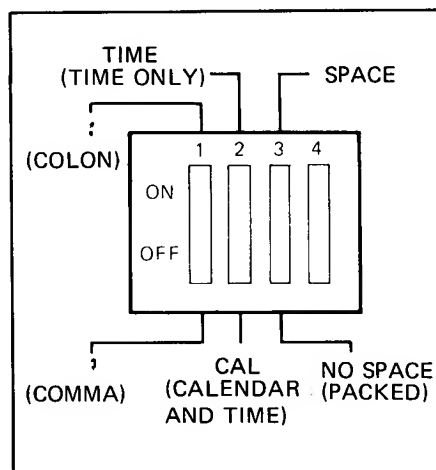


Figure 3-3. Format Switch Settings

a. SPACE (not packed)

1. TIME (Time Only)

: (Colon) (Status)* (SP) 1 1 : 2 3 : 1 4 CR (LF)
, (Comma) (Status)* (SP) 1 1 , 2 3 , 1 4 CR (LF)

2. CAL (Calendar and Time)

: (Colon) (Status)* (SP) 1 2 : 2 8 : 1 1 : 2 3 : 1 4 CR (LF)
, (Comma) (Status)* (SP) 1 2 , 2 8 , 1 1 , 2 3 , 1 4 CR (LF)

b. NO SPACE (packed)

1. TIME (Time Only)

: (Colon) (Status)* (SP) 1 1 2 3 1 4 CR (LF)
, (Comma) (Status)* (SP) 1 1 2 3 1 4 CR (LF)

2. CAL (Calendar and Time)

: (Colon) (Status)* (SP) 1 2 2 8 1 1 2 3 1 4 CR (LF)
, (Comma) (Status)* (SP) 1 2 2 8 1 1 2 3 1 4 CR (LF)

*The ASCII character in this position of the data output string will be either ? or (SP) depending on the error status (see paragraph 3-11).

3-33. System Operating Procedures

NOTE

When the 59309A is connected in a system on the interface bus, the front-panel controls are operative.

- a. At initial turn on, set the clock by means of the front-panel controls (refer to paragraph 3-17).
- b. Set the mode switch (*Table 3-1*) to the Addressable mode or to the Talk Only mode to select one of the following types of operations:
 1. Addressable mode. In this mode, the 59309A will accept characters to update the time display when it is addressed to listen. The 59309A will output on the bus when it is addressed to talk. This mode is used in systems where a controller capable of addressing instruments is used.
 2. Talk Only mode. In this mode, the 59309A operates in a controllerless environment and outputs continuously on the bus at a rate of 40 readings per second.
- c. Select a listen address from *Table 3-1* (if the mode switch was set to Addressable in the preceding step) and set the address switches on the rear panel of the 59309A. In general, any address switch setting is allowable except 1 1 1 1 1 or an address already assigned to another instrument in the system. These switches need not be set if the mode switch is in the Talk Only mode.
- d. To place the 59309A in the listen mode, send the ASCII listen address that corresponds with the switch settings set in the preceding step. The ADDRESSED indicator on the front panel should illuminate.
- e. The 59309A is now ready to accept programming codes to control the start, stop, and update functions of the clock. Refer to *Table 3-2* for programming codes and their functions and paragraph 3-34 for an example program.
- f. To program the 59309A to output on the bus, proceed as follows:

NOTE

Refer to paragraph 3-31 for information on selection of the output format.

1. Send the ASCII talk address (*Table 3-1*) that corresponds with the setting of the address switches on the rear panel of the 59309A. This action results in outputting the contents of the clock's output register to the bus.
2. In some situations, time displayed on the 59309A may be retained (stored), without immediate output, for later use. To achieve this, ASCII Code C is used. This code commands the 59309A to store the time when the command is received, but not to output it. Any additional C commands will not store time until the 59309A is addressed to talk. At a later operator-determined time, the time-of-occurrence at which the previous C command was received by the 59309A can be outputted by addressing the clock to talk. Sending the Group Execute Trigger (GET) command (ASCII Code BS) achieves the same results as the C command. However, this command also instructs any other addressed devices (if used) on the bus to respond according to their designed function.

Table 3-2. Programming Codes

| Function | ASCII Character | Octal Code | Binary DIO Lines | | | | | | |
|--|-----------------|------------|------------------|---|---|---|---|---|---|
| | | | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
| Resets the clock to: 01:01:00:00:00 and clears output register | R | 122 | 1 | 0 | 1 | 0 | 0 | 1 | 0 |
| Stops the clock | P | 120 | 1 | 0 | 1 | 0 | 0 | 0 | 0 |
| Starts the clock | T | 124 | 1 | 0 | 1 | 0 | 1 | 0 | 0 |
| Updates the counting chain 1 second (for more than 1 update repeat entry desired times) | S | 123 | 1 | 0 | 1 | 0 | 0 | 1 | 1 |
| Updates the counting chain 1 minute (for more than 1 min. repeat entry desired times) | M | 115 | 1 | 0 | 0 | 1 | 1 | 0 | 1 |
| Updates the counting chain 1 hour (for more than 1 hr. repeat entry desired times) | H | 110 | 1 | 0 | 0 | 1 | 0 | 0 | 0 |
| Updates the counting chain 1 day (for more than 1 day, repeat entry desired times) | D | 104 | 1 | 0 | 0 | 0 | 1 | 0 | 0 |
| Commands the clock to store time value in the output register but does not output it. Time value is output when the 59309A is addressed to talk. | C | 103 | 1 | 0 | 0 | 0 | 0 | 1 | 1 |
| | or BS | 10 | 0 | 0 | 0 | 1 | 0 | 0 | 0 |
| *Unlisten | ? | 077 | 0 | 1 | 1 | 1 | 1 | 1 | 1 |
| *Untalk | — | 137 | 1 | 0 | 1 | 1 | 1 | 1 | 1 |
| *Universal command (effective when ATN is low) | | | | | | | | | |

3-34. PROGRAM EXAMPLE

3-35. The following paragraphs describe programming of a Calculator (used as a bus controller) to control the 59309A. *Figure 3-4* is a flowchart of the example program. The 9820A and 9830A implementations of the following example program are in paragraphs 3-36 and 3-40 respectively. The functions performed are as follows:

- a. Program the 59309A to reset, then update by 2 seconds, 4 minutes, 3 hours, and 5 days.
- b. Store the time, then wait 10 seconds.
- c. Address the 59309A to output the time to the bus.
- d. Print the results of the output, wait 1 second, and repeat steps c and d.

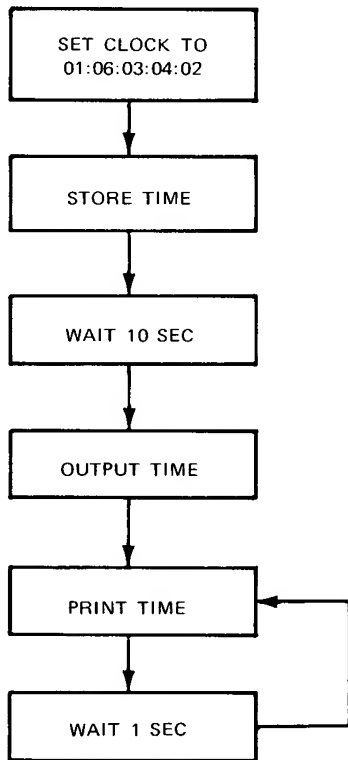


Figure 3-4. Flowchart of Example Programs

3-36. Program Example Using 9820A Calculator

NOTE

It is assumed that a system including the 9820A Calculator, the HP-IB Interface and Peripheral Control II, and the 59309A (with its address switches set to 10001) has been interconnected and prepared for operation. For detailed operating procedures, refer to Peripheral Control II operating manual, HP Part No. 09820-99024. Also refer to Hewlett-Packard Interface Bus Users Guide, 9820A, HP Part No. 59300-90001.

3-37. **LOADING THE PROGRAM:** Prior to loading the program, push the END and EXECUTE keys. This positions the program counter to zero. On 59309A, set A5 Format switch to NO SPACE and CALENDAR and TIME (see Figure 3-3). Push remaining keys to program the Calculator as shown in the following printer list:

9820A Calculator Program Printer List

| | | |
|--|----|--|
| Unaddresses all listeners on the bus (?). Addresses 9820A to talk (U) and the 59309A to listen (1). Stops clock (P), resets clock (R), updates clock by 2 seconds (SS), 4 minutes (MMMM), 3 hours (HHH), and 5 days (DDDDD). Starts clock (T). | 0: | CMD "?U1","PRSSM MMHHHDDDDDT"␣ |
| Unaddresses all listeners (?). Addresses 9820A to talk (U) and 59309A to listen (1). Stores time in the 59309A output register (C). | 1: | CMD "?U1","C"␣ |
| Instructs operator to wait 10 sec, then press PROGRAM key. | 2: | DSP "WAIT 10 SEC ONDS";DSP ;DSP ; DSP ;DSP ;DSP ; DSP "THEN RUN PR OGRAM"␣ |
| Stops 9820A until RUN PROGRAM key is pressed. | 3: | STP ␣ |
| Unaddresses all listeners (?). Addresses 9820A to listen (5) and 59309A to talk (Q). Enters "status" into A register and "Cal and Time" into B register of 9820A. | 4: | CMD "?5Q";RDB 13 →A;FMT *;RED 13, B␣ |
| Prints "Status" and "Cal and Time". | 5: | FXD 0;PRT A,B␣ |
| Enters "Cal and Time" into 9820A C register. | 6: | CMD "?5Q";FMT *; RED 13,C␣ |
| Tests to see if 1 second or more has elapsed since step 1. If not, repeats tests. | 7: | IF C-B=0;GTO 6␣ |
| Go back to step 4. | 8: | GTO 4␣ |
| Ends program. | 9: | END ␣ |

3-38. **VERIFYING THE PROGRAM.** After the program has been loaded, push the END and LIST keys. This will run a printer list of the program. Check the list to verify that the program was entered correctly.

3-39. **RUNNING THE PROGRAM.** To run the program push the END and RUN PROGRAM keys. The printout should compare with the Calculator printout shown below.

Calculator Printout (32 = space, 63 = ?)

| | | | |
|----------------|---|-----------|---|
| First complete | [| 32 | ← Status |
| Program Loop | [| 106030402 | ← Cal and Time (packed) |
| | | 32 | |
| Second Loop | [| 106030412 | |
| | | 32 | |
| Third Loop | [| 106030413 | |
| . | | 32 | |
| . | | 106030414 | |
| . | | 32 | |
| . | | 106030415 | |
| . | | 63 | ← Intentional Clock Error (see Para. 3-12) |
| . | | 106030416 | |
| . | | 63 | |
| . | | 106030417 | |
| . | | 63 | |
| . | | 106030418 | |
| . | | 63 | |
| . | | 106030419 | |
| . | | 63 | |
| etc. | | 106030420 | |

3-40. Program Example Using 9830A Calculator

NOTE

It is assumed that a system including the 9830A Calculator, the HP-IB Interface Card, the 9866A Printer, the Extended I/O ROM, and the 59309A (with its address switches set to 10001) has been interconnected and prepared for operation. For detailed operating procedures refer to 9830A Operating and Programming Manual, HP Part No. 09830-90001 and to the Extended I/O ROM Operating Manual, HP Part No. 09830-90007. Also refer to Hewlett-Packard Interface Bus Users Guide, 9830A, HP Part No. 59300-90002.

3-41. **LOADING THE PROGRAM.** Prior to loading the program, press the STOP key until STOP appears on display. If display remains blank, refer to the 9830A Operating and Programming Manual, Appendix A. On the 59309A, set A5 format switch to NO SPACE and CALENDAR AND TIME (see Figure 3-3). Press the remaining keys to program the calculator as shown in the following list:

9830A Calculator Program Printer List

| | | |
|---|-------|---------------------------------|
| Unaddresses all listeners on the bus (?). Addresses the 9830A to talk (U) and the 59309A to listen (1). Stops the clock (P), resets the clock (R), updates by 2 seconds (SS), 4 minutes (MMMM), 3 hours (HHH), and 5 days (DDDD). Starts clock (T). | → 10 | CMD " ?U1", "PRSSMMMMHHHDDDDDT" |
| Unaddresses all listeners (?). Addresses 9830A to talk (U) and the 59309A to listen (1). Stores the time in the output register of the 59309A (C). | → 20 | CMD " ?U1", "C" |
| Wait 10 seconds. | → 30 | WAIT 10000 |
| Unaddresses all listeners (?). Addresses 9830A to listen (5) and 59309A to talk (Q). | → 40 | CMD " ?5Q" |
| Enters "Status" into register A, "Cal and Time" into register B of 9830A. | → 50 | ENTER (13,60)A,B |
| Format of Entry (see 9830A Operating Manual). | → 60 | FORMAT B,F12.0 |
| 9866A prints "Status" then "Cal and Time" from 59309A. | → 70 | PRINT A;B |
| Wait 1000 milliseconds. | → 80 | WAIT 1000 |
| Go back to line 40 and repeat program. | → 90 | GOTO 40 |
| Ends program. | → 100 | END |

Model 59309A
Operation and Programming

3-42. VERIFYING THE PROGRAM. After the program has been loaded, push the LIST and EXECUTE keys. This will run a printer list of the program. Check the list to verify that the program was entered correctly.

3-43. RUNNING THE PROGRAM. To run the program push the RUN and EXECUTE keys. The printout should compare with the calculator printout shown below.

Calculator Printout (32 = Space, 63 = ?)

| Status | Cal and Time (Packed) |
|--------|-----------------------|
| 32 | 106030402 |
| 32 | 106030411 |
| 32 | 106030412 |
| 32 | 106030413 |
| 32 | 106030414 |
| 32 | 106030415 |
| 32 | 106030416 |
| 32 | 106030417 |
| ▶ 63 | 106030417 |
| 63 | 106030418 |
| 63 | 106030419 |
| 63 | 106030420 |
| 63 | 106030421 |
| 63 | 106030422 |

Intentional
Clock Error
(see Para. 3-13)

3-44. AUTOMATIC CLOCK SETTING PROGRAM EXAMPLES

3-45. The following example programs demonstrate how the 59309A clock can be set directly from the calculator keyboard. The calculator display will ask for data on months, days, hours, minutes, and seconds which is entered from the keyboard. For example, to set the 59309A to 1:15:30 p.m., November 25th, enter 11 for months, 25 for day, 13 for hours, 15 for minutes, and 30 for seconds. The 59309A is started by a single keystroke at the end of each program for synchronizing purposes.

3-46. To run the following program prepare the 59309A as follows:

Model Switches — 11 (Addressable)
Address Switches — 10000 (Ø, P)

365/366 — 365
INT/EXT — INT
RUN/HOLD — RUN

9820A Program List

| | | | |
|-----|-------------------|-----|--------------------|
| 0: | DSP "SET THE CLO | 14: | CMD "200", "P"; |
| 1: | CK": DSP : DSP ; | 15: | ENT "DAY", AF |
| 2: | DSP : DSP F | 16: | 1+XF |
| 3: | CMD "200", "PR"; | 17: | IF A=X; JMP 2F |
| 4: | ENT "MONTH", AF | 18: | CMD "200", "D"; X+ |
| 5: | JMP 13-AF | 19: | 1+X; GTO -1F |
| 6: | CMD "200", "DDDDD | 20: | 0+XF |
| 7: | DDDDDDDDDDDDDDDD | 21: | IF X=A; JMP 2F |
| 8: | DDDDDDDDDDDDDDDD | 22: | CMD "200", "H"; X+ |
| 9: | DDDDDDDDDDDDDDDD | 23: | 1+X; GTO -1F |
| 10: | CMD "200", "DDDDD | 24: | CMD "200", "P"; |
| 11: | DDDDDDDDDDDDDDDD | 25: | ENT "MINUTE", A; 0 |
| 12: | DDDDDDDDDDDDDDDD | 26: | +XF |
| 13: | CMD "200", "DDDDD | 27: | IF A=X; JMP 2F |
| 14: | DDDDDDDDDDDDDDDD | 28: | CMD "200", "M"; X+ |
| 15: | DDDDDDDDDDDDDDDD | 29: | 1+X; GTO -1F |
| 16: | CMD "200", "DDDDD | 30: | CMD "200", "P"; |
| 17: | DDDDDDDDDDDDDDDD | 31: | ENT "SECONDS", A; |
| 18: | DDDDDDDDDDDDDDDD | 32: | 0+XF |
| 19: | CMD "200", "DDDDD | 33: | IF X=A; JMP 2F |
| 20: | DDDDDDDDDDDDDDDD | 34: | CMD "200", "S"; X+ |
| 21: | DDDDDDDDDDDDDDDD | 35: | 1+X; GTO -1F |
| 22: | CMD "200", "DDDDD | 36: | DSP "RUN TO STAR |
| 23: | DDDDDDDDDDDDDDDD | 37: | T"; STP F |
| 24: | DDDDDDDDDDDDDDDD | 38: | CMD "200", "T" F |
| 25: | CMD "200", "DDDDD | 39: | END F |
| 26: | DDDDDDDDDDDDDDDD | 40: | R319 |
| 27: | DDDDDDDDDDDDDDDD | | |
| 28: | CMD "200", "DDDDD | | |
| 29: | DDDDDDDDDDDDDDDD | | |
| 30: | DDDDDDDDDDDDDDDD | | |
| 31: | CMD "200", "DDDDD | | |
| 32: | DDDDDDDDDDDDDDDD | | |
| 33: | DDDDDDDDDDDDDDDD | | |
| 34: | CMD "200", "DDDDD | | |
| 35: | DDDDDDDDDDDDDDDD | | |
| 36: | DDDDDDDDDDDDDDDD | | |

9830A Program List

NOTE

9830A will require a 11274B string variables ROM for this program.

```

70 DIM A$(20),A(1,12),B(1,20)
80 DISP "WANT INSTRUCTIONS? (YES OR NO)";
90 INPUT A$
100 IF A$="YES" THEN 650
110 FOR N=1 TO 12
120 READ A(1,N)
130 NEXT N
140 DATA 0,30,59,90,120,150,180,210,240,270,300,330
150 DISP "KEY IN DIGITS,PUSH EXECUTE"
160 WAIT 2000
170 DISP "MONTH:";
180 INPUT M
190 IF M>12 THEN 320
200 DISP "DAY:";
210 INPUT D
220 IF D>31 THEN 330
230 DISP "HOUR:";
240 INPUT H
250 IF H>23 THEN 330
260 DISP "MINUTE:";
270 INPUT M
280 IF M>59 THEN 330
290 DISP "SECOND:";
300 INPUT S
310 IF S>59 THEN 330
320 GOTO 360
330 DISP "INPUT 1=DATE DEL 2=TIME"
340 WAIT 2000
350 GOTO 350
360 D=D+A(1,D)-1
370 CMD "DATE",DPR
380 FOR I=1 TO INT(D/24)
390 CMD "2000",DDDDDDDDDDDDDDDDDDDDDD
400 NEXT I
410 FOR I=1 TO 20+(D/24)-INT(D/24)
420 CMD "000",DD
430 NEXT I
440 IF H=0 THEN 460
450 FOR I=1 TO H
460 CMD "00",HH
470 NEXT I
480 IF M=0 THEN 520
490 FOR I=1 TO M
500 CMD "00",MM
510 NEXT I
520 IF S=0 THEN 540
530 FOR I=1 TO S
540 CMD "00",SS
550 NEXT I
560 DISP "START CLOCK? (YES OR NO)";
570 INPUT B$
580 IF B$="YES" THEN 630
590 DISP "HOLDING/PRESS CONT. & EXECUTE"
600 STOP
610 GOTO 560
620 CMD "00",TT
630 CMD "2"
640 GOTO 720
650 PRINT "INSTRUCTIONS TO SET CALENDAR AND 24 HOUR CLOCK (1:00 PM = 15 HOURS)"
660 PRINT "WHEN DISPLAY ASK+ MONTH+KEY IN DIGITS (0-9)AND PRESS EXECUTE."
670 PRINT "CONTINUE+PUSHING WITH DAY, HOUR, MINUTE, SECOND,USE ONLY"
680 PRINT "TWO DIGITS PER ENTRY,ADDSER "START CLOCK" BY KEYING IN "YES"
690 PRINT "CLOCK STARTS WHEN YOU PUSH EXECUTE."
700 PRINT
710 GOTO 110
720 END

```

SECTION IV

THEORY OF OPERATION

4-1. GENERAL

4-2. Instrument theory of operation, at a block diagram level, is discussed in this section. Detailed assembly theory is included with the schematics in Section VIII.

4-3. Special integrated circuits, unique to the 59309A are also discussed in Section IV. Operation of common-usage IC's can be found in IC catalogs or text books.

4-4. OVERALL THEORY OF OPERATION

4-5. The following paragraphs describe the overall theory of operation, at a block diagram level. *Figure 4-1* is the block diagram.

4-6. 1 MHz Oscillator

4-7. Clock operation of the HP 59309A is controlled by the 1 MHz oscillator on A3 Calendar Oscillator Assembly. This oscillator is an ambient temperature, crystal-controlled time-base. The 1 MHz output is supplied to the Time Base Divider on A4 Time Assembly.

4-8. Time Base Divider

 
4-9. The A4 Time Base Divider receives the 1 MHz signal and divides it down to the one-pulse-per-second signal which is sent to the Seconds Counter. The A4 Time Base Divider also supplies four-bit digit position information to the Digit Position Encoder. In addition, the C Line signal is generated as a master clock to synchronize operation of the circuits in the A5 Bus I/O Assembly.

4-10. Seconds, Minutes, and Hours Counters

4-11. The seconds Counter divides the 1 Second signal by 60 and sends the resulting 1 Minute signal to the Minutes Counter. The Minutes Counter divides the 1 Minute signal by 60 and sends the resulting 1 Hour signal to the Hours Counter. The Hours Counter divides the 1 Hour signal by 24 and sends the 1 Day signal to the A3 Calendar Oscillator Assembly. Each counter outputs a BCD code to indicate the number of minutes, hours, seconds, etc., that have been counted. These codes are combined with the appropriate digit position bits (1 and 2 for seconds, 3 and 4 for minutes, etc.) to synchronize strobing of the seconds, minutes, and hours information on the Data Bus for use in the display.

4-12. Digit Position Decoder

4-13. The Digit Position Decoder receives the four-bit BCD code from the Time Base Divider and decodes it to a 10-bit output that is sent to the front-panel display to strobe the digit position one after the other. The 10-bit output is supplied, through the Digit Position Bus Drivers, to synchronize the outputs of the counters on the A3 and A4 boards on the Data Bus with the strobing of the display.



4-14. Days and Months Counters

4-15. The Days Counter receives the 1-Day signal from the Hours Counter and counts the days of the month (28, 29, 30, or 31 days, depending on the month being counted and whether leap-year or not). The Months Counter is clocked by the Days Counter at the end of a month and counts the months of the year. Each counter outputs a BCD code to indicate the number of days and months that have been accumulated. These codes are combined with the appropriate digit position bits to synchronize the strobing of the days and months information on the Data Bus for use in the display.

4-16. Input Processing

4-17. The input processing circuits on the A5 Bus I/O Assembly process software instructions for the remote programming mode of the 59309A. The Run and Hold signals are sent to the Time Base Divider and the Update and Reset signals are sent to the counter circuits. The input processing circuits supply the Store, DAC, and RFD qualifiers to the Output State Machine.

4-18. Output State Machine

4-19. The Output State Machine controls the operation of the talk output of the 59309A. The four-bit codes from the Data Bus and the four-digit position bits from the Time Base Divider are processed by the Output State Machine to develop the talk output to the bus.

4-20. Seven-Segment Decoder

4-21. The Seven-Segment Decoder receives the four-bit code from the Data Bus and converts it to a control code to illuminate the segments in each digit of the display.

4-22. Segment Drivers

4-23. The Segment Drivers provide drive to the display segments for the Seven-Segment Decoder.

4-24. Clock Loss Detector

4-25. The Clock Loss Detector protects the display by blanking it completely if the strobe signals from the Digit Position Bus fail.

4-26. Display


4-27. The display is an LED display that provides seven-segment digits. Two digits are provided for each of the months, days, hours, minutes, and seconds displayed. The display combines the segment control code from the Seven-Segment Decoder and the strobe code from the Digit Position Bus to produce a display of seconds, minutes, hours, days, and months.

4-28. INTEGRATED CIRCUIT OPERATION

4-29. The following paragraphs describe 14 of the IC's used in the 59309A. The other IC's used are common gates and flip-flops which can be found in standard text books or IC catalogs.

4-30. 256-Bit Read-Only-Memory A5U15 (1816-0353)

4-31. The read-only-memory shown in *Figure 4-2* is a 256-bit ROM whose output is organized into 32 words by 8 bits. A 5-bit code is used to select the desired output word. The eight outputs are open collector which permit "AND" tying of the outputs to the same line. A logic low is required at the enable input to activate the ROM.

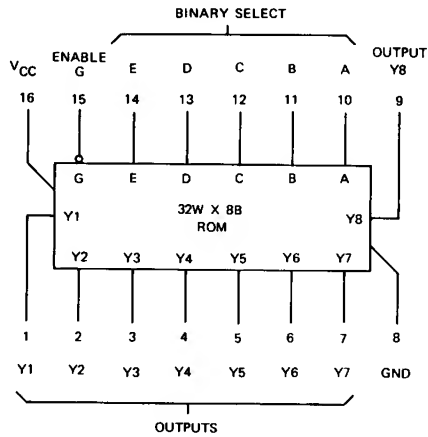

| WORD | INPUTS | | | | | | | OUTPUTS | | | | | | | |
|------|---------------|---|---|---|---|---|--------|---------|----|----|----|----|----|----|----|
| | BINARY SELECT | | | | | | ENABLE | | | | | | | | |
| | E | D | C | B | A | G | | Y8 | Y7 | Y6 | Y5 | Y4 | Y3 | Y2 | Y1 |
| 0 | L | L | L | L | L | L | | L | L | H | H | H | H | H | H |
| 1 | L | L | L | L | H | L | | L | L | H | H | H | H | H | H |
| 2 | L | L | L | H | L | L | | L | L | H | H | H | H | H | H |
| 3 | L | L | L | H | H | L | | L | L | H | H | H | H | H | H |
| 4 | L | L | H | L | L | L | | L | L | H | H | H | H | H | H |
| 5 | L | L | H | L | H | L | | L | L | H | H | H | H | H | H |
| 6 | L | L | H | H | L | L | | L | L | H | H | H | H | H | H |
| 7 | L | L | H | H | H | L | | L | L | H | H | H | H | H | H |
| 8 | L | H | L | L | L | L | | L | L | H | H | H | H | H | H |
| 9 | L | H | L | L | H | L | | L | L | H | H | H | H | H | H |
| 10 | L | H | L | H | L | L | | L | L | H | L | L | L | L | L |
| 11 | L | H | L | H | H | L | | L | L | L | L | H | H | L | H |
| 12 | L | H | H | L | L | L | | L | L | L | L | H | L | H | L |
| 13 | L | H | H | L | H | L | | L | L | H | H | H | H | H | H |
| 14 | L | H | H | H | L | L | | L | L | H | H | H | L | H | L |
| 15 | L | H | H | H | H | L | | L | L | L | L | L | L | L | L |
| 16 | H | L | L | L | L | L | | L | L | H | H | H | H | H | H |
| 17 | H | L | L | L | H | L | | L | L | H | H | H | H | H | H |
| 18 | H | L | L | H | L | L | | L | L | H | H | H | H | H | H |
| 19 | H | L | L | H | H | L | | L | L | H | H | H | H | H | H |
| 20 | H | L | H | L | L | L | | L | L | H | H | H | H | H | H |
| 21 | H | L | H | L | H | L | | L | L | H | H | H | H | H | H |
| 22 | H | L | H | H | L | L | | L | L | H | H | H | H | H | H |
| 23 | H | L | H | H | H | L | | L | L | H | H | H | H | H | H |
| 24 | H | H | L | L | L | L | | L | L | H | H | H | H | H | H |
| 25 | H | H | L | L | H | L | | L | L | H | H | H | H | H | H |
| 26 | H | H | L | H | L | L | | L | L | H | L | L | L | L | L |
| 27 | H | H | L | H | H | L | | L | L | L | L | H | H | L | H |
| 28 | H | H | H | L | L | L | | L | L | L | L | H | L | H | L |
| 29 | H | H | H | L | H | L | | L | L | H | H | H | H | H | H |
| 30 | H | H | H | H | L | L | | L | L | H | L | H | H | L | L |
| 31 | H | H | H | H | H | L | | L | L | L | L | L | L | L | L |
| ALL | X | X | X | X | X | H | | L | H | H | H | H | H | H | H |

H = high level, L = low level, X = irrelevant

Figure 4-2. 256-Bit Read-Only-Memory (ROM) A5U15

4-32. 1024-Bit Read-Only-Memory A5U18 (1816-0354)

4-33. The read-only-memory (ROM illustrated in *Figure 4-3* is a 1024-bit ROM whose output is organized into 256 words by four bits. An 8-bit code is used to select the desired output word. The four outputs are open-collector which permit "AND" tying of the outputs to the same line. Logic lows are required at inputs ME1 and ME2 to activate the ROM.

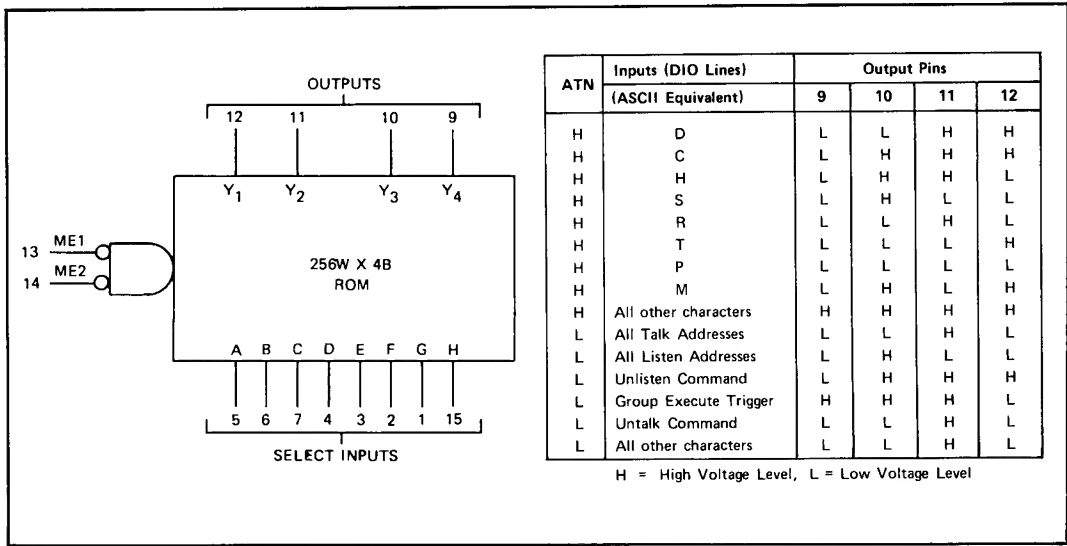


Figure 4-3. 1024-Bit Read-Only-Memory (ROM) A5U18

4-34. 4096-Bit Read-Only-Memory (ROM) A5U2 (1818-2193)

CAUTION

This ROM is a large-scale MOS integrated circuit. Its inputs are susceptible to damage by high voltage (>6 volts) and static charges. Particular care should be exercised when servicing or handling this circuit.

4-35. The 4096-bit (4K) read-only-memory shown in *Figure 4-4*, is a static ROM whose output is organized into 256 words by 16 bits. The ROM is used in the logic state machine of the 59309A. See Table 5-5 and 5-6 for bit pattern listing.

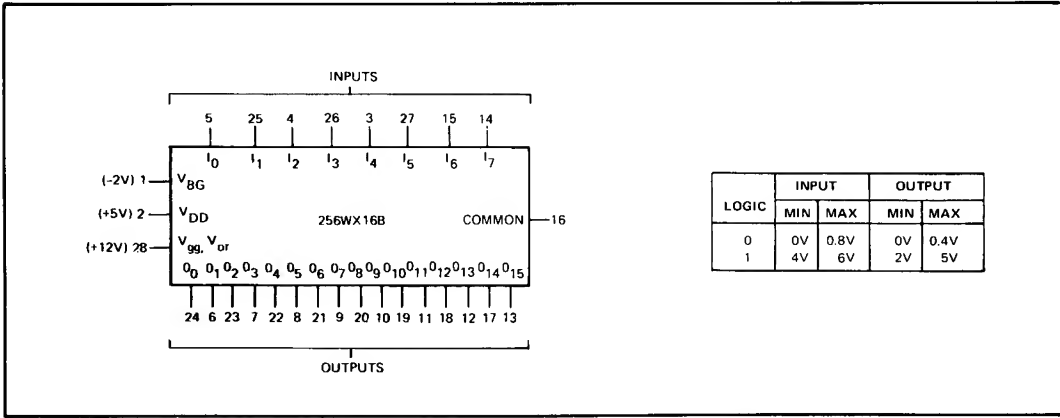


Figure 4-4. 4096-Bit Read-Only-Memory (ROM) A5U2

4-36. BCD-to-Decimal Decoder/Driver A4U18 (1820-0491)

4-37. This BCD-to-decimal decoder/driver, shown in Figure 4-5, consists of eight inverters and ten 4-input NAND gates. The inverters are connected in pairs to make BCD input data available for decoding by the NAND gates. Full decoding of valid BCD input logic ensures all outputs remain off for all invalid binary input conditions. The decoder features TTL inputs and N-P-N output transistors designed for use as indicator/relay drivers or as open-collector logic-circuit drivers.

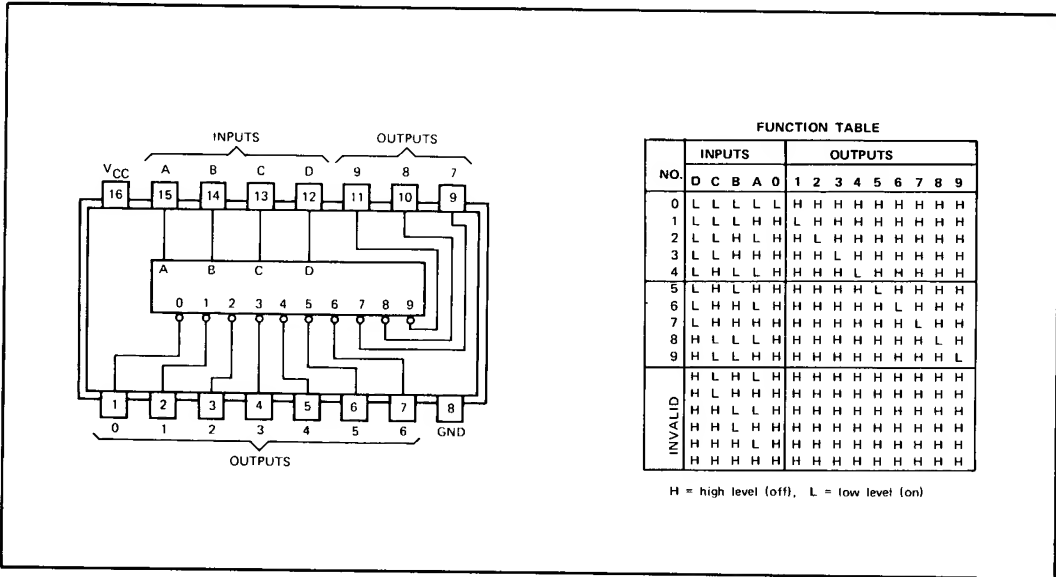


Figure 4-5. BCD-to-Decimal Decoder/Driver A4U18

4-38. 64-Bit Random-Access-Memory (RAM) A5U14 (1820-0628)

4-39. The 64-bit random-access-memory (RAM) symbol is shown in Figure 4-6. The RAM is organized 16 words by 4 bits. Four address lines are buffered and decoded for word selection. When the RAM receives a low at the memory enable (ME) input, the binary address (A through D) is coded to select 1 of 16 four-bit words. If the write enable (WE) is low, the data present on the data input lines (D₁ through D₄) is written into the four bits of the selected word. There is inversion of logic levels through the RAM in a read operation.


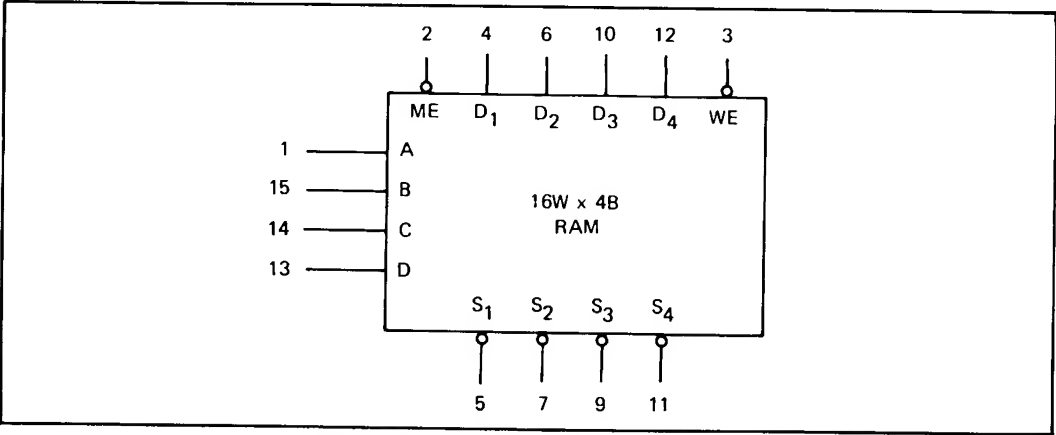


Figure 4-6. Random-Access-Memory (RAM) A5U14

4-40. Eight Input Multiplexer A5U8 (1820-0658)

4-41. The eight input multiplexer, shown in Figure 4-7, provides the ability to select one bit of data from up to eight sources. The circuit is a logical implementation of a single-pole, eight-position switch with the switch position controlled by the state of three select inputs, S_0 , S_1 , and S_2 . Both assertion and negation outputs are provided. The enable input (E) is active low.

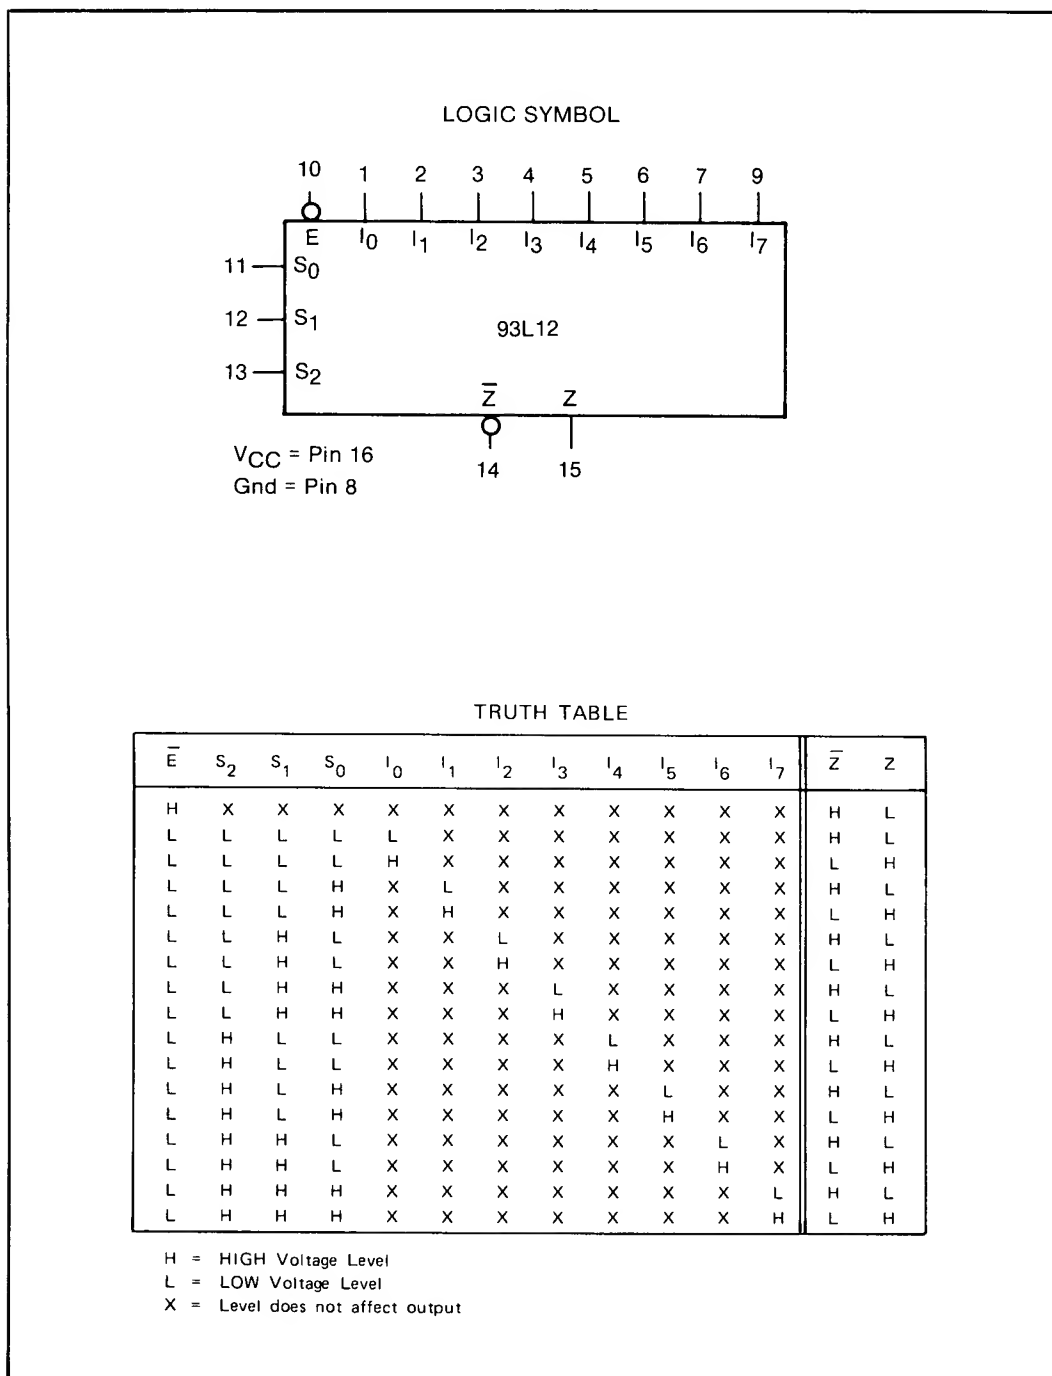

4-42. Low Power One-of-Sixteen Decoder A5U17 (1820-0702)

4-43. This decoder, shown in Figure 4-8, accepts four active high binary inputs and provides up to 16 mutually exclusive active low outputs. The circuit can demultiplex data by routing it from one input to 1 of 16 possible decoder outputs. The desired output is addressed and the data is applied to one of the enable inputs. When the other enable is low, the addressed output will follow the state of the applied data.

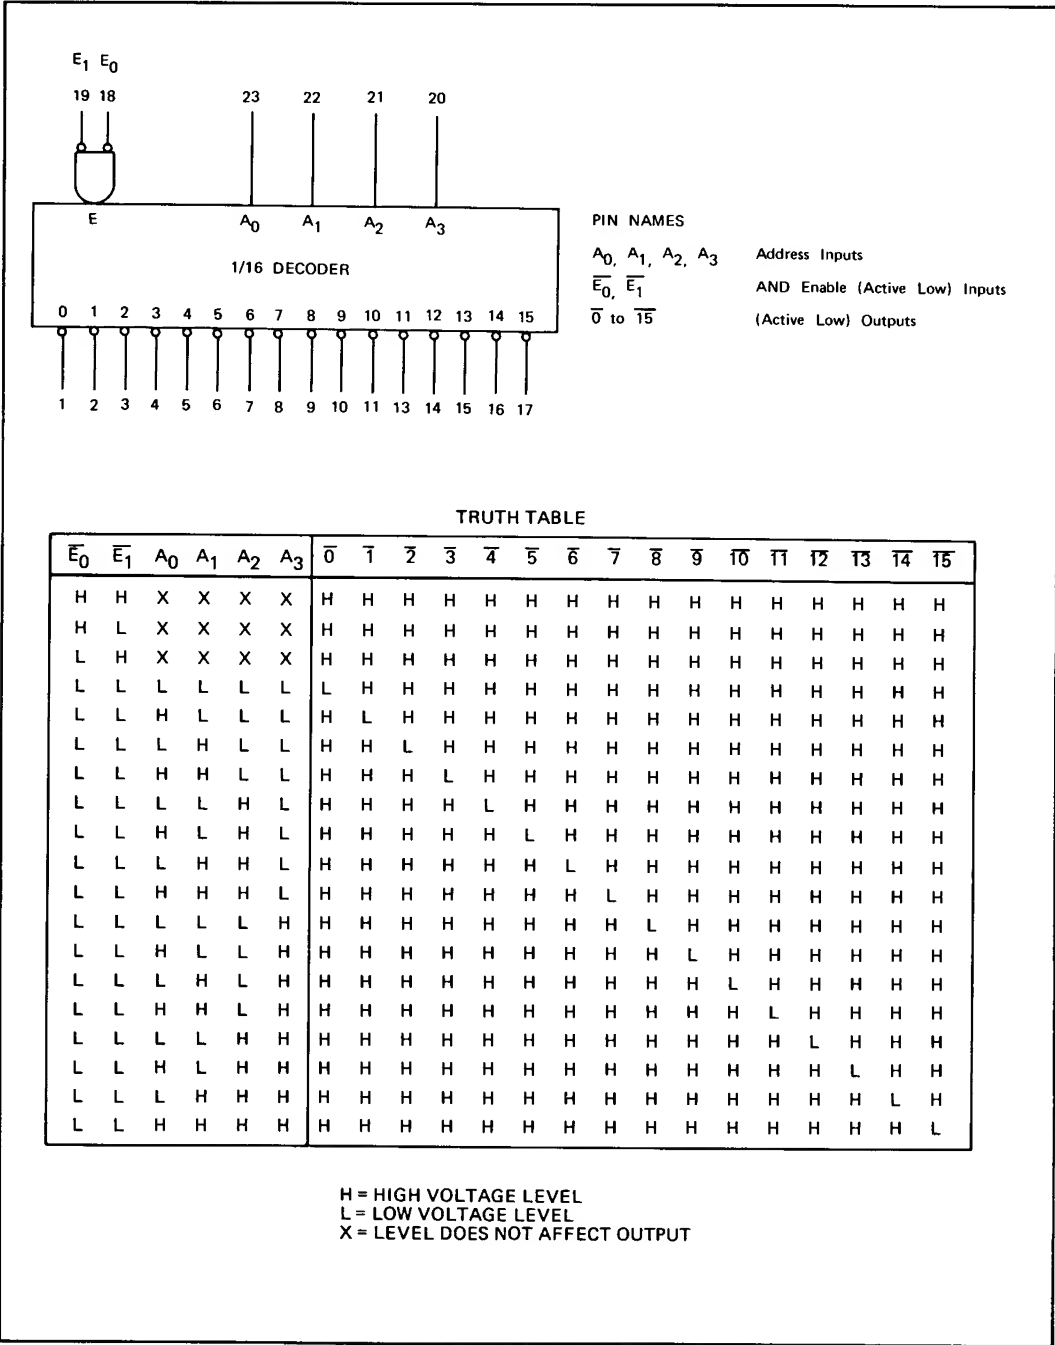


Figure 4-8. Low Power One-of-Sixteen Decoder A5U17

4-44. Quad Two-Input Multiplexer A5U7 (1820-0710)

4-45. The quad two-input multiplexer shown in *Figure 4-9* consists of four multiplexing circuits with common select and enable logic. The enable input (E) is active low. When not activated all outputs (Z) are low regardless of all other inputs. The quad two-input multiplexer is the logical implementation of a four-pole two-position switch, with the position of the switch being set by the logic level supplied to the one select input.

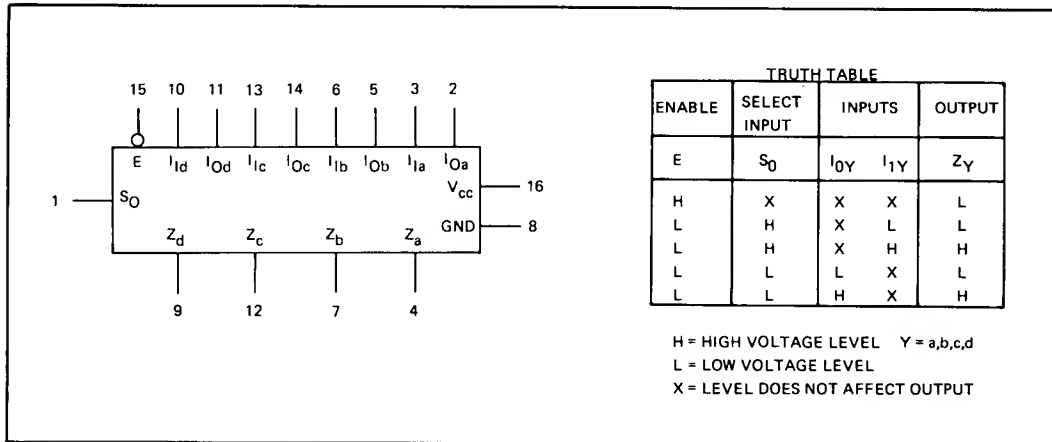


Figure 4-9. Quad Two Input Multiplexer A5U7

4-46. Low Power TTL Five-Bit Comparator A5U19 (1820-0904)

4-47. This IC (*Figure 4-10*) provides a comparison between two 5-bit words and gives one of three outputs; "less than", "greater than", or "equal to". A high level on the enable input forces all three outputs low. A low on the enable input allows a comparison to take place. The comparator function is shown in *Figure 4-10*.

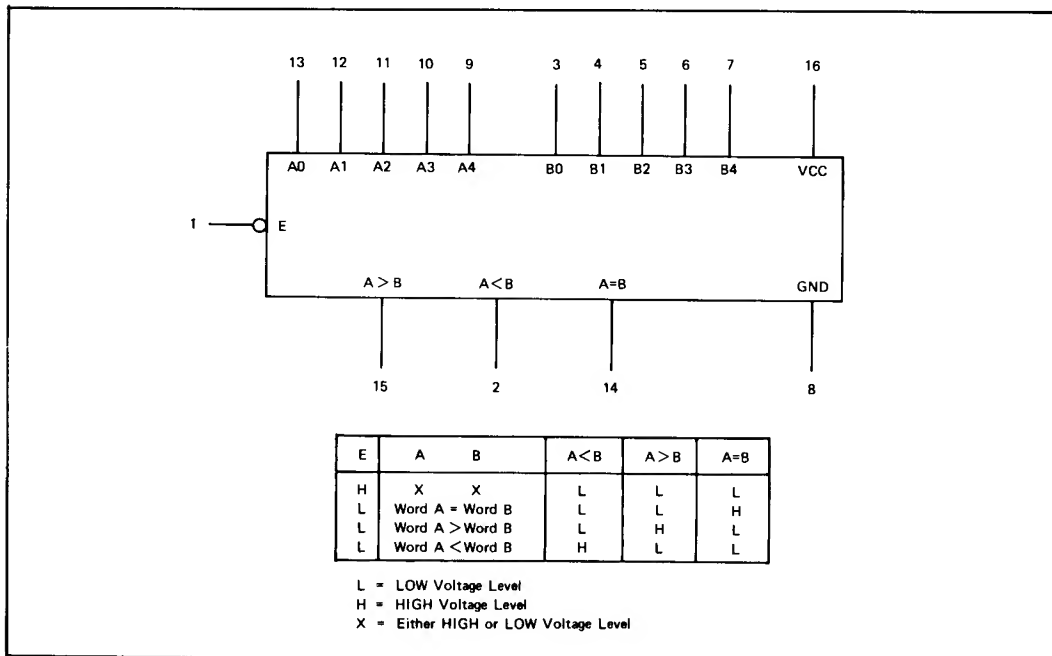


Figure 4-10. Low Power TTL Five-Bit Comparator A5U19

4-48. Seven-Segment Decoder A1U2 (1820-0914)

4-49. The seven-segment decoder, shown in Figure 4-11, accepts four-bit BCD 8421 code input. The circuit provides the appropriate outputs for selection of segments in a seven-segment matrix display used for representing the decimal numbers 0-9. The seven outputs (a, b, c, d, e, f, and g) of the decoder select the corresponding segments in the matrix shown in Figure 4-11.

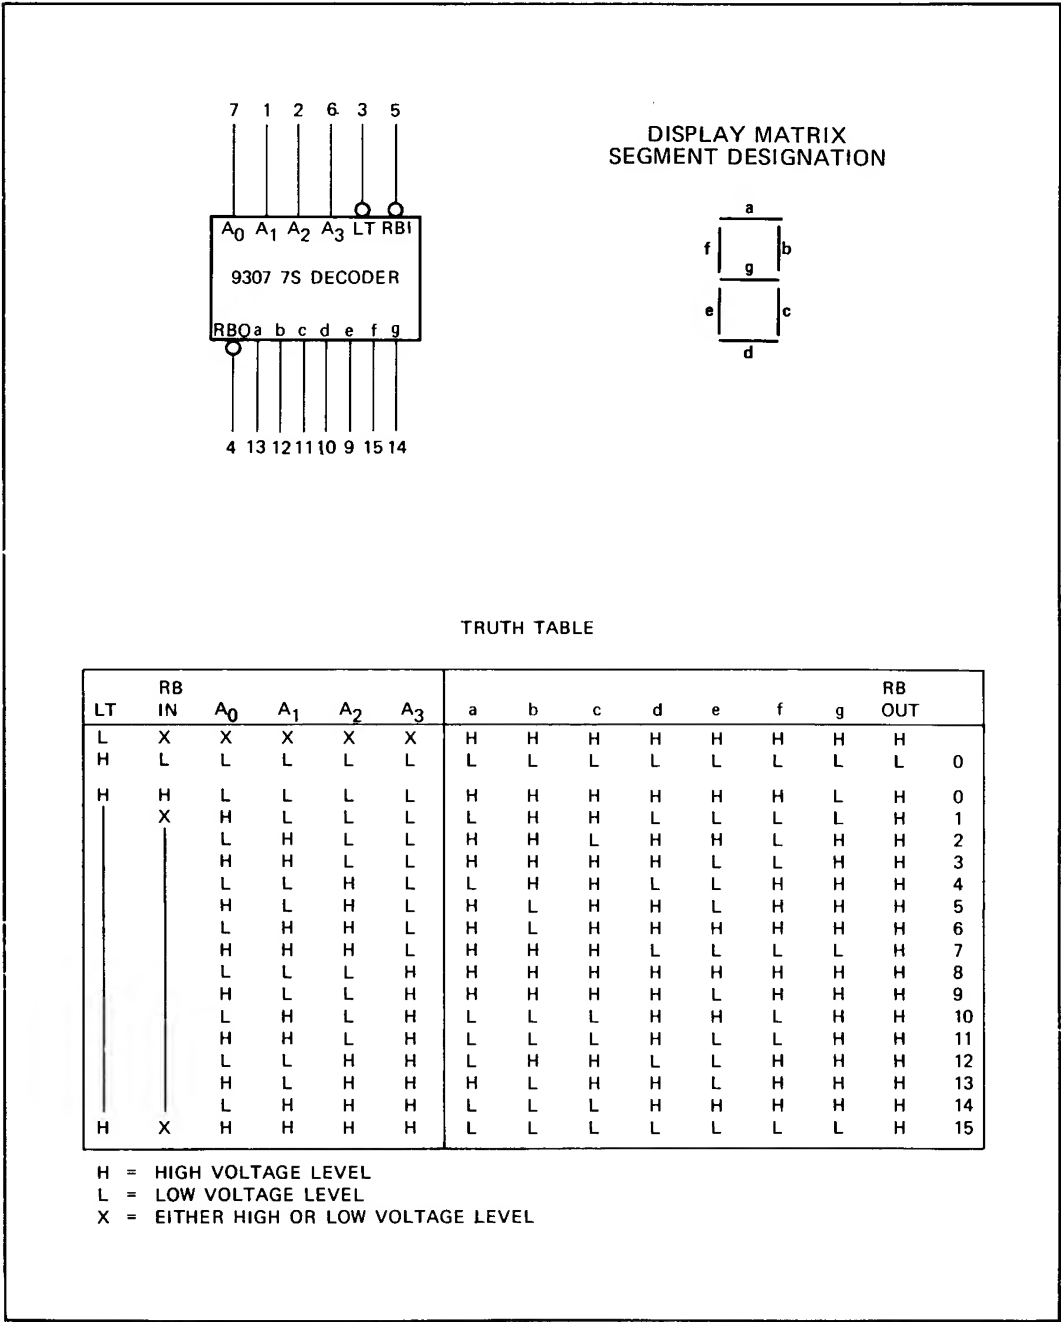


Figure 4-11. Seven-Segment Decoder A1U2

4-50. BCD Up/Down Counter A3U7 (1820-1189)

CAUTION

The device contains circuitry to protect its inputs against damage due to high static voltages or electric fields; however, precautions should be taken to avoid application of any voltage higher than maximum rated voltages to this high impedance circuit.

4-51. This CMOS counter, shown in Figure 4-12, consists of type D flip-flop stages with a gating structure to provide type T flip-flop capability.

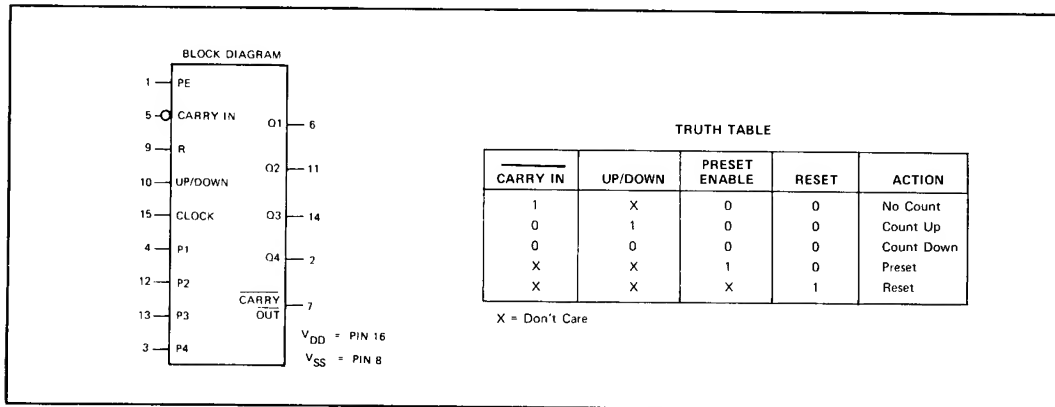


Figure 4-12. BCD Up/Down Counter A3U7

4-52. Timer A1U3 (1826-0180)

4-53. The timer, shown in Figure 4-13, provides a highly stable timing circuit capable of producing accurate time delays. The time is precisely controlled by an external capacitor and resistor. The circuit is used in the 59309A as a clock loss detector. If the display clock fails, a blanking signal is supplied by the timer to protect the display.

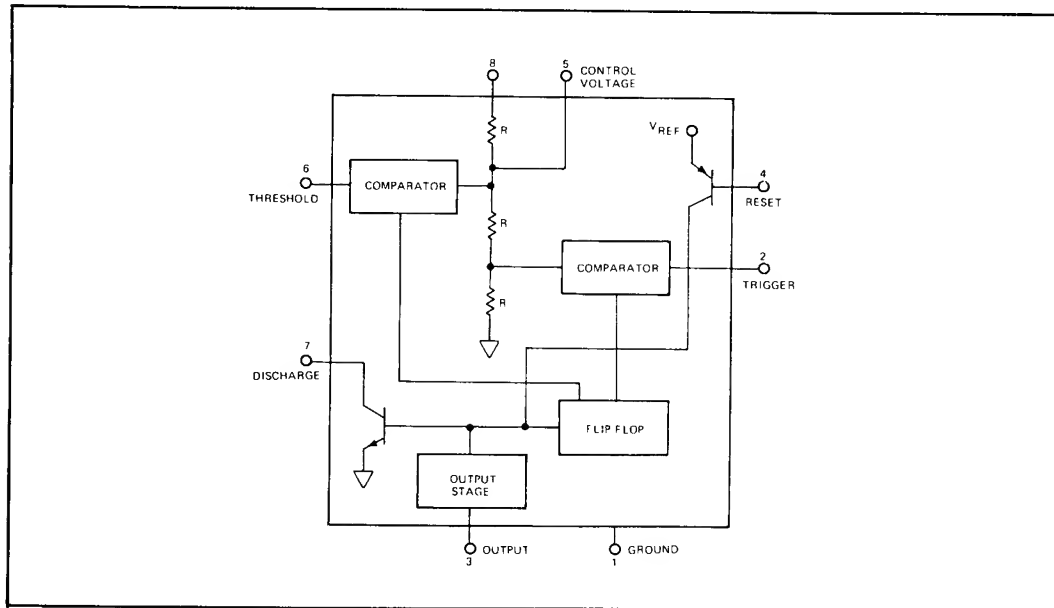


Figure 4-13. Timer A1U3

SECTION V

MAINTENANCE

5-1. INTRODUCTION

5-2. This section contains maintenance and service information including a table of recommended test equipment, in-cabinet performance checks, adjustments, and troubleshooting.

WARNING

ANY ADJUSTMENT, MAINTENANCE, AND REPAIR OF THE OPENED INSTRUMENT UNDER VOLTAGE SHOULD BE AVOIDED AS MUCH AS POSSIBLE AND, WHEN INEVITABLE, SHOULD BE CARRIED OUT ONLY BY A SKILLED PERSON WHO IS AWARE OF THE HAZARD INVOLVED. LINE VOLTAGE IS ALWAYS PRESENT ON TERMINALS INCLUDING THE POWER INPUT CONNECTOR, FUSE HOLDER, POWER SWITCH, AND OTHER POINTS. ENERGY AVAILABLE AT MANY POINTS MAY RESULT IN PERSONAL INJURY OR DEATH WHEN CONTACTED.

5-3. TEST EQUIPMENT

5-4. Table 5-1 lists test equipment recommended for maintaining and checking the performance of the 59309A. Test equipment with equivalent characteristics may be substituted.

Table 5-1. Recommended Test Equipment

| INSTRUMENT | REQUIRED CHARACTERISTICS | RECOMMENDED |
|---------------------------------------|------------------------------------|--------------------------|
| Logic Probe | Test TTL Signal Levels | HP 10525T |
| Logic Pulser | Pulse In-Circuit IC's | HP 10526T |
| Digital Voltmeter | 0 to +20 Volts Accuracy 0.3% | HP 3480A and HP 3482A |
| Logic State Display with Oscilloscope | Display state machine bit patterns | HP 1601A with HP 182C |
| Frequency Counter | 1 MHz | HP 5328A Option 010 |

5-5. IN-CABINET PERFORMANCE TEST

5-6. Table 5-2 contains the in-cabinet performance test. The 59309A is checked for proper functional operation in local (front panel) control and proper programming response in remote control (HP-IB verification).

Table 5-2. In-Cabinet Performance Test

NOTE

Prior to operating the 59309A, set the voltage selector switch on the rear panel to correspond with the line voltage to be used (115V or 230V). Install the correct line fuse (500 mA for 115-volt operation or 250 mA for 230-volt operation) and connect the 59309A to the power source. The front panel display should illuminate. See Warning in paragraph 5-2.

FRONT PANEL CONTROL

1. Lift hinged lower portion of front panel and set controls as follows:

| | |
|----------------|------|
| EXT/INT | INT |
| 365/366 | 365 |
| RUN/HOLD | HOLD |

2. Push and hold RESET. Two pairs of 8's should appear above the word CALENDAR and three pairs should appear above TIME.
3. Release RESET button. Display should read a constant "01 01 00 00 00".
4. Set EXT/INT switch to EXT (do not connect on external frequency standard). Display should be blank.
5. Return EXT/INT switch to INT. Display should read as in step 3 except that the decimal point in each digit should also be lit.
6. Push RESET. The decimal points should clear from display.
7. Press PUSH TO READ button. Display should remain unchanged from that of step 3 (display will flicker as switch clicks).
8. Push and hold TIME SET SLOW. Seconds digits should update rapidly. Check for correct updating of minutes digits. Release button.
9. Push and hold TIME SET FAST. Seconds and minutes digits should update rapidly. Check for correct updating of the hours digits. Release button.
10. Push and hold DAY SET. Days and months digits only should update. Check for correct days and months updating (based on 365 days year). Release button.
11. Set 365/366 switch to 366. Push RESET. Push DAY SET and check for CALENDAR display of "02 29".
12. Push RESET. Set RUN/HOLD switch to RUN. Display should update at 1-second rate. Check for correct updating of seconds digits.
13. Apply 8 to 10 Vdc to rear panel STANDBY POWER INPUT. Remove AC line power. Display should be blank.
14. Press and hold PUSH TO READ. Display should light and be updating at 1-second rate. Release button.

Table 5-2. In-Cabinet Performance Test (Continued)

15. Remove top cover. Set EXT FREQ STD switch on A2 board to 10 MHz position. Apply 10 MHz (1 Vrms into 1 K Ω) to rear panel EXT FREQ STD input.
16. Set EXT/INT switch to EXT. Push RESET. Press and hold PUSH TO READ. Display should light and be updating at a 1-second rate. Release button.
17. Repeat steps 15 and 16 for both 5 MHz and 1 MHz.
18. Replace top cover.

HP-IB VERIFICATION PROGRAM USING 9820A or 9830A

1. Figure A is the basic flowchart for the verification program.

Figure A

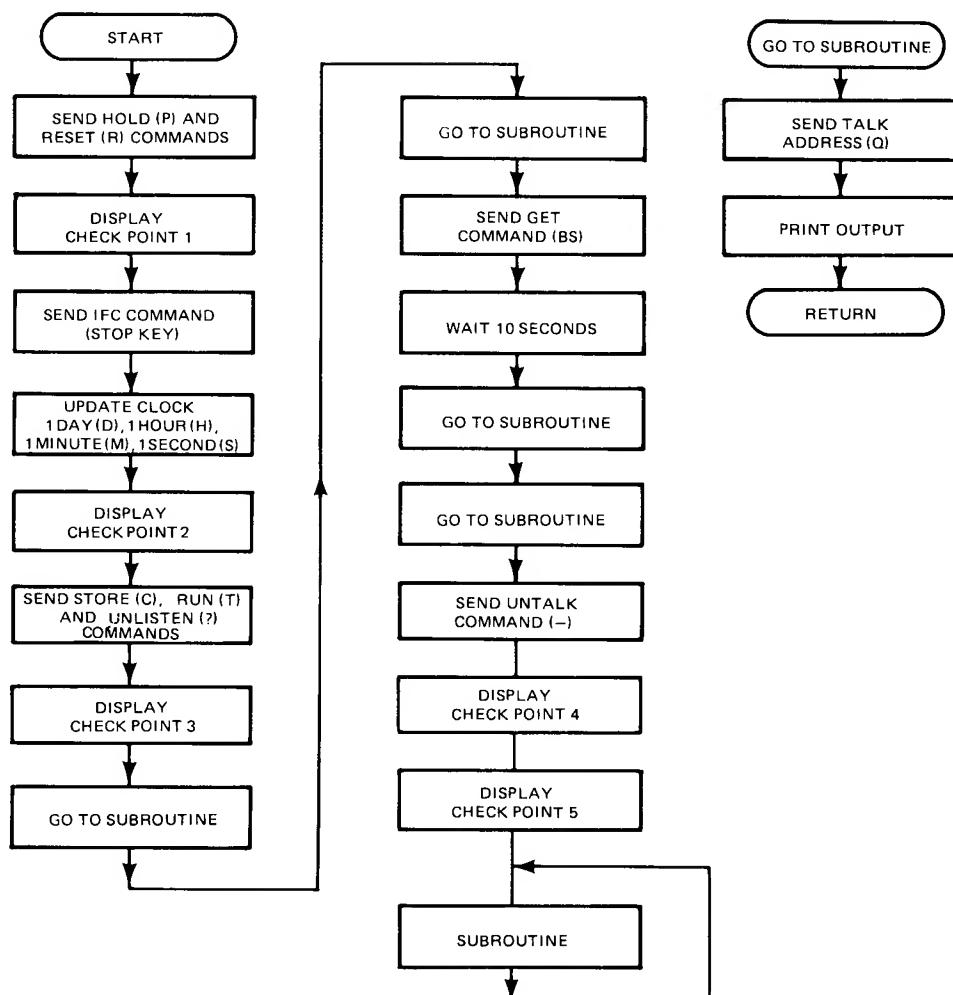


Table 5-2. In-Cabinet Performance Test (Continued)

2. Verification Using 9820A Calculator

- a. Set up a 9820A Calculator, 11224A PC II ROM, 59405A HP-IB Calculator Interface, 10631A HP-IB Cable, and 59309A HP-IB Clock for operation.
- b. Set 59309A controls as follows:
 - Address switches - 10001 (1,Q)
 - Mode switches - 11 (Addressable)
 - Format switches - CAL, NO SPACE
 - EXT/EXT - INT
 - 365/366 - 365
 - RUN/HOLD - RUN
- c. Initialize 59309A by removing ac power, then reapplying power.
- d. Type in program of Figure B.

Figure B

```

0:      CMD "?U1","FR"
1:      DSP "CHECK POINT
        1"
2:      STP
3:      CMD "?U1","SMHD"
4:      DSP "CHECK POINT
        2"
5:      STP
6:      CMD "?U1","CT","
        ?"
7:      DSP "CHECK POINT
        3"
8:      STP
9:      GSB 24
10:     GSB 24
11:     CMD "?U12("
12:     DSP "WAIT 10 SEC
        ONDS"
13:     STP
14:     GSB 24
15:     GSB 24
16:     CMD "+ "
17:     DSP "CHECK POINT
        4"
18:     STP
19:     DSP "CHECK POINT
        5"
20:     STP
21:     GSB 24
22:     GTD 21
23:     END
24:     CMD "?Q5";RDB 13
        +A;FMT *;RED 13,
        B
25:     FXD 0;PRT A,B
26:     RET

```

Note: Unusual character in line 11 is made by pressing DISPLAY key.

- e. Press END and LIST keys on 9820A. Compare listing with Figure B for accuracy.

Table 5-2. In-Cabinet Performance Test (Continued)

- f. Press END and RUN PROGRAM keys. As CHECK POINT's appear on calculator display, verify operation of 59309A with CHECK POINT explanations in steps 4 through 8. To continue program after each CHECK POINT, press RUN PROGRAM key.
3. Verification Using 9830A Calculator
 - a. Set up a 9830A Calculator, 9866A Printer, 11272B Extended I/O ROM, 59405A HP-IB Calculator Interface, 10631A HP-IB Cable, and 59309A HP-IB Clock for operation.
 - b. Set 59309A control as follows:
 - Address switches - 10001 (1,Q)
 - Mode switches - 11 (Addressable)
 - Format switches - CAL, NO SPACE
 - INT/EXT - INT
 - 365/366 - 365
 - RUN/HOLD - RUN
 - c. Initialize 59309A by removing ac power, then reapplying power.
 - d. Type in program of Figure C.

Figure C

```

10 CMD "?U1","PR"
20 DISP "CHECK POINT 1"
30 STOP
40 CMD "?U1","SMHD"
50 DISP "CHECK POINT 2"
60 STOP
70 CMD "?U1","CT","?"
80 DISP "CHECK POINT 3"
90 STOP
100 GOSUB 280
110 GOSUB 280
120 CMD "?U1"
130 FORMAT 3B
140 OUTPUT (13,130)256,8,512:
150 WAIT 10000
160 GOSUB 280
170 GOSUB 280
180 CMD "?U"
190 FORMAT 3B
200 OUTPUT (13,190)256,95,512:
210 DISP "CHECK POINT 4"
220 STOP
230 DISP "CHECK POINT 5"
240 STOP
250 GOSUB 280
260 GOTO 250
270 END
280 CMD "?50"
290 ENTER (13,300)A:B
300 FORMAT B:F12.0
310 PRINT A:B
320 RETURN

```

Table 5-2. In-Cabinet Performance Test (Continued)

- e. Press LIST and EXECUTE keys on 9830A. Compare listing with Figure C for accuracy.
 - f. Press RUN and EXECUTE keys. As CHECK POINT's appear on calculator display, verify operation of 59309A with CHECK POINT explanations in steps 4 through 8. To continue program after each CHECK POINT, press CONT and EXECUTE keys.
4. CHECK POINT 1.
 - a. ADDRESSED light should be lit.
 - b. Display should read a constant "01 01 00 00 00".
 - c. Press STOP key on calculator, ADDRESSED light should go off.
5. CHECK POINT 2.
 - a. ADDRESSED light should be lit.
 - b. Display should read a constant "01 02 01 01 01".
6. CHECK POINT 3.
 - a. ADDRESSED light should be off.
 - b. Display should be updating at 1-second rate.
 - c. When program is continued, ADDRESSED light should be lit.
 - d. When program is continued on 9820A, calculator will print two 59309A outputs then display "WAIT 10 SECONDS". Using last 59309A output as reference and display of 59309A as timer, wait 10 seconds then press RUN PROGRAM key.
7. CHECK POINT 4.
 - a. ADDRESSED light should be off.
 - b. Calculator should have printed four 59309A outputs.
 - c. First 59309A output should read "32" "102010101".
 - d. Second and third output should be within 1-second of each other.
 - e. Fourth output should be within 8 to 12 seconds of third output.
8. CHECK POINT 5.
 - a. When program is continued, 59309A should output continuously with printout updating as display updates.
 - b. After continuing program set INT/EXT switch to EXT, then return to INT. Calculator should be printing "63" in place of previous "32".
 - c. Press STOP key on calculator to end test.

5-7. ADJUSTMENTS

5-8. The only adjustment required for the 59309A is the oscillator adjustment. Adjust the oscillator as follows:

- Remove the top cover of the 59309A (see Warning in paragraph 5-2).
- Connect the 1 M Ω INPUT connector of an HP 5328A Universal Counter (or equivalent) to the 59309A test point A3TP4 (see Figure 8-5).
- Apply power to the equipment and allow 1 hour warmup.
- Using an insulated tuning tool, adjust the variable resistor (OSC ADJ) on the 59309A for a display of 1 MHz on the 5328A.

5-9. TROUBLESHOOTING

5-10. Before removing the covers to troubleshoot the instrument, observe the Warning in paragraph 5-2. To troubleshoot the 59309A, perform the in-cabinet performance test in Table 5-2 to determine the failure symptom. Refer to the overall functional description in Section IV to isolate the trouble to a major circuit area. Refer to the detailed description on each schematic diagram in Section VIII to isolate the trouble within a major circuit area.

5-11. The extender boards listed in Table 1-3 are accessories available for troubleshooting.

5-12. ROM Listings

5-13. Tables 5-3 through 5-6 are listings of the bit patterns of ROM's A5U2, U15, and U18. The input and output labels shown correspond with those of the A5 board schematic, Figure 8-7. Using these tables, proper operation of the ROM's can be established.

Table 5-3. A5U18 ROM Listing

| Inputted ASCII Character | Inputs | | | | | | | ATN H | Outputs | | | | Internal Line Effected |
|--------------------------------|-----------|---|---|---|---|---|---|----------|----------------|----------------|----------------|----------------|------------------------------|
| | DIO Lines | | | | | | | | Y ₄ | Y ₃ | Y ₂ | Y ₁ | |
| | G | F | E | D | C | B | A | | | | | | |
| R | 1 | 0 | 1 | 0 | 0 | 1 | 0 | H | L | L | H | L | RESET |
| P | 1 | 0 | 1 | 0 | 0 | 0 | 0 | H | L | L | L | L | HOLD |
| T | 1 | 0 | 1 | 0 | 1 | 0 | 0 | H | L | L | L | H | RUN |
| S | 1 | 0 | 1 | 0 | 0 | 1 | 1 | H | L | H | L | L | SECONDS |
| M | 1 | 0 | 0 | 1 | 1 | 0 | 1 | H | L | H | L | H | MINUTES |
| H | 1 | 0 | 0 | 1 | 0 | 0 | 0 | H | L | H | H | L | HOURS |
| D | 1 | 0 | 0 | 0 | 1 | 0 | 0 | H | L | L | H | H | DAY |
| C | 1 | 0 | 0 | 0 | 0 | 1 | 1 | H | L | H | H | H | STORE |
| BS | 0 | 0 | 0 | 1 | 0 | 0 | 0 | L | H | H | H | L | DEVICE TRIGGER |
| ? | 0 | 1 | 1 | 1 | 1 | 1 | 1 | L | L | H | H | H | "?" |
| — | 1 | 0 | 1 | 1 | 1 | 1 | 1 | L | L | L | H | L | TALK |
| All Listen Addresses | 0 | 1 | X | X | X | X | X | L | L | H | L | L | LISTEN |
| All Talk Addresses | 1 | 0 | X | X | X | X | X | L | L | L | H | L | TALK |
| All other Characters | X | X | X | X | X | X | X | H | H | H | H | H | NO EFFECT |

Table 5-4. A5U15 ROM Listing

| WORD | INPUTS | | | | | OUTPUTS | | | | | | OUTPUTTED ASCII CHARACTER | |
|------|---------------|---|---|---|---|----------------|----------------|----------------|----------------|----------------|----------------|---------------------------------|---------------------------------|
| | BINARY SELECT | | | | | | | | | | | | |
| | E* | D | C | B | A | Y ₆ | Y ₅ | Y ₄ | Y ₃ | Y ₂ | Y ₁ | | |
| 0 | L | L | L | L | L | H | H | H | H | H | H | } | ? |
| 1 | L | L | L | L | H | H | H | H | H | H | H | | |
| 2 | L | L | L | H | L | H | H | H | H | H | H | | |
| 3 | L | L | L | H | H | H | H | H | H | H | H | | |
| 4 | L | L | H | L | L | H | H | H | H | H | H | | |
| 5 | L | L | H | L | H | H | H | H | H | H | H | | |
| 6 | L | L | H | H | L | H | H | H | H | H | H | | |
| 7 | L | L | H | H | H | H | H | H | H | H | H | | |
| 8 | L | H | L | L | L | H | H | H | H | H | H | | |
| 9 | L | H | L | L | H | H | H | H | H | H | H | | |
| 10 | L | H | L | H | L | H | L | L | L | L | L | } | SP CR LF ? : NUL |
| 11 | L | H | L | H | H | L | L | H | H | L | H | | |
| 12 | L | H | H | L | L | L | L | H | L | H | L | | |
| 13 | L | H | H | L | H | H | H | H | H | H | H | | |
| 14 | L | H | H | H | L | H | H | H | L | H | L | | |
| 15 | L | H | H | H | H | L | L | L | L | L | L | | |
| 16 | H | L | L | L | L | H | H | H | H | H | H | | |
| 17 | H | L | L | L | H | H | H | H | H | H | H | | |
| 18 | H | L | L | H | L | H | H | H | H | H | H | | |
| 19 | H | L | L | H | H | H | H | H | H | H | H | | |
| 20 | H | L | H | L | L | H | H | H | H | H | H | } | ? |
| 21 | H | L | H | L | H | H | H | H | H | H | H | | |
| 22 | H | L | H | H | L | H | H | H | H | H | H | | |
| 23 | H | L | H | H | H | H | H | H | H | H | H | | |
| 24 | H | H | L | L | L | H | H | H | H | H | H | | |
| 25 | H | H | L | L | H | H | H | H | H | H | H | | |
| 26 | H | H | L | H | L | H | L | L | L | L | L | | |
| 27 | H | H | L | H | H | L | L | H | H | L | H | | |
| 28 | H | H | H | L | L | L | L | H | L | H | L | | |
| 29 | H | H | H | L | H | H | H | H | H | H | H | | |
| 30 | H | H | H | H | L | H | L | H | H | L | L | } | SP CR LF ? , NUL |
| 31 | H | H | H | H | H | L | L | L | L | L | L | | |

*Level set by format switch

L = : (Colon)

H = , (Comma)

PERFORMANCE CHECK TEST CARD

HEWLETT-PACKARD MODEL 59309A
HP-IB DIGITAL CLOCK

Test Performed By _____

Instrument Serial No. _____

Date _____

PASSED

1. Front Panel Control, Step(s) _____
2. HP-IB Verification Program for 98____, Check Point(s) _____

FAILED

1. Front Panel Control Step _____, Reason _____

1. Front Panel Control Step _____, Reason _____

1. Front Panel Control Step _____, Reason _____

1. Front Panel Control Step _____, Reason _____

2. HP-IB Verification Program for 98____, Check Point _____, Reason _____

2. HP-IB Verification Program for 98____, Check Point _____, Reason _____

2. HP-IB Verification Program for 98____, Check Point _____, Reason _____

Table 5-5. A5U2 ROM Bit Pattern, Talk Enable = 1

| Present Address | Qual. | Next Address | | | | | | | Next Qual. | | | Load | DAV | R _{out} | ROM/RAM Address | | | | |
|--------------------------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|-----------------|-----------------|------------------|-----------------|-----------------|-----------------|--|--|
| I ₁ -I ₆ | I ₀ | O ₀ | O ₁ | O ₂ | O ₃ | O ₄ | O ₅ | O ₈ | O ₇ | O ₆ | O ₉ | O ₁₀ | O ₁₁ | O ₁₂ | O ₁₃ | O ₁₄ | O ₁₅ | | |
| 00 ₈ | 0 1 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 | 1 0 | 0 1 | 0 0 | 0 0 | 1 0 | 1 1 | 1 1 | 1 1 | 1 1 | | |
| 01 ₈ | 0 1 | 0 0 | 0 0 | 0 0 | 0 0 | 0 1 | 1 0 | 1 1 | 1 1 | 0 1 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | | |
| 02 ₈ | 0 1 | 0 0 | 0 0 | 0 0 | 0 0 | 1 1 | 0 1 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | | |
| 03 ₈ | 0 1 | 0 0 | 0 0 | 0 0 | 1 0 | 0 1 | 0 1 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | | |
| 04 ₈ | 0 1 | 0 0 | 0 0 | 0 0 | 1 1 | 0 0 | 0 1 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | | |
| 05 ₈ | 0 1 | 0 0 | 0 0 | 0 0 | 1 1 | 1 0 | 0 1 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | | |
| 06 ₈ | 0 1 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 | 0 1 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | | |
| 07 ₈ | 0 1 | 0 0 | 0 0 | 0 0 | 0 1 | 0 1 | 0 1 | 1 1 | 0 0 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | | |
| *ZZ ₈ | X | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 1 | 1 | 1 | 1 | 1 | | |

*Where ZZ is any address above 07₈

LEGEND

LOAD
Enable = 1
Disable = 0

DAV
Low = 0 on bus DAV line
High = 1 on bus DAV line

NEXT QUAL. CODES
TIME/CAL = 0 0 0
SP/NO SPACE = 0 0 1
ERROR = 0 1 0
NRFD = 0 1 1
NDAC = 1 0 0
STORE = 1 0 1
C LINE 5 = 1 1 0
B LINE = 1 1 1

R_{out}
Enable RAM output = 0
Disable RAM output = 1

X = don't care

NOTE

This ROM uses positive Logic (i.e., 1 = High, 0 = Low). \overline{DAV} is a negative Logic Signal name.

Table 5-6. A5U2 ROM Bit Pattern, Talk Enable = 0

| Present Address | Qual. | Next Address | | | | | | Next Qual. | | | Load | DAV | R _{out} | ROM/RAM Address | | | |
|--|----------------|---|----------------|--|----------------|----------------|----------------|----------------|----------------|---|----------------|-----------------|------------------|-----------------|-----------------|-----------------|-----------------|
| I ₁ -I ₆ | I ₀ | O ₀ | O ₁ | O ₂ | O ₃ | O ₄ | O ₅ | O ₈ | O ₇ | O ₆ | O ₉ | O ₁₀ | O ₁₁ | O ₁₂ | O ₁₃ | O ₁₄ | O ₁₅ |
| 00 ₈ | 0 1 | 0 0 | 0 0 | 0 0 | 0 1 | 0 1 | 1 0 | 1 0 | 1 1 | 0 0 | 0 0 | 0 0 | 1 0 | 1 1 | 1 1 | 1 1 | 1 1 |
| 01 ₈ | 0 1 | 0 0 | 0 0 | 0 0 | 0 0 | 1 1 | 0 0 | 1 1 | 1 1 | 0 1 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 |
| 02 ₈ | 0 1 | 0 0 | 0 0 | 0 0 | 0 0 | 1 1 | 0 1 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 |
| 03 ₈ | 0 1 | 0 0 | 0 0 | 0 0 | 1 0 | 0 1 | 0 1 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 |
| 04 ₈ | 0 1 | 0 1 | 0 0 | 0 1 | 1 1 | 0 1 | 0 1 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 |
| 05 ₈ | | (ADDRESS NOT USED) | | | | | | | | | | | | | | | |
| 06 ₈ | 0 1 | 0 0 | 0 0 | 0 1 | 1 0 | 1 0 | 1 0 | 0 0 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | 1 1 |
| 07 ₈ | 0 1 | 0 0 | 0 0 | 0 1 | 1 0 | 1 1 | 1 0 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | 1 1 |
| 10 ₈ | 0 1 | 0 0 | 0 0 | 1 1 | 0 0 | 0 0 | 0 1 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | 1 1 |
| 11 ₈ | 0 1 | 0 1 | 0 1 | 1 0 | 0 0 | 1 1 | 0 0 | 0 1 | 1 1 | 1 1 | 0 0 | 1 1 | 1 1 | 1 1 | 0 0 | 1 0 | 1 1 |
| 12 ₈ | 0 1 | 0 1 | 0 1 | 1 0 | 0 1 | 1 0 | 0 1 | 1 0 | 0 1 | 0 1 | 0 0 | 1 1 | 1 1 | 1 0 | 0 1 | 0 0 | 0 0 |
| 13 ₈ | | (ADDRESS NOT USED) | | | | | | | | | | | | | | | |
| 14 ₈ | 0 1 | 0 0 | 0 0 | 1 1 | 1 1 | 0 0 | 0 0 | 1 0 | 0 1 | 0 1 | 0 0 | 1 1 | 0 0 | 1 1 | 0 0 | 0 0 | 1 1 |
| 15 ₈ | 0 1 | 0 0 | 0 0 | 1 1 | 1 1 | 0 1 | 1 0 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 |
| 16 ₈ | 0 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 0 1 | 1 0 | 0 0 | 1 1 | 0 0 | 1 1 | 0 0 | 1 1 | 0 0 | 0 0 | 0 0 |
| 17 ₈ | 0 1 | 0 0 | 1 1 | 0 0 | 0 0 | 0 1 | 0 0 | 0 0 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 0 0 | 0 0 | 0 0 |
| 20 ₈ | 0 1 | 0 0 | 1 1 | 0 0 | 0 0 | 0 1 | 0 1 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 |
| 21 ₈ | 0 1 | 0 0 | 1 1 | 0 0 | 0 0 | 1 1 | 0 0 | 1 0 | 1 1 | 1 1 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 |
| LEGEND | | | | | | | | | | | | | | | | | |
| LOAD Enable = 1 Disable = 0 | | DAV Low = 0 on bus DAV line High = 1 on bus DAV line | | NEXT QUAL. CODES TIME/CAL = 0 0 0 SP/NO SPACE = 0 0 1 ERROR = 0 1 0 NRFD = 0 1 1 NDAC = 1 0 0 STORE = 1 0 1 C LINE 5 = 1 1 0 B LINE = 1 1 1 | | | | | | R_{out} Enable RAM output = 0 Disable RAM output = 1 | | X = don't care | | | | | |

NOTE

This ROM uses positive logic (i.e., 1 = High, 0 = Low). $\overline{\text{DAV}}$ is a negative logic signal name.

Table 5-6. A5U2 ROM Bit Pattern, Talk Enable = 0 (Continued)

| Present Address | Qual. | Next Address | | | | | | Next Qual. | | | Load | DAV | R _{out} | ROM/RAM Address | | | |
|--------------------------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|-----------------|------------------|-----------------|-----------------|-----------------|-----------------|
| I ₁ -I ₆ | I ₀ | O ₀ | O ₁ | O ₂ | O ₃ | O ₄ | O ₅ | O ₈ | O ₇ | O ₆ | O ₉ | O ₁₀ | O ₁₁ | O ₁₂ | O ₁₃ | O ₁₄ | O ₁₅ |
| 22 ₈ | 0 1 | 0 0 | 1 1 | 0 0 | 0 0 | 1 1 | 0 1 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 |
| 23 ₈ | 0 1 | 0 0 | 1 1 | 0 0 | 0 1 | 1 0 | 1 0 | 1 0 | 0 1 | 0 1 | 0 0 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 |
| 24 ₈ | 0 1 | 0 0 | 1 1 | 0 0 | 1 1 | 0 0 | 0 1 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 | 0 0 |
| 25 ₈ | 0 1 | 0 0 | 1 1 | 0 0 | 1 1 | 0 1 | 1 0 | 1 0 | 0 0 | 0 1 | 0 0 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 0 0 |
| 26 ₈ | 0 1 | 0 0 | 1 1 | 0 1 | 1 0 | 1 0 | 1 1 | 0 0 | 1 1 | 1 1 | 0 0 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 | 0 0 |
| 27 ₈ | 0 1 | 0 0 | 1 1 | 0 1 | 1 0 | 1 0 | 1 0 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 0 1 | 0 1 | 1 1 | 1 1 | 0 0 |
| 30 ₈ | 0 1 | 0 0 | 1 1 | 1 1 | 0 0 | 0 0 | 0 1 | 1 0 | 0 1 | 0 1 | 0 0 | 1 0 | 1 0 | 1 0 | 1 1 | 1 1 | 0 0 |
| 31 ₈ | 0 1 | 0 0 | 1 1 | 1 1 | 0 0 | 0 1 | 0 0 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 0 0 |
| 32 ₈ | 0 1 | 0 0 | 1 1 | 1 1 | 0 1 | 0 1 | 0 1 | 1 0 | 0 1 | 0 1 | 0 0 | 1 1 | 0 0 | 0 0 | 1 0 | 0 1 | 1 1 |
| 33 ₈ | 0 1 | 0 0 | 1 1 | 1 1 | 0 1 | 1 0 | 0 0 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 0 0 | 0 0 | 1 0 | 0 1 | 1 1 |
| 34 ₈ | 0 1 | 0 0 | 1 1 | 1 1 | 1 0 | 0 0 | 0 1 | 1 0 | 0 0 | 0 1 | 0 0 | 1 1 | 0 0 | 0 0 | 1 0 | 0 0 | 0 0 |
| 35 ₈ | 0 1 | 0 1 | 1 0 | 1 0 | 1 0 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 | 0 0 | 0 0 | 0 0 | 0 0 | 1 0 | 0 0 | 0 0 |
| 36 ₈ | 0 1 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | 0 1 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 0 0 | 0 0 | 1 0 | 0 0 | 0 0 |
| 37 ₈ | 0 1 | 0 1 | 1 0 | 1 0 | 1 0 | 1 0 | 0 0 | 1 0 | 0 1 | 0 1 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 |
| 40 ₈ | 0 1 | 1 1 | 0 0 | 0 0 | 0 0 | 0 0 | 0 1 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 0 0 |
| 41 ₈ | 0 1 | 1 1 | 0 0 | 0 0 | 0 0 | 0 1 | 0 0 | 0 0 | 1 1 | 1 1 | 0 0 | 1 1 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 |
| 42 ₈ | 0 1 | 1 1 | 0 0 | 0 0 | 0 0 | 1 1 | 0 1 | 0 1 | 1 0 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 |
| 43 ₈ | 0 1 | 1 1 | 0 0 | 0 0 | 1 0 | 0 0 | 0 0 | 0 0 | 0 0 | 1 1 | 0 0 | 1 1 | 0 0 | 0 0 | 0 0 | 1 0 | 0 0 |
| 44 ₈ | 0 1 | 1 1 | 0 0 | 0 0 | 1 1 | 0 1 | 1 1 | 0 0 | 1 1 | 1 1 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 | 1 0 | 0 0 |

LEGEND

LOAD
Enable = 1
Disable = 0

DAV
Low = 0 on bus DAV line
High = 1 on bus DAV line

NEXT QUAL. CODES
TIME/CAL = 0 0 0
SP/NO SPACE = 0 0 1
ERROR = 0 1 0
NRFD = 0 1 1
NDAC = 1 0 0
STORE = 1 0 1
C LINE 5 = 1 1 0
B LINE = 1 1 1

R_{out}
Enable RAM output = 0
Disable RAM output = 1

X = don't care

Table 5-6. A5U2 ROM Bit Pattern, Talk Enable = 0 (Continued)

| Present Address | Qual. | Next Address | | | | | | Next Qual. | | | Load | DAV | R _{out} | ROM/RAM Address | | | |
|--------------------------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|----------------|-----------------|------------------|-----------------|-----------------|-----------------|-----------------|
| I ₁ -I ₆ | I ₀ | O ₀ | O ₁ | O ₂ | O ₃ | O ₄ | O ₅ | O ₈ | O ₇ | O ₆ | O ₉ | O ₁₀ | O ₁₁ | O ₁₂ | O ₁₃ | O ₁₄ | O ₁₅ |
| 45 ₈ | 0 1 | 1 1 | 0 0 | 0 0 | 1 1 | 0 1 | 1 0 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 | 1 0 | 0 0 |
| 46 ₈ | 0 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 0 1 | 1 0 | 0 1 | 0 1 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 |
| 47 ₈ | 0 1 | 1 1 | 1 0 | 0 1 | 1 0 | 1 0 | 1 0 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 0 1 |
| 50 ₈ | 0 1 | 1 1 | 0 0 | 1 1 | 0 0 | 0 0 | 0 1 | 1 0 | 0 1 | 0 1 | 0 0 | 1 1 | 0 0 | 0 0 | 0 0 | 0 0 | 1 1 |
| 51 ₈ | 0 1 | 1 1 | 0 0 | 1 1 | 0 0 | 0 1 | 1 0 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 | 1 1 |
| 52 ₈ | 0 1 | 1 1 | 0 0 | 1 1 | 0 0 | 1 1 | 0 1 | 1 0 | 0 1 | 0 1 | 0 0 | 0 1 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 |
| 53 ₈ | 0 1 | 1 1 | 0 0 | 1 1 | 0 1 | 1 0 | 1 0 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 |
| 54 ₈ | 0 1 | 1 1 | 0 0 | 1 1 | 1 1 | 0 0 | 0 1 | 1 0 | 0 1 | 0 1 | 0 0 | 1 1 | 1 1 | 1 1 | 0 0 | 1 1 | 1 1 |
| 55 ₈ | 0 1 | 1 1 | 0 0 | 1 1 | 1 1 | 0 1 | 1 0 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 1 1 | 1 1 | 0 0 | 1 1 | 1 1 |
| 56 ₈ | 0 1 | 1 0 | 0 0 | 1 0 | 1 0 | 1 0 | 0 0 | 1 0 | 0 1 | 0 1 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 | 0 0 |
| 57 ₈ | 0 1 | 1 1 | 1 0 | 0 1 | 0 1 | 0 1 | 0 1 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 |
| 60 ₈ | 0 1 | 1 1 | 1 1 | 0 0 | 0 0 | 0 0 | 0 1 | 1 1 | 1 1 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 |
| 61 ₈ | 0 1 | 0 1 | 0 1 | 0 0 | 1 0 | 1 0 | 0 1 | 0 1 | 1 1 | 0 1 | 1 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 |
| 62 ₈ | 0 1 | 1 1 | 1 1 | 0 0 | 0 0 | 1 1 | 0 1 | 0 1 | 1 0 | 1 0 | 0 0 | 0 0 | 1 1 | 1 1 | 0 0 | 1 1 | 0 0 |
| 63 ₈ | 0 1 | 1 1 | 1 1 | 0 0 | 0 1 | 1 0 | 0 0 | 1 0 | 0 1 | 0 1 | 0 0 | 1 1 | 1 1 | 1 1 | 0 0 | 1 1 | 0 0 |
| 64 ₈ | 0 1 | 1 1 | 1 1 | 0 0 | 1 1 | 0 0 | 0 1 | 0 0 | 1 0 | 1 0 | 0 0 | 0 0 | 1 1 | 1 1 | 0 0 | 1 1 | 0 0 |
| 65 ₈ | 0 1 | 0 0 | 1 0 | 1 1 | 0 1 | 0 0 | 0 0 | 1 1 | 0 0 | 0 0 | 0 0 | 0 0 | 1 1 | 1 1 | 0 0 | 1 1 | 0 0 |
| ZZ ₈ | X | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 | 1 0 | 0 1 | 0 1 | 0 0 | 0 0 | 1 1 | 1 1 | 1 1 | 1 1 | 1 1 |

Where ZZ₈ is any address greater than 65₈

LOAD

Enable = 1

Disable = 0

DAV

Low = 0 on bus DAV line

High = 1 on bus DAV line

NEXT QUAL. CODES

TIME/CAL = 0 0 0

SP/NO SPACE = 0 0 1

ERROR = 0 1 0

NRFD = 0 1 1

NDAC = 1 0 0

STORE = 1 0 1

C LINE 5 = 1 1 0

B LINE = 1 1 1

R_{out}

Enable RAM output = 0

Disable RAM output = 1

X = don't care

NOTE

This ROM uses positive Logic (i.e., 1 = High, 0 = Low). $\overline{\text{DAV}}$ is a negative Logic Signal name.

5-14. OPERATIONAL FLOWCHARTS

5-15. The operational flowcharts shown in *Figures 5-1* and *5-2* describe the sequence of operation of the A5U2 State Machine ROM. This ROM controls the talk output of the Model 59309A Digital Clock.

5-16. The octal numbers shown in the flowcharts represent the present address (octal) of the operation. This address can be correlated to the PRESENT ADDRESS shown in *Table 5-5* and *Table 5-6*. The column headings of *Tables 5-5* and *5-6* are the inputs and outputs of ROM A5U2 shown in the schematic diagram, *Figure 8-7*. The bit pattern in *Tables 5-5* and *5-6* can be displayed on an HP 1601A/182C Logic State Display with Oscilloscope. The display can then be compared with the bit pattern in *Tables 5-5* and *5-6* and with the flowchart to determine if State Machine A5U2 is operating properly.

5-17. The rectangular blocks in the flowcharts are process symbols which indicate performance of an operation by the ROM. The diamond symbols are decision blocks which interrogate the state of the named qualifier. The notes adjacent to the symbols describe the overall function performed at each point in the flowchart. All signal names are positive logic names except where noted.

5-18. The flowchart operation starts with *Figure 5-1 A5U2 Talk Disabled Flowchart* when the Talk Enable Signal is a logic 1. When the Talk Enable Signal is a logic 0, flowchart operation starts with *Figure 5-2 A5U2 Talk Enabled Flowchart*. The program jumps from one flowchart to the other when the state of the Talk Enable Signal changes. The program will jump to the same address with two exceptions, as follows:

- a. Address 57_8 , 60_8 , and 61_8 on the Talk Enable Flowchart will jump to 05_8 , 06_8 , and 07_8 respectively on the Talk Disable Flowchart.
- b. Address 05_8 , 06_8 , and 07_8 on the Talk Disable Flowchart will jump to 57_8 , 60_8 , and 61_8 on the Talk Enable Flowchart.

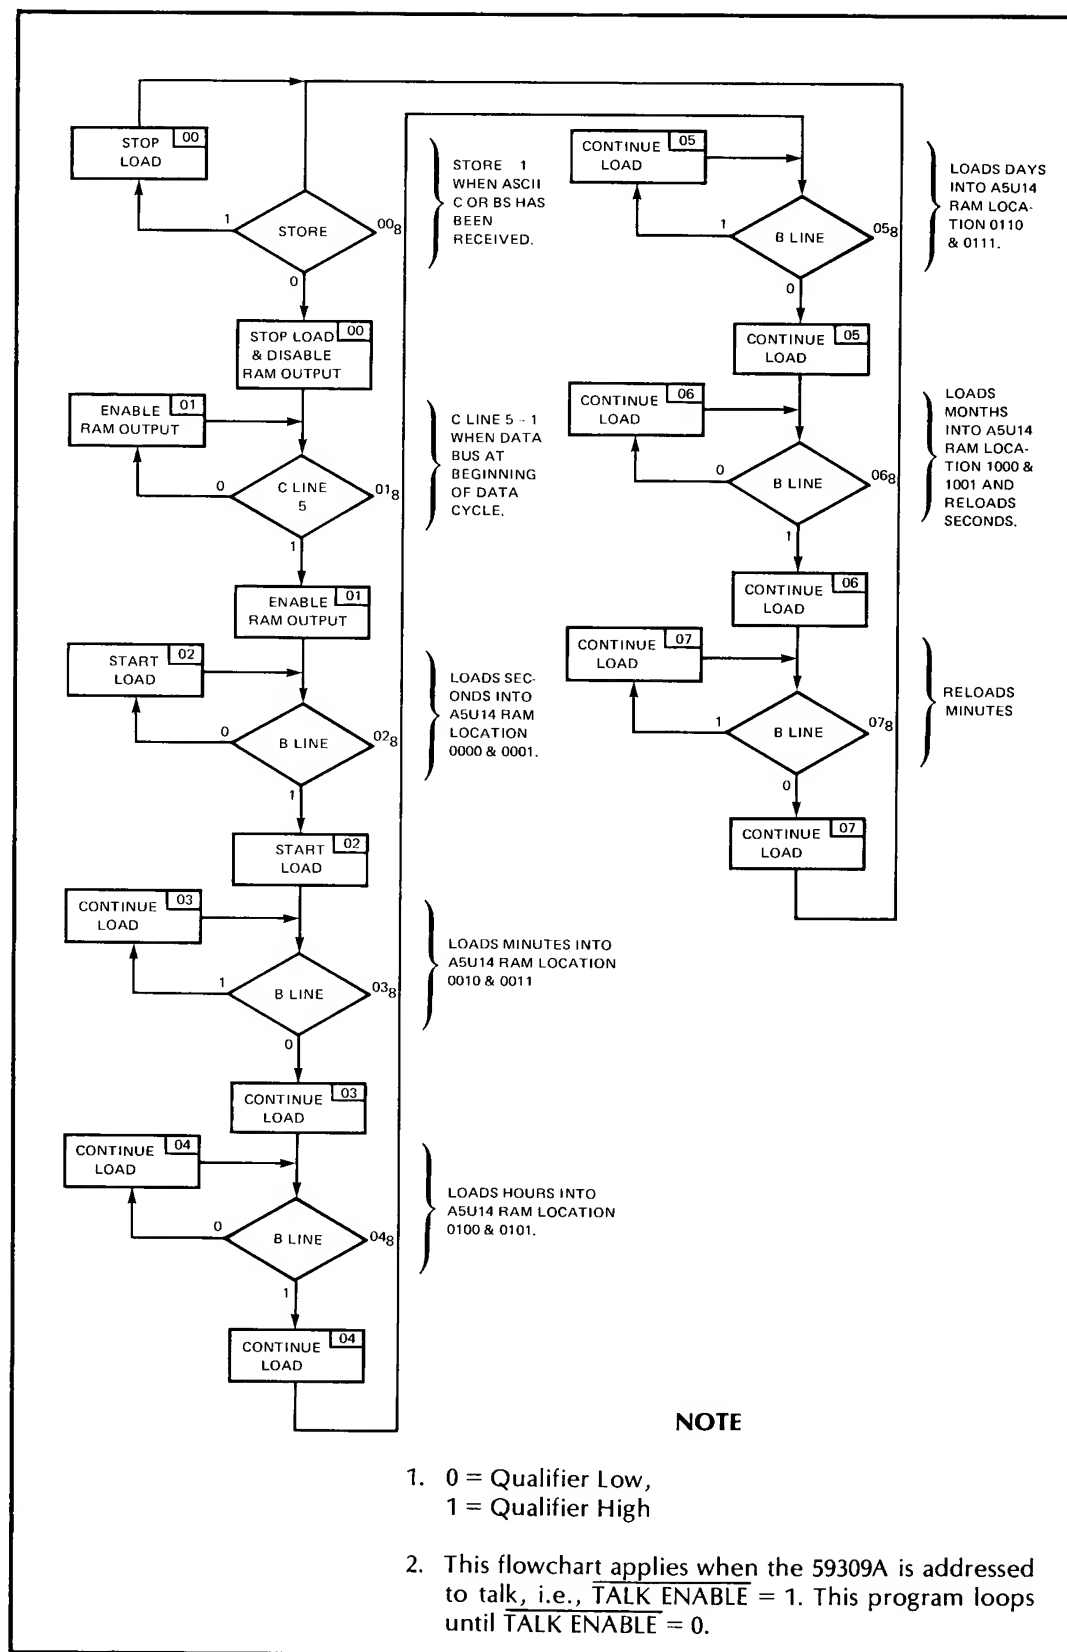


Figure 5-1. A5U2 Talk Disabled Flowchart

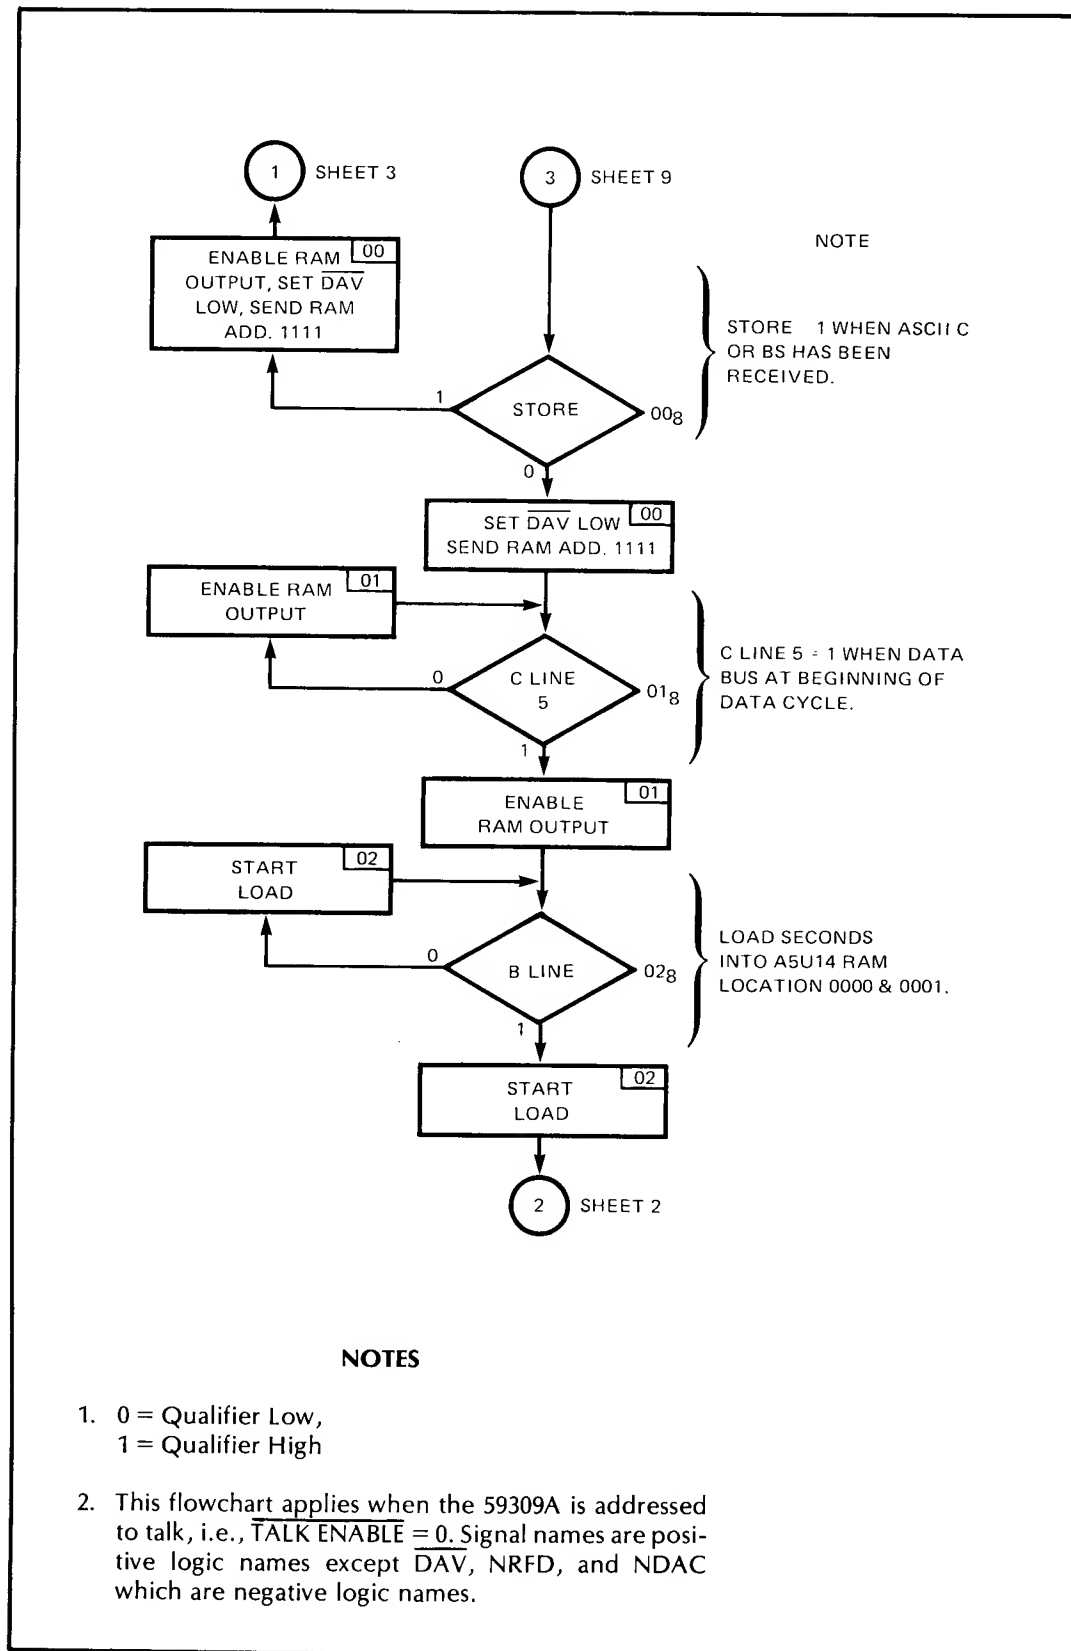


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 1

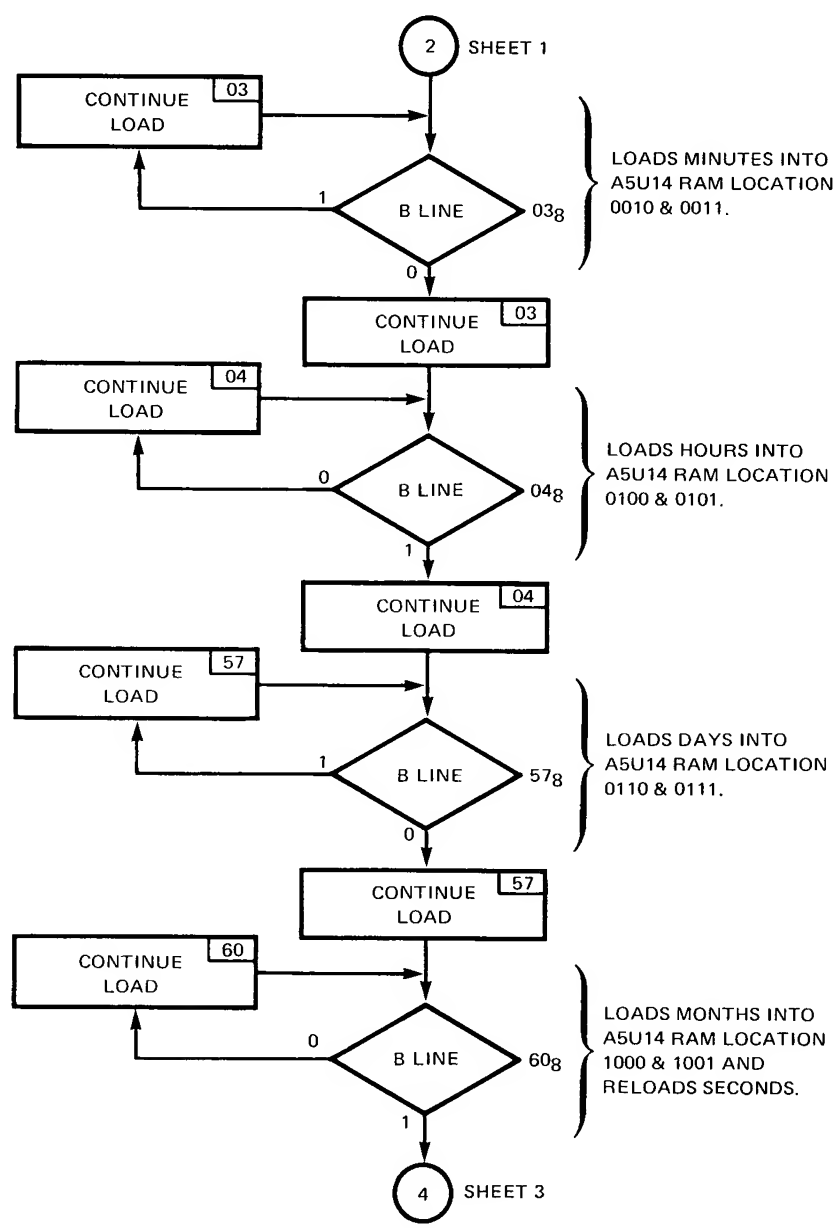


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 2

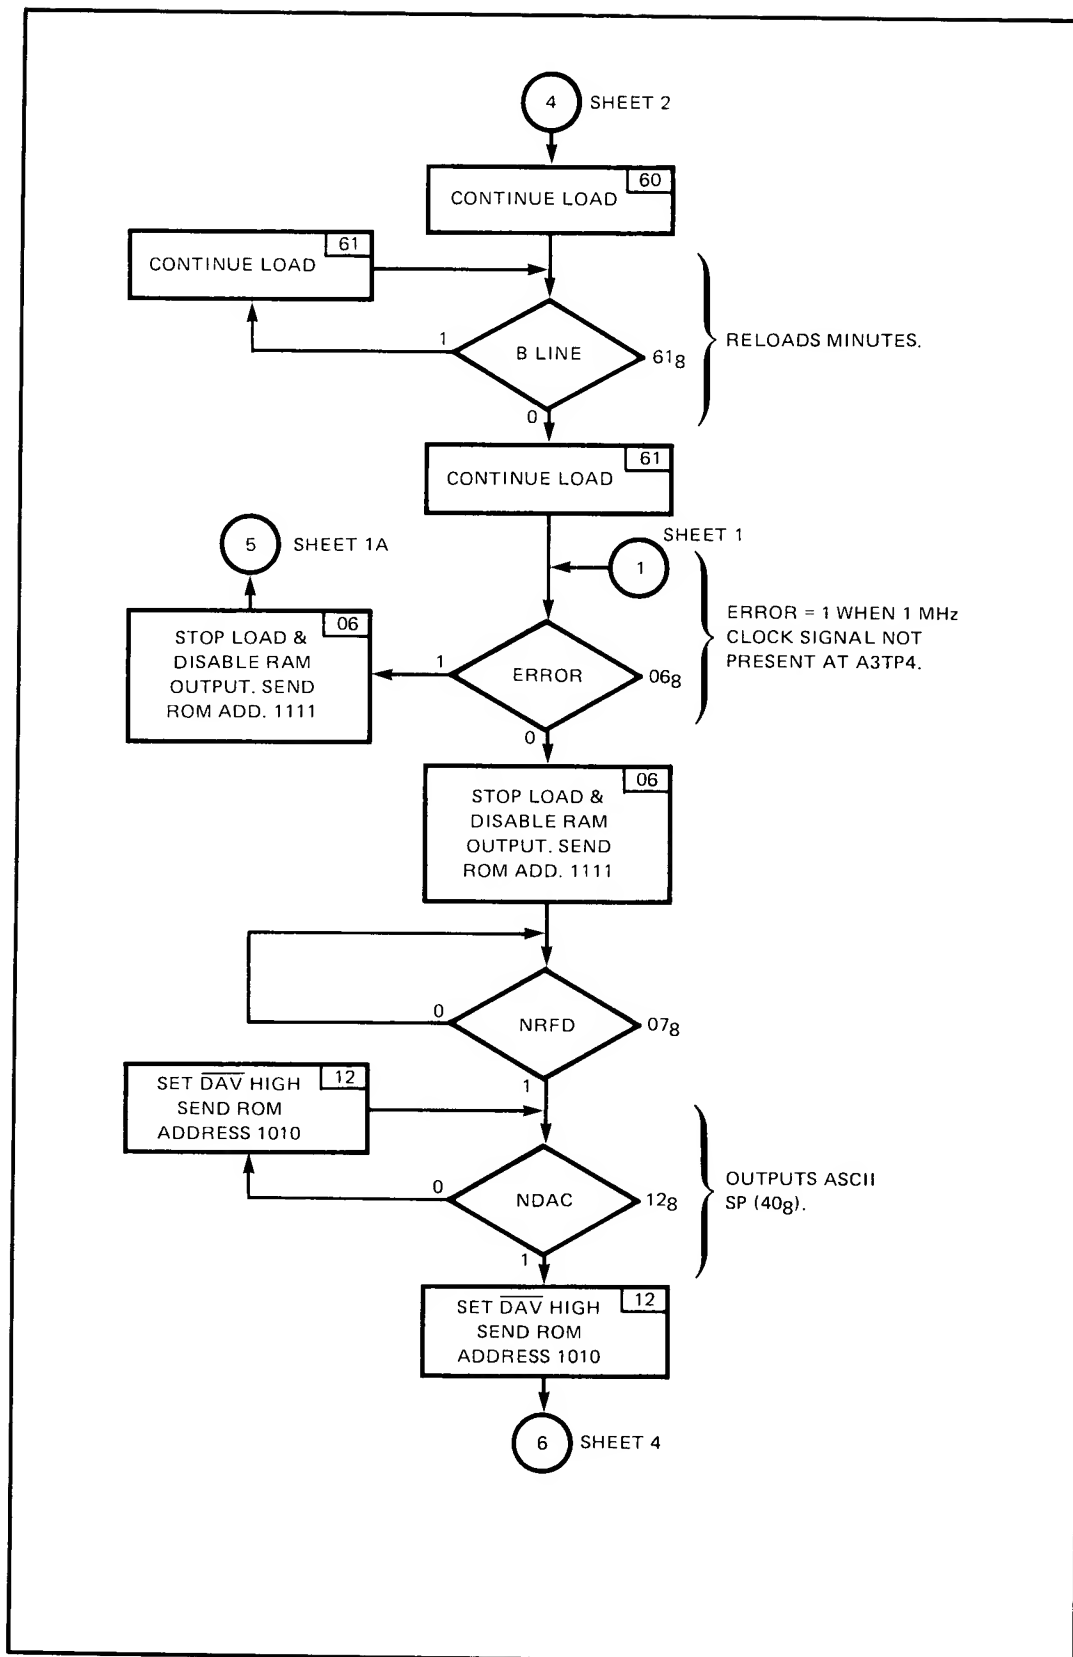


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 3

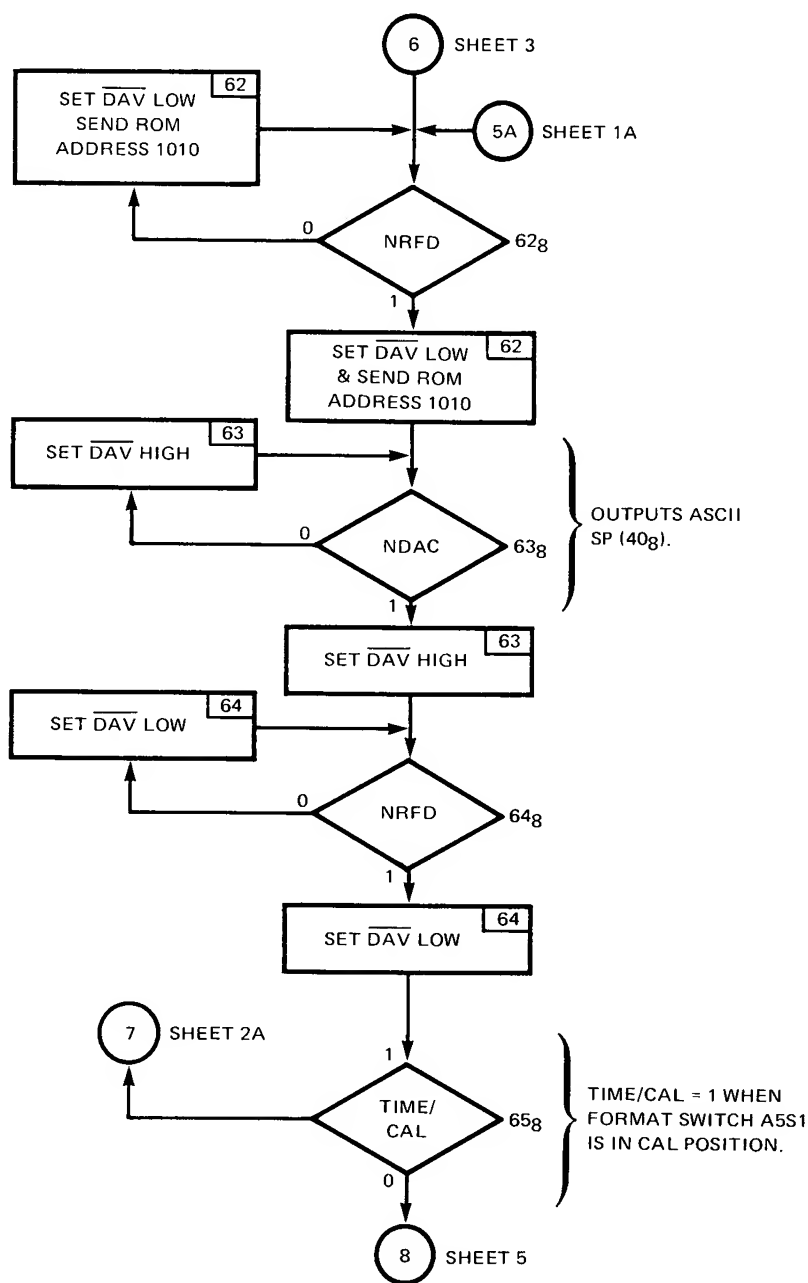


Figure 5-2. ASU2 Talk Enable Flowchart, Sheet 4

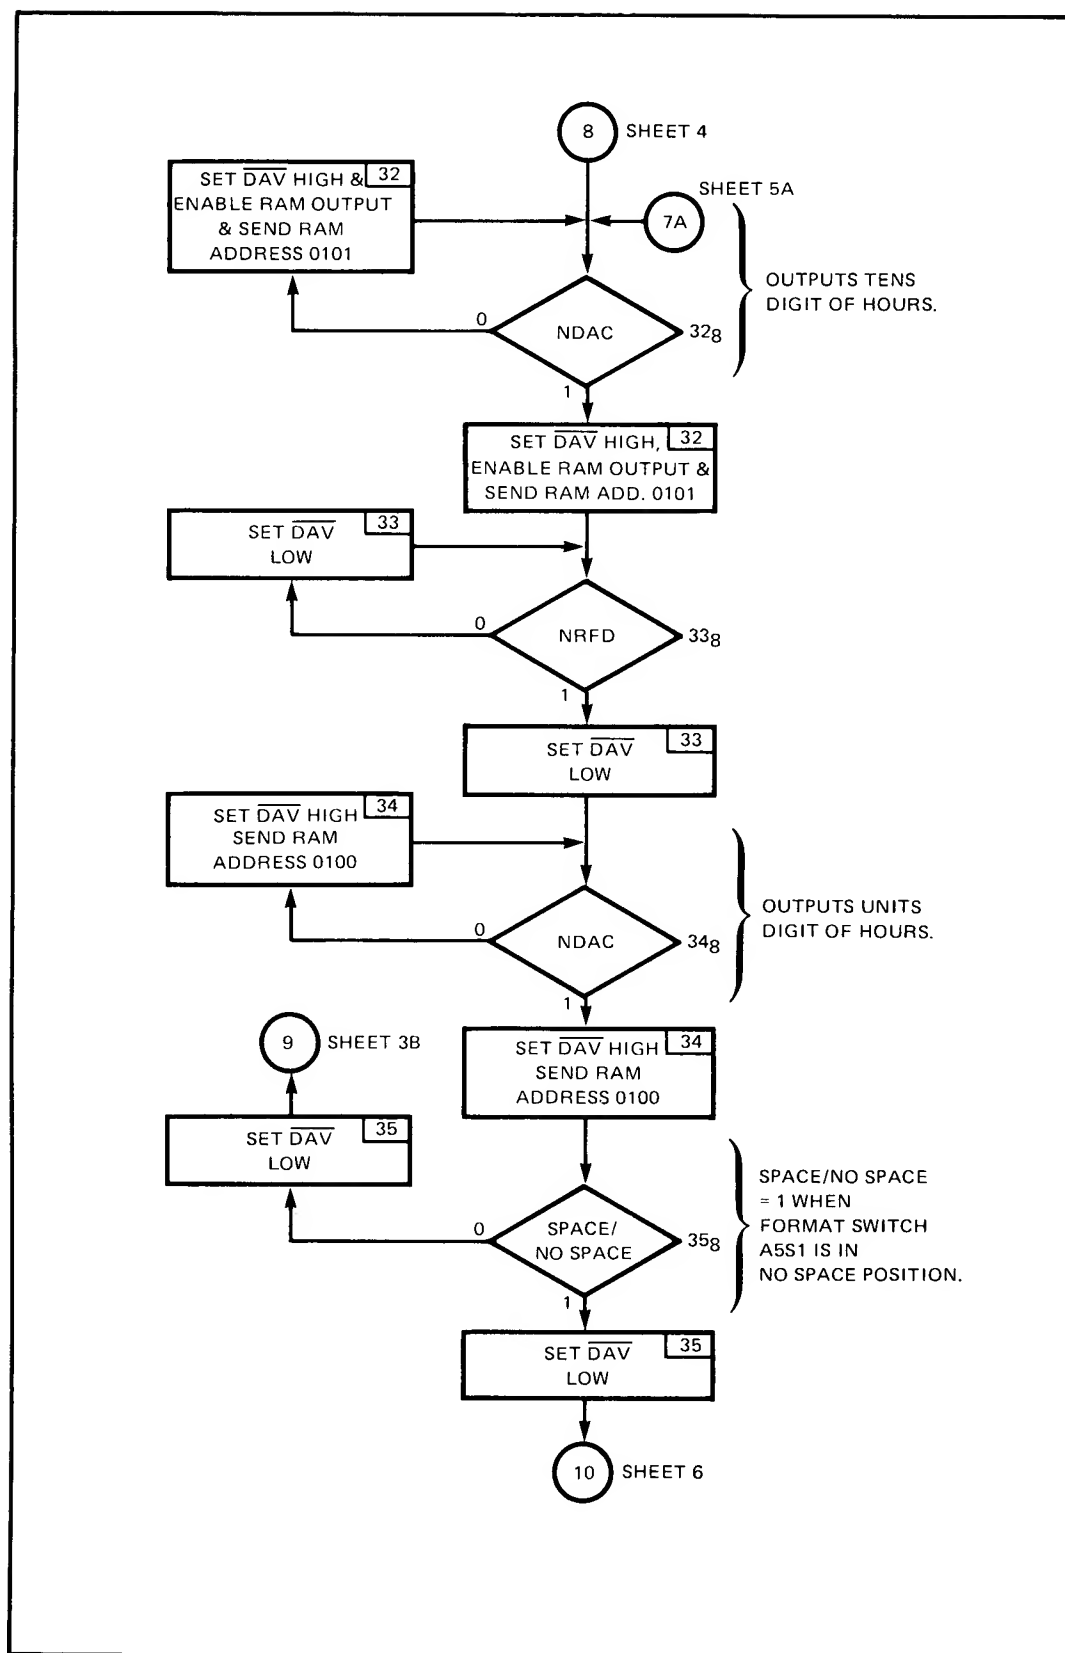
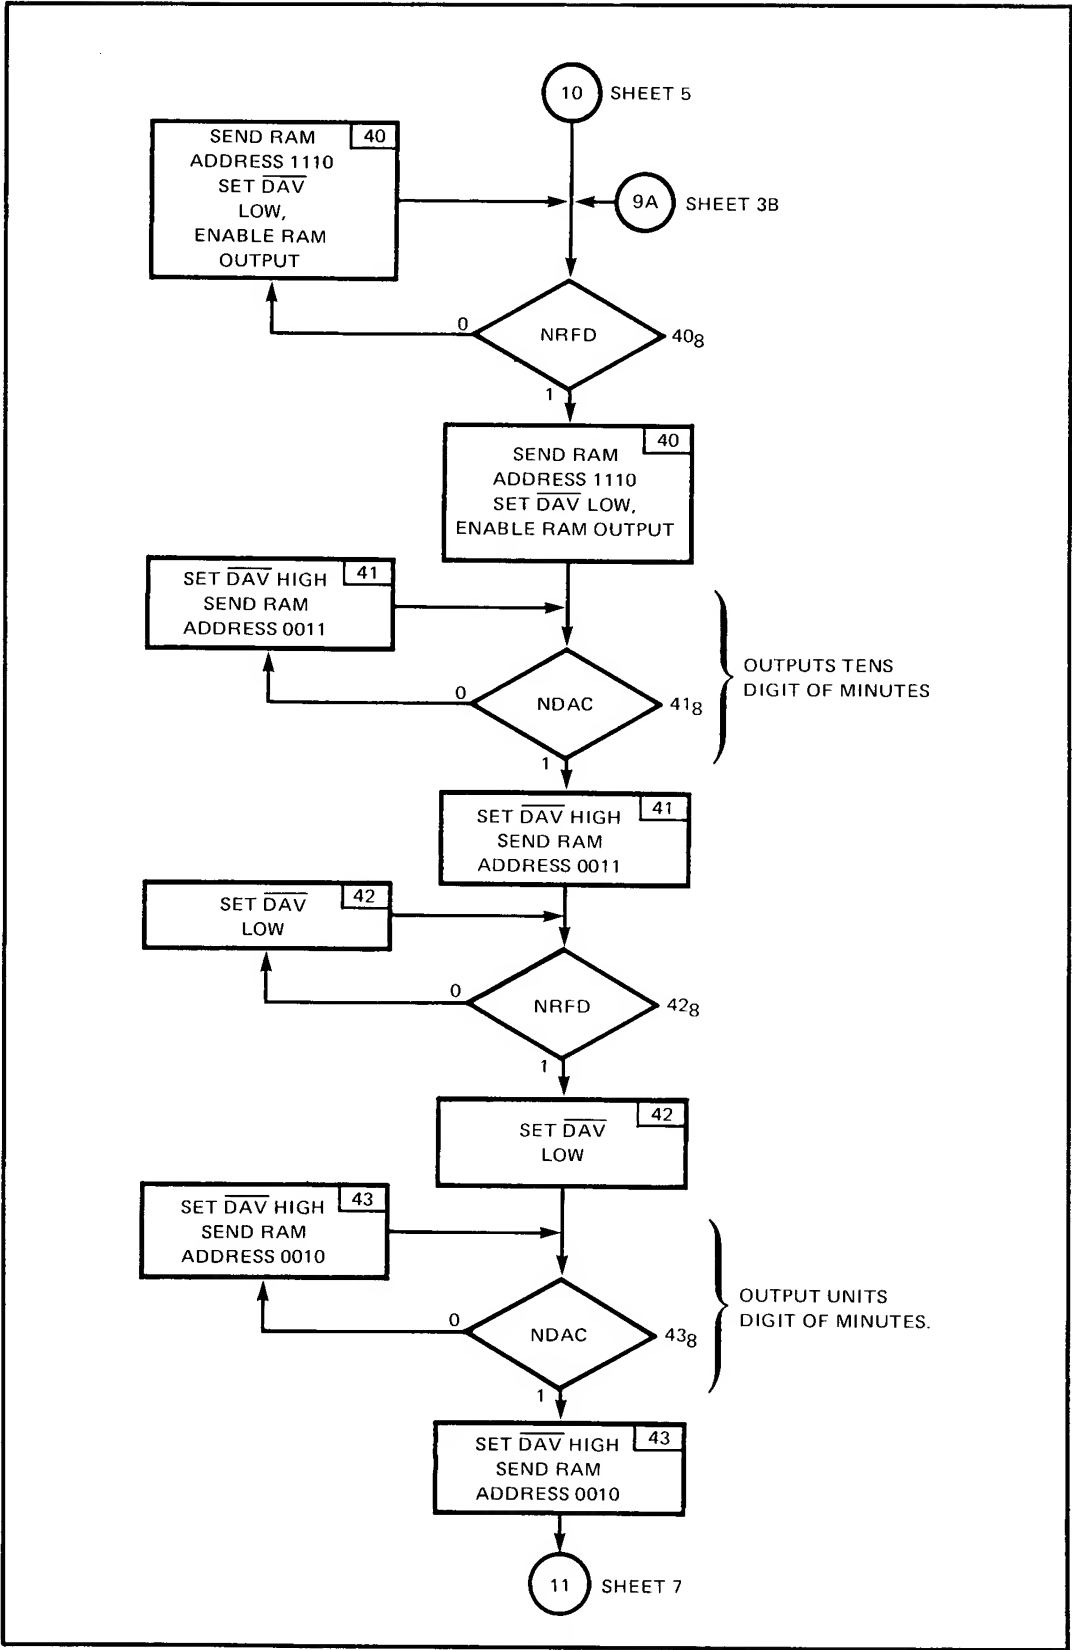


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 5



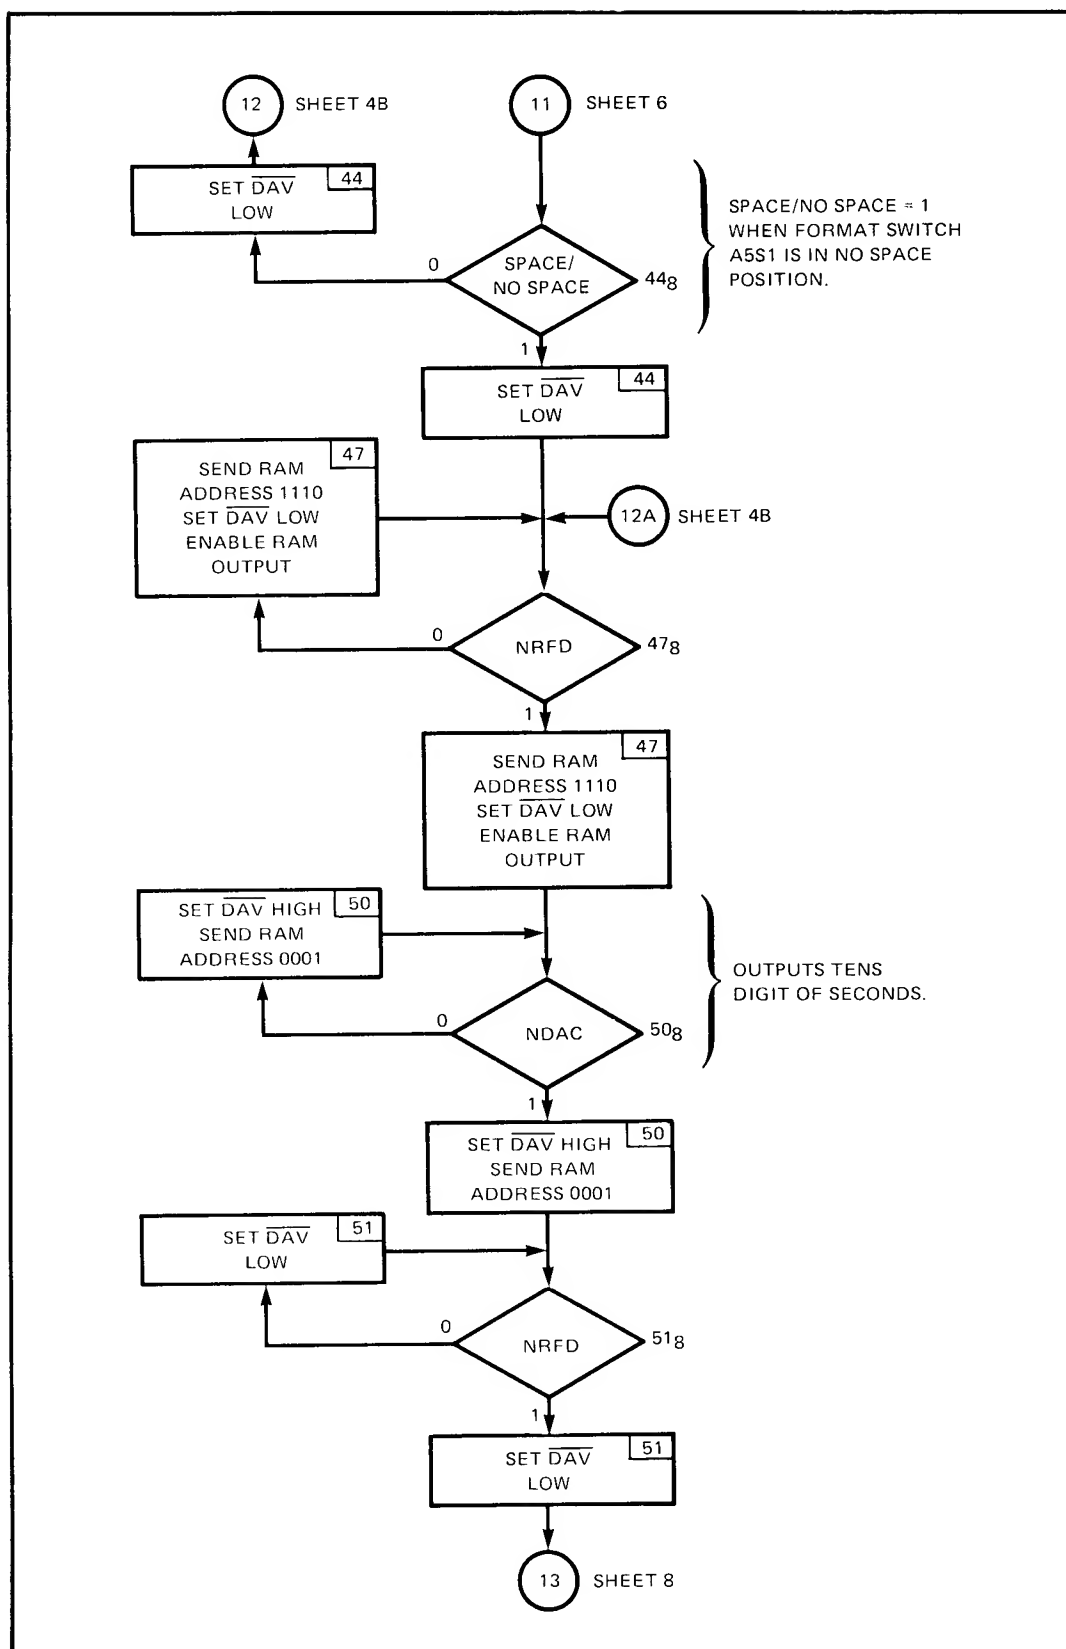


Figure 5-2. ASU2 Talk Enable Flowchart, Sheet 7

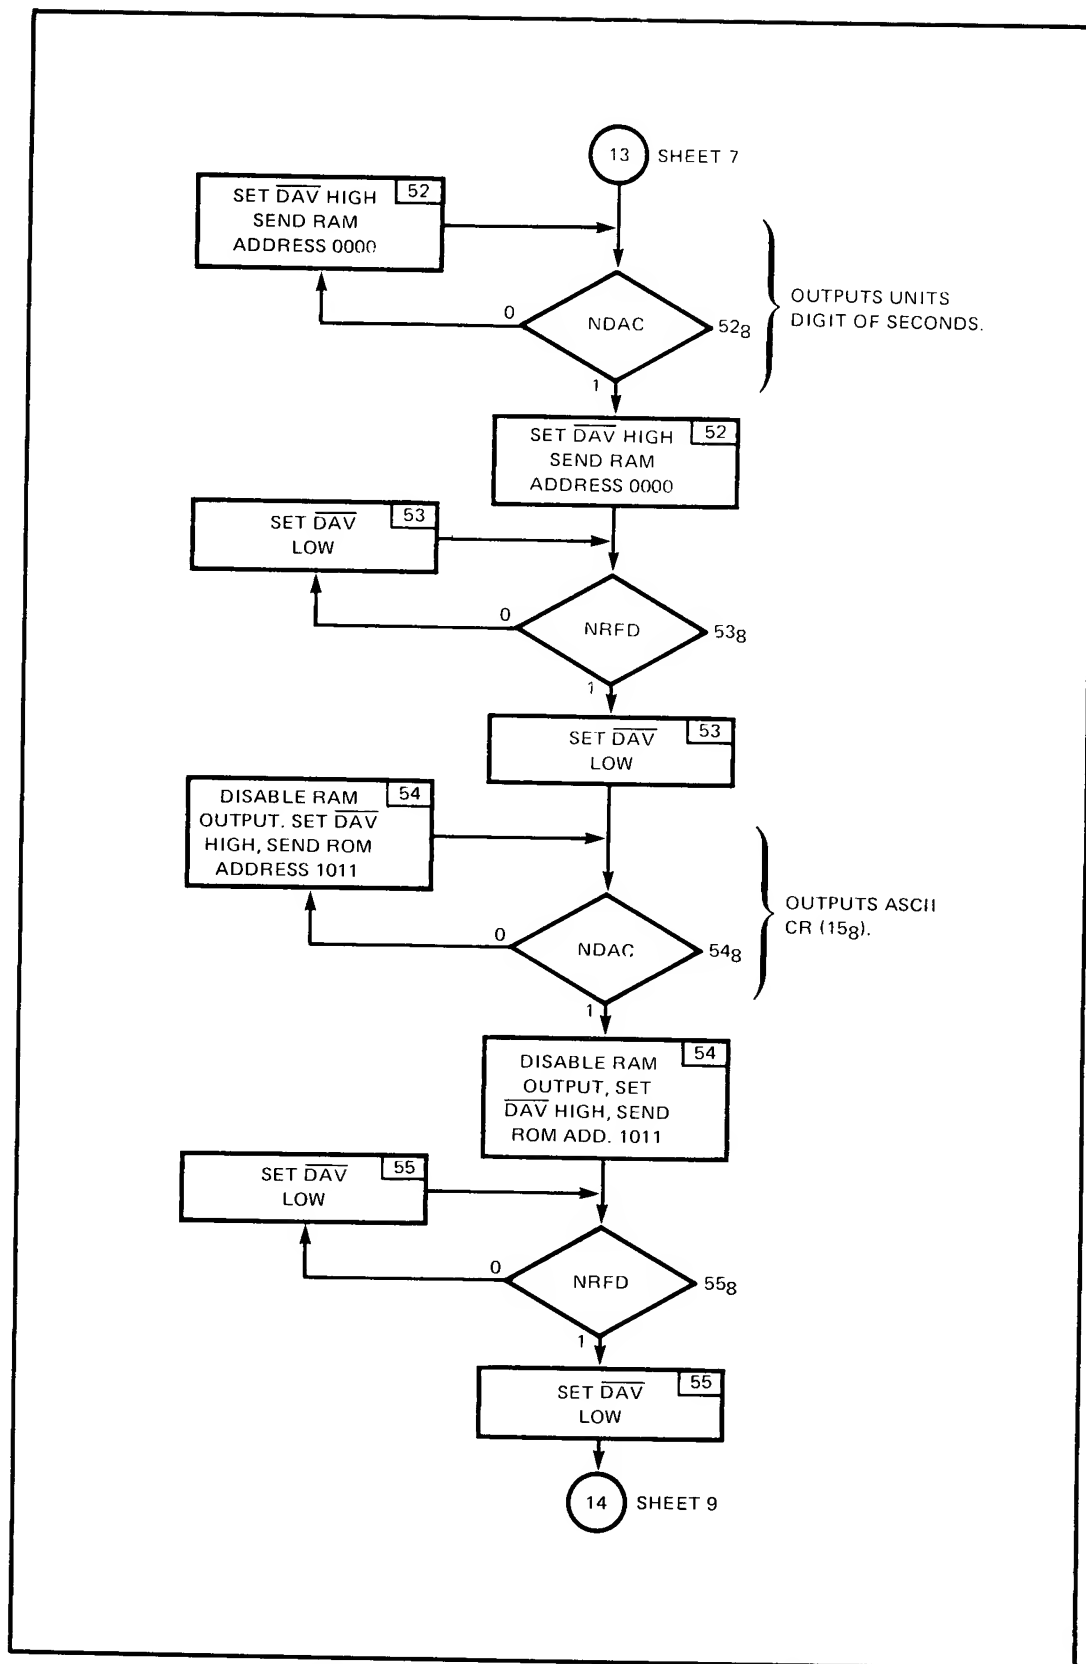


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 8

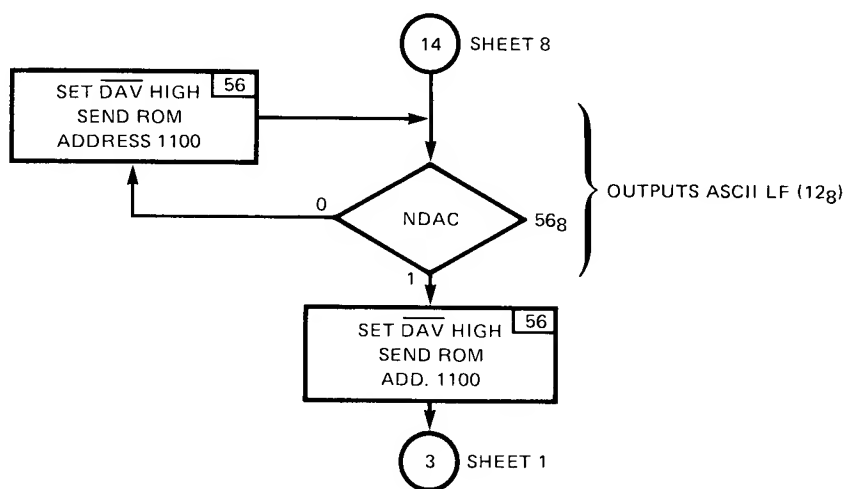


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 9

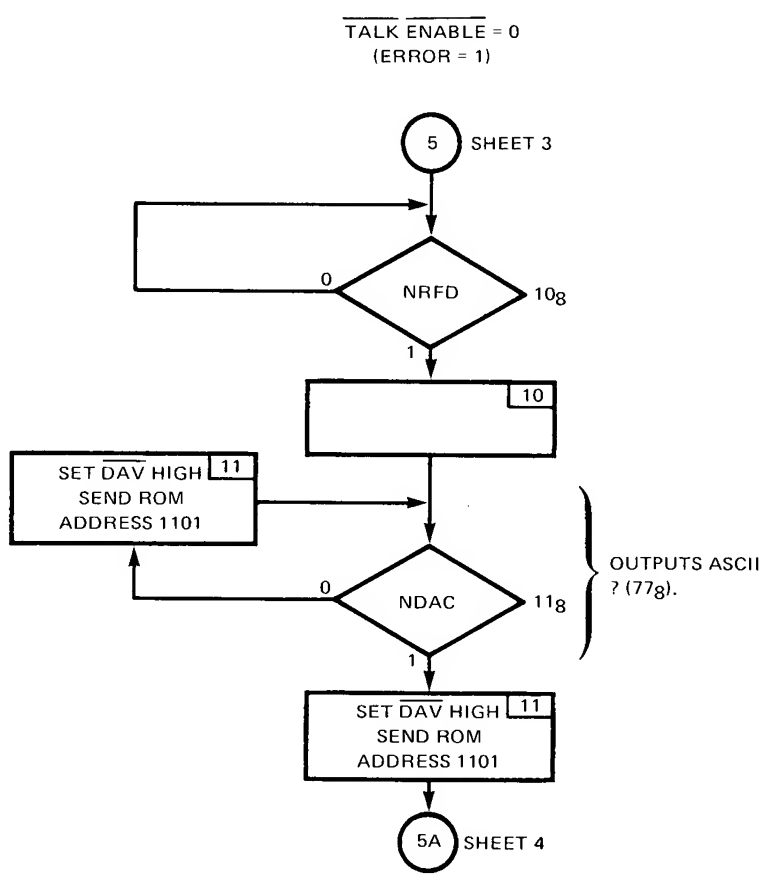


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 1A

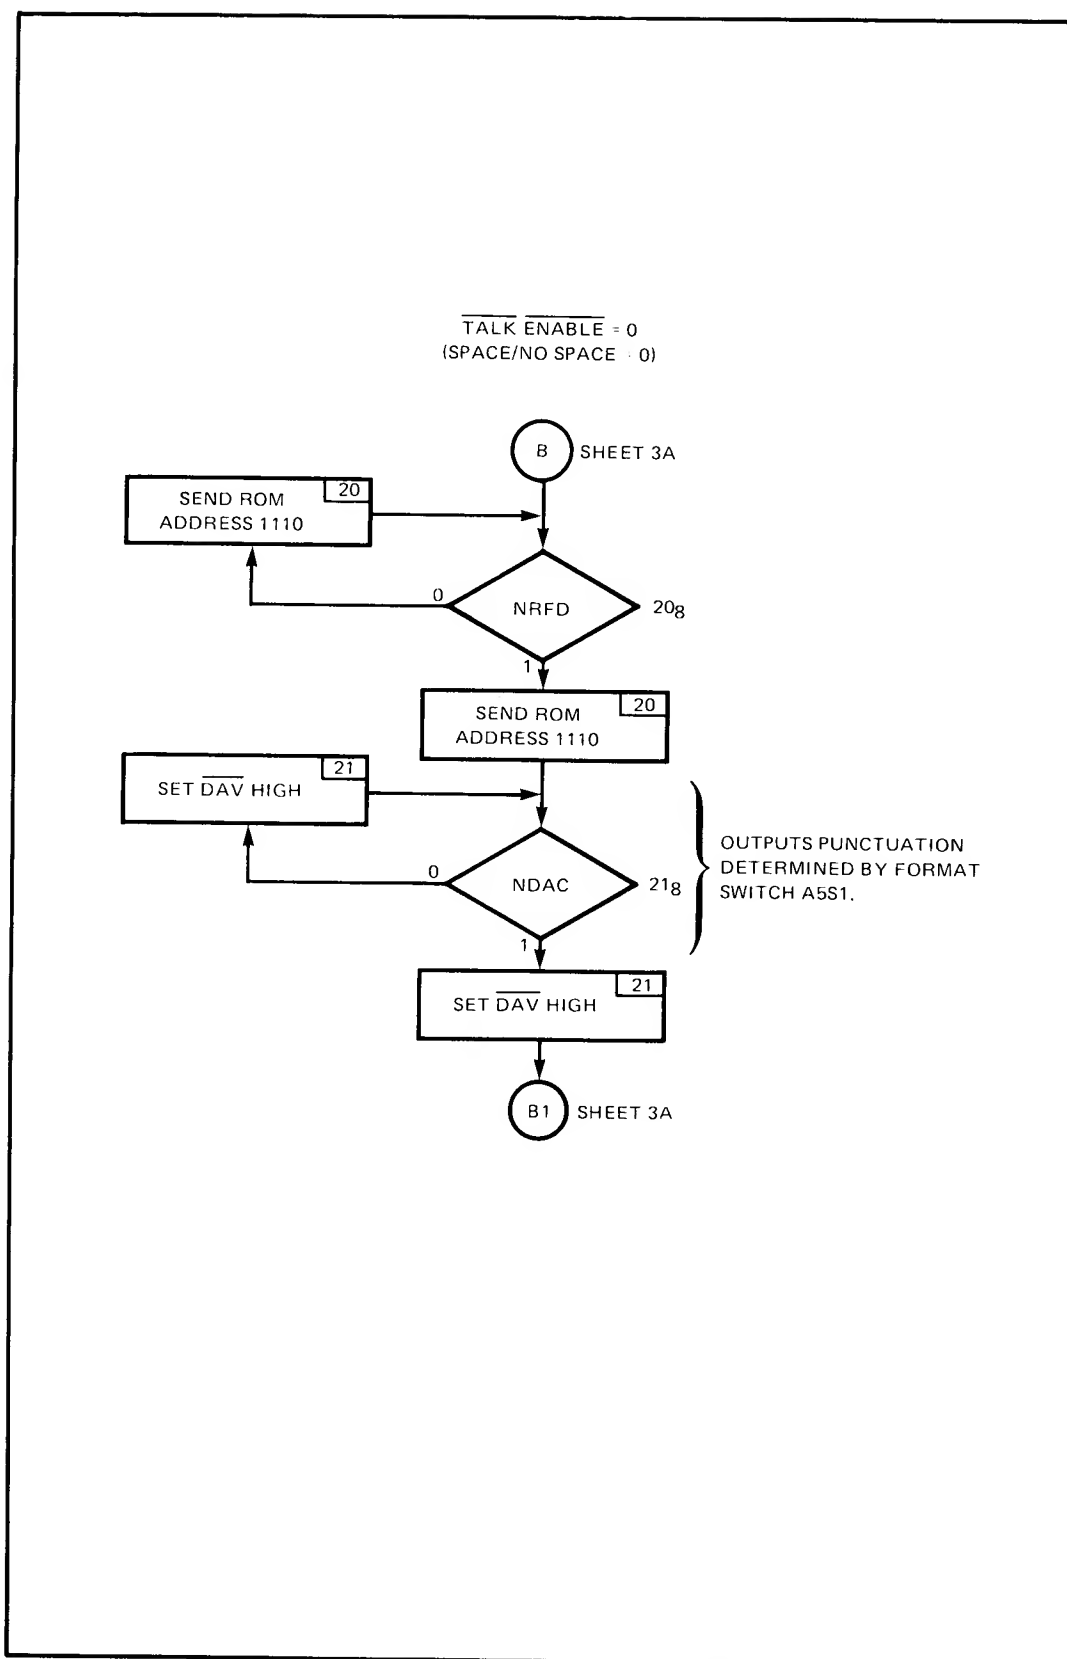


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 1B

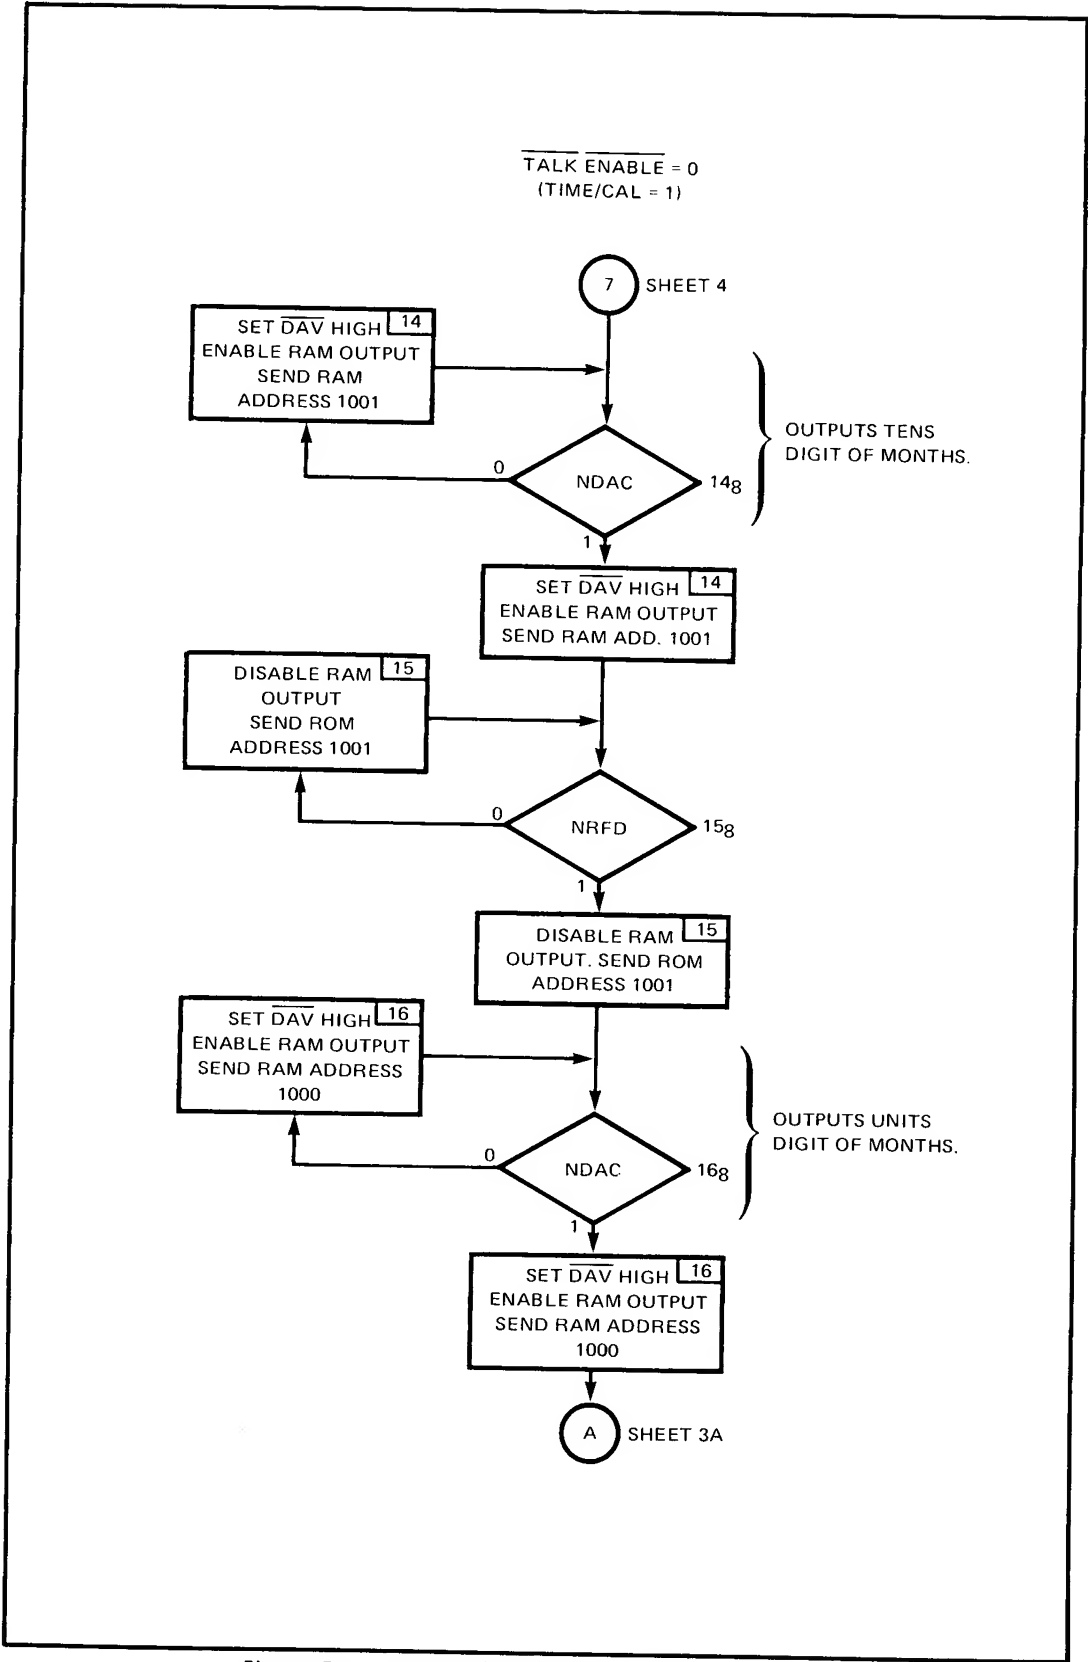


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 2A

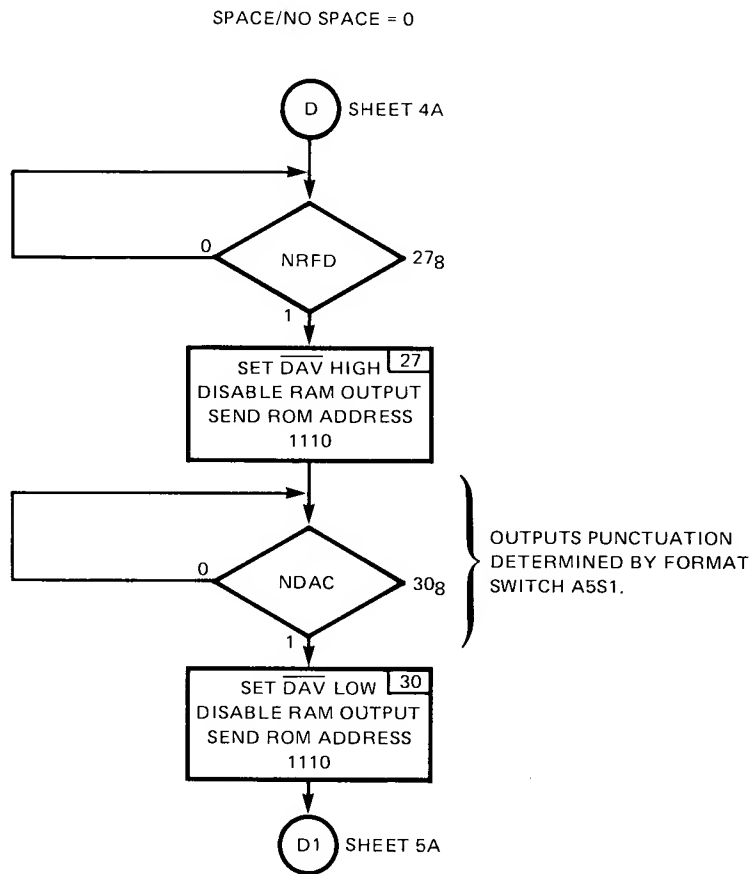


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 2B

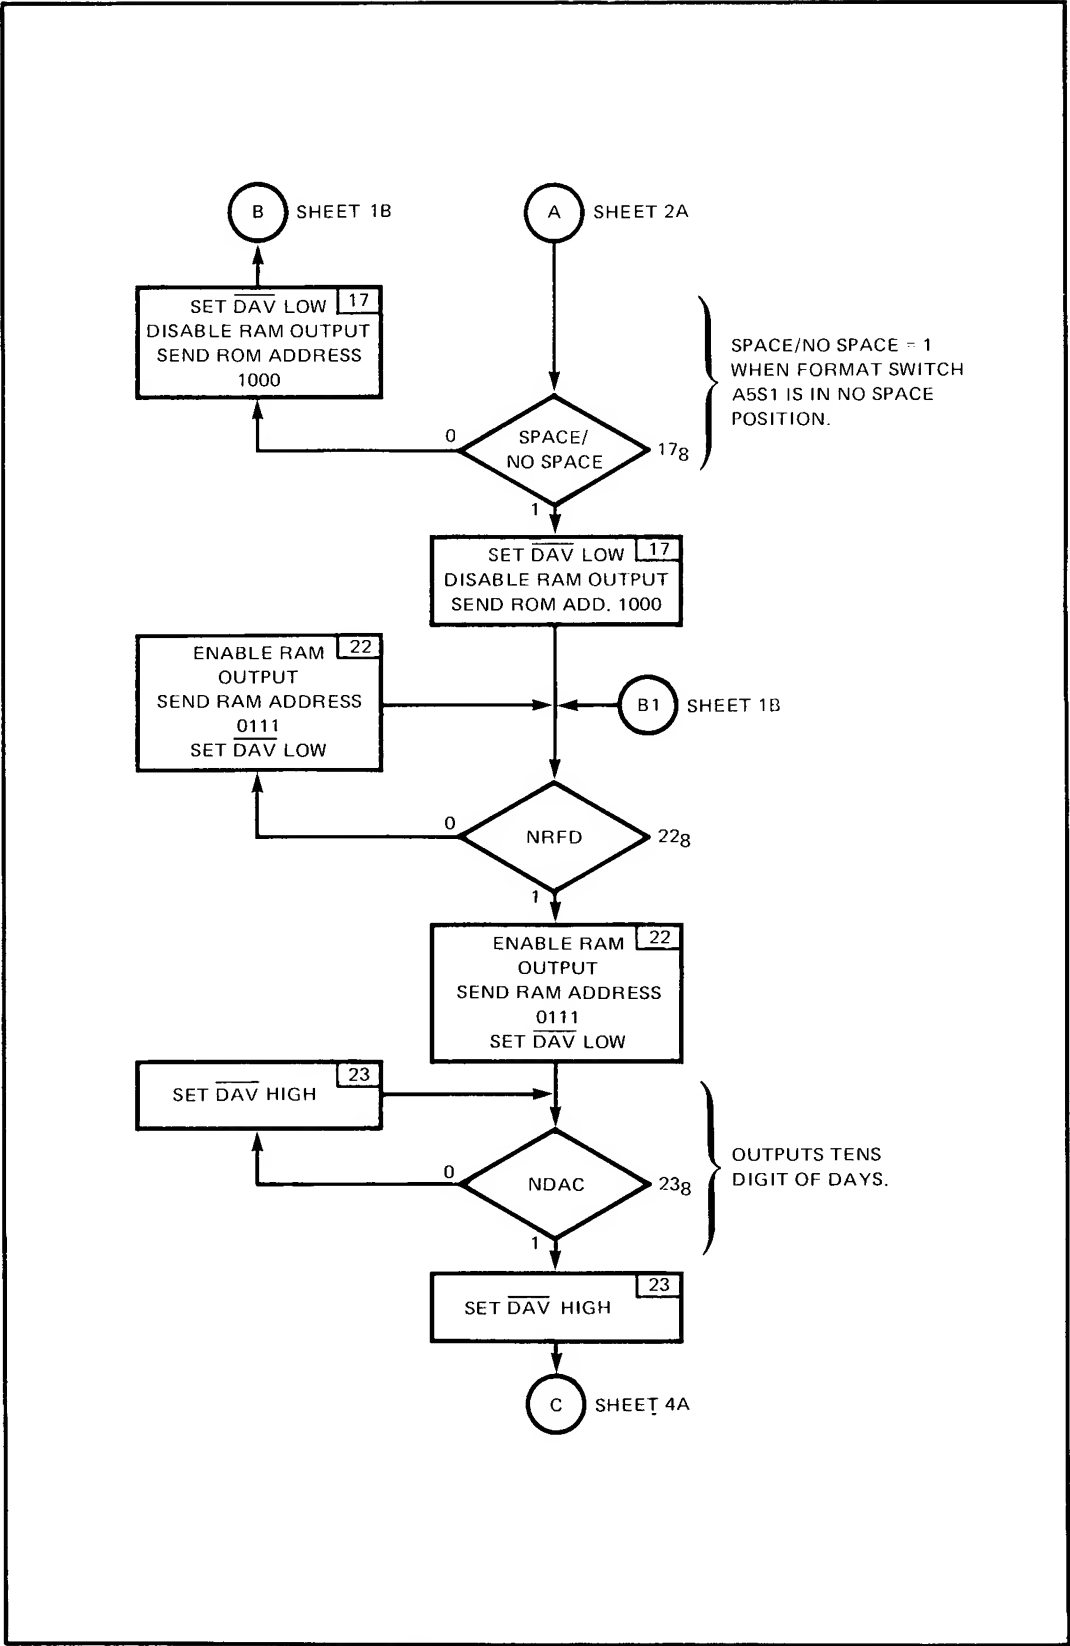


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 3A

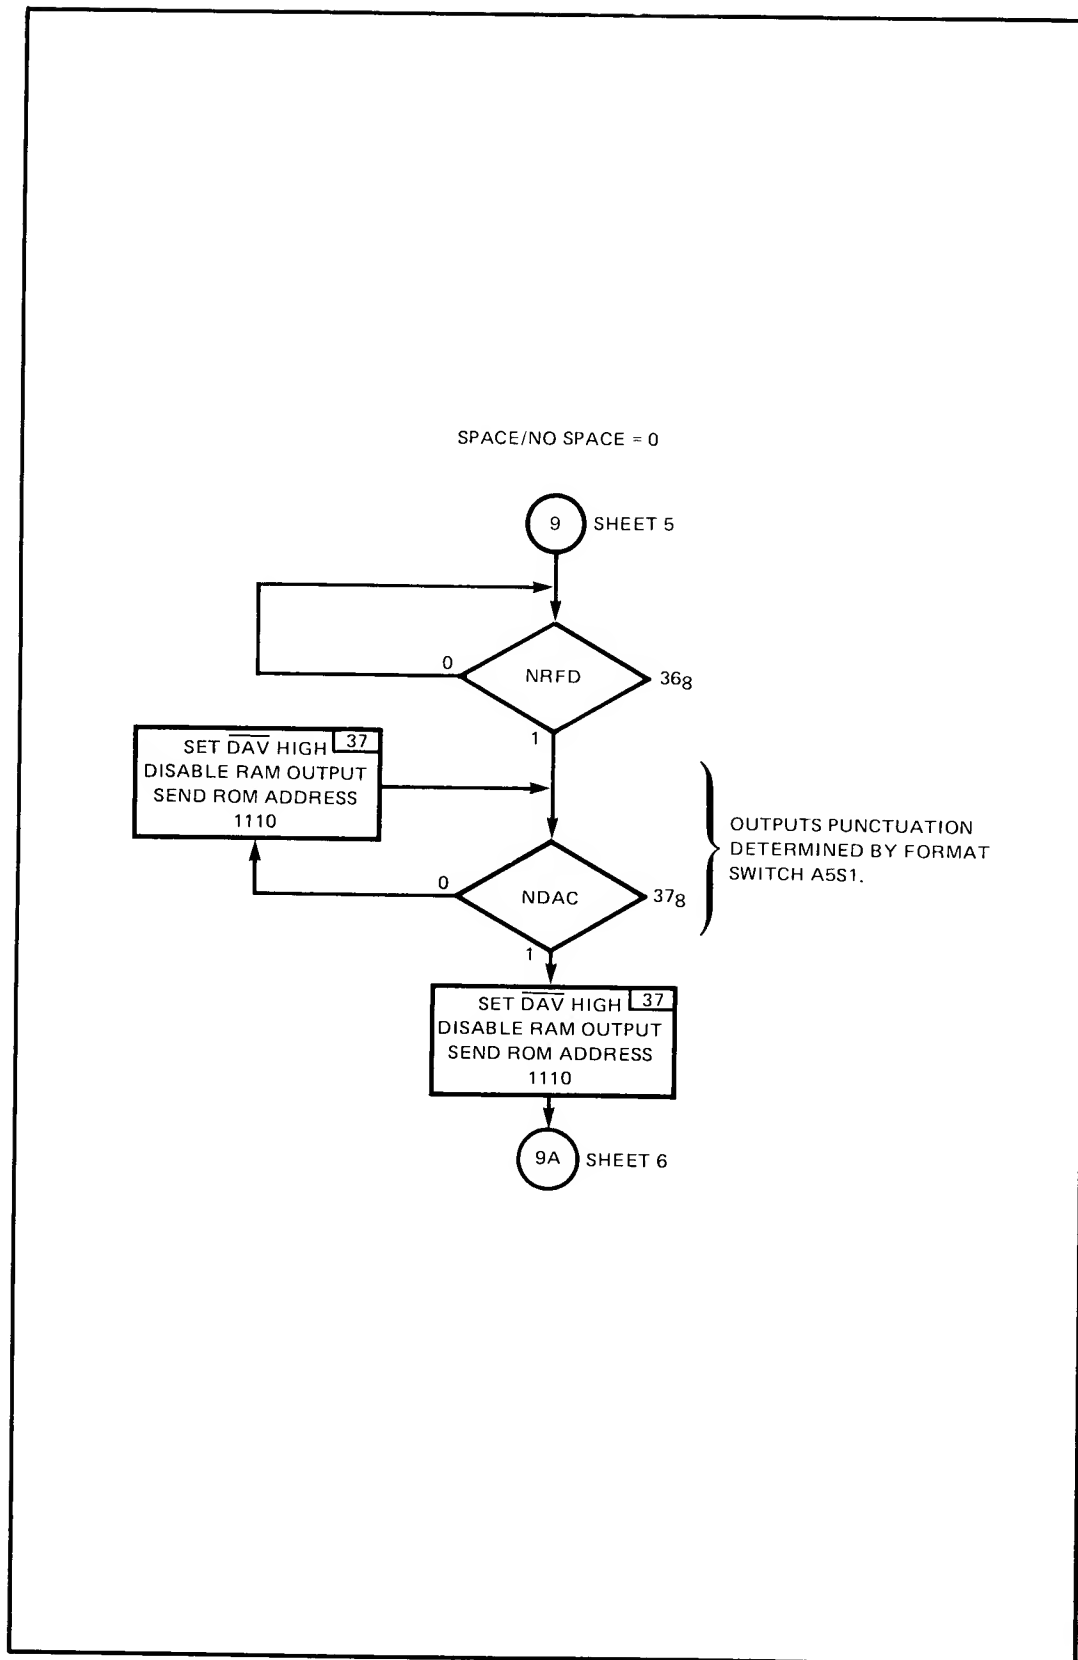


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 3B

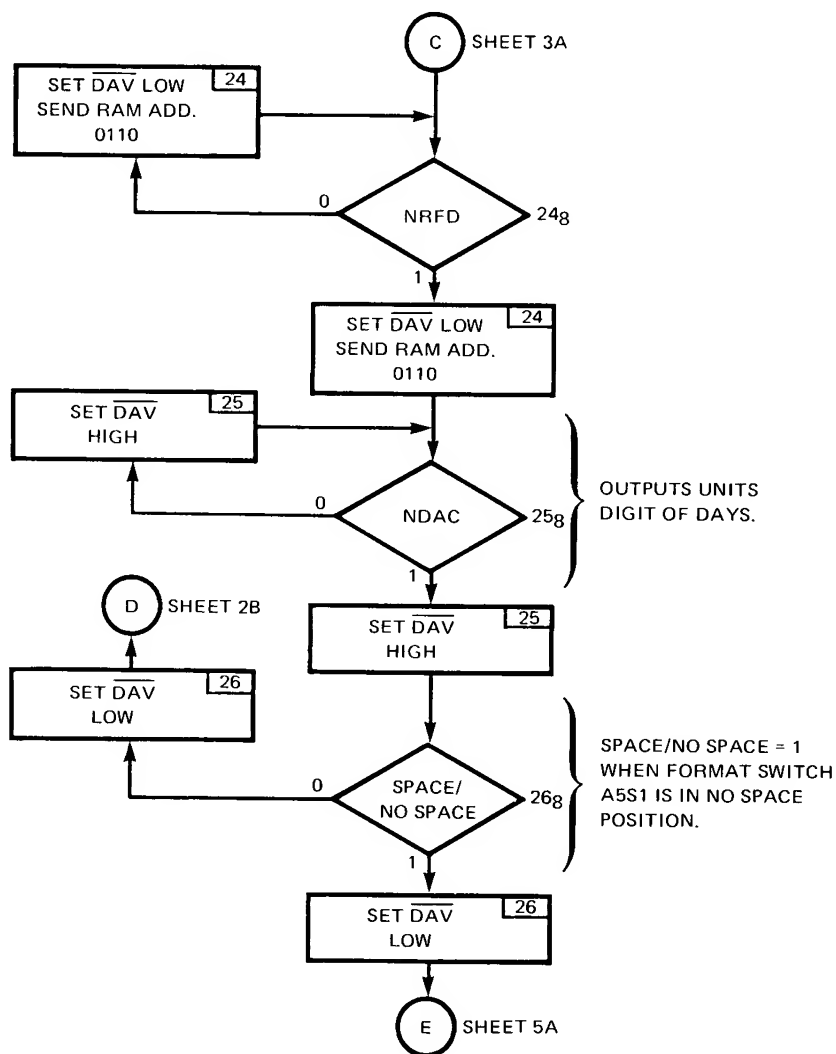


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 4A

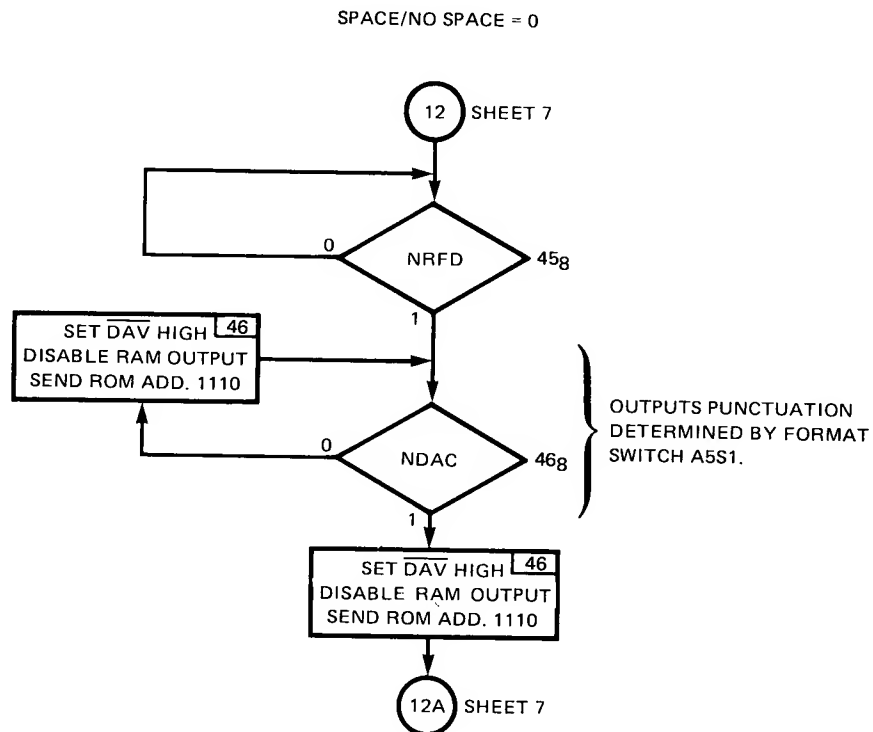


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 4B

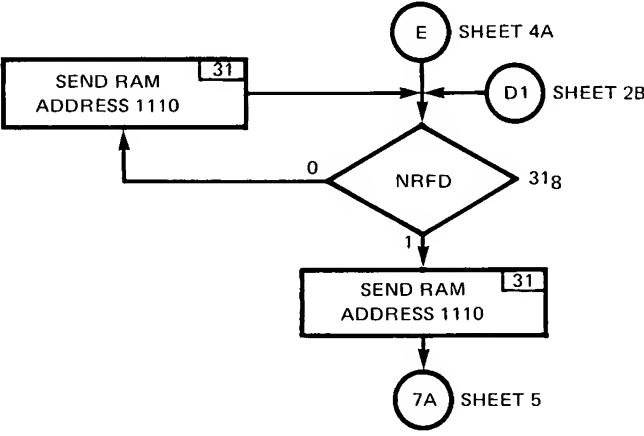


Figure 5-2. A5U2 Talk Enable Flowchart, Sheet 5A

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION

6-2. This section contains information for ordering replaceable parts for the 59309A. *Tables 6-1 and 6-2* list cabinet parts and replaceable parts respectively. *Table 6-3* contains a list of manufacturers of the replaceable parts and their respective code numbers. *Figure 6-1* identifies the cabinet parts.

6-3. Parts are listed in alpha-numeric order of their reference designator starting with A and ending with chassis and miscellaneous parts. The replaceable parts table includes the following information.

- a. Reference designator (when applicable).
- b. HP part number.
- c. Total quantity (Qty) used in the instrument.
- d. Description of the part (see abbreviations below).
- e. Manufacturers code number.
- f. Manufacturers part number.

REFERENCE DESIGNATIONS

| | | | | | | | |
|----|--|----|--|----|---|----|---------------------------------------|
| A | = assembly | E | = miscellaneous electrical part | P | = electrical connector (movable portion). | V | = electron tube |
| AT | = attenuator, isolator, termination | F | = fuse | Q | = plug transistor, SCR, triode | VR | = voltage regulator, break-down diode |
| B | = fan, motor | FL | = filter | R | = thyristor | W | = cable, transmission path, wire |
| BT | = battery | H | = hardware | S | = resistor | X | = socket |
| C | = capacitor | HY | = circulator | RT | = thermistor | Y | = crystal unit-piezo-electric |
| CP | = coupler | J | = electrical connector (stationary portion). | S | = switch | Z | = tuned cavity, tuned circuit |
| CR | = diode, diode thyristor, varactor | K | = jack | T | = transformer | | |
| DC | = directional coupler | L | = relay | TB | = terminal board | | |
| DL | = delay line | M | = coil, inductor | TC | = thermocouple | | |
| DS | = annunciator, signaling device (audible or visual), lamp, LED | MP | = meter | TP | = test point | | |
| | | | = miscellaneous mechanical part | U | = integrated circuit, microcircuit | | |

ABBREVIATIONS

| | | | | | | | |
|--------|-------------------------------|-------|-----------------------------|-------|---|------|---------------------------------|
| A | = ampere | BAL | = balance | COEF | = coefficient | °C | = degree Celsius |
| ac | = alternating current | BCD | = binary coded decimal | COM | = common | | (centigrade) |
| ACCESS | = accessory | BD | = board | COMP | = composition | °F | = degree Fahrenheit |
| ADJ | = adjustment | BE CU | = beryllium copper | COMPL | = complete | °K | = degree Kelvin |
| A/D | = analog-to-digital | BFO | = beat frequency oscillator | CONN | = connector | DEPC | = deposited carbon |
| AF | = audio frequency | | | CP | = cadmium plate | DET | = detector |
| AFC | = automatic frequency control | BH | = binder head | CRT | = cathode-ray tube | diam | = diameter |
| | | BKDN | = breakdown | CTL | = complementary transistor logic | DIA | = diameter (used in parts list) |
| AGC | = automatic gain control | BP | = bandpass | CW | = continuous wave | DIFF | |
| AL | = aluminum | BPF | = bandpass filter | cw | = clockwise | AMPL | = differential amplifier |
| ALC | = automatic level control | BRS | = brass | D/A | = digital-to-analog | div | = division |
| AM | = amplitude modulation | BWO | = backward-wave oscillator | dB | = decibel | DPDT | = double-pole, double-throw |
| AMPL | = amplifier | | | dBm | = decibel referred to 1 mW | DR | = drive |
| APC | = automatic phase control | CAL | = calibrate | dc | = direct current | DSB | = double sideband |
| | | ccw | = counterclockwise | deg | = degree (temperature interval or difference) | DTL | = diode transistor logic |
| ASSY | = assembly | CER | = ceramic | d | = degree (plane angle) | DVM | = digital voltmeter |
| AUX | = auxiliary | CHAN | = channel | ° | = degree (plane angle) | ECL | = emitter coupled logic |
| avg | = average | cm | = centimeter | | | | |
| AWG | = american wire gauge | CMO | = coaxial | | | | |

ABBREVIATIONS (CONTINUED)

| | | | | | | | |
|---------|---|---------|---|---------|--|-------|--|
| EMF | = electromotive force | mH | = millihenry | PIN | = positive-intrinsic-negative | TERM | = terminal |
| EDP | = electronic data processing | mho | = mho | PIV | = peak inverse voltage | TFT | = thin-film transistor |
| ELECT | = electrolytic | MIN | = minimum | pk | = peak | TGL | = toggle |
| ENCAP | = encapsulated | min | = minute (time) | PL | = phase lock | THD | = thread |
| EXT | = external | ... | = minute (plane angle) | PLO | = phase lock oscillator | THRU | = through |
| F | = farad | MINAT | = miniature | PM | = phase modulation | TI | = titanium |
| FET | = field-effect transistor | mm | = millimeter | PNP | = positive-negative-positive | TOL | = tolerance |
| F/F | = flip-flop | MOD | = modulator | P/O | = part of | TRIM | = trimmer |
| FH | = flat head | MOM | = momentary | POLY | = polystyrene | TSTR | = transistor |
| FOL H | = foilster head | MOS | = metal-oxide semi-conductor | PORC | = porcelain | TTL | = transistor-transistor logic |
| FM | = frequency modulation | ms | = millisecond | POS | = positive, position(s) (used in parts list) | TV | = television |
| FP | = front panel | MTG | = mounting | POSN | = position | TVI | = television interference |
| FREQ | = frequency | MTR | = meter (indicating device) | POT | = potentiometer | TWT | = traveling wave tube |
| FXD | = fixed | mV | = millivolt | p-p | = peak-to-peak | U | = micro (10 ⁻⁶) (used in parts list) |
| g | = gram | mVac | = millivolt, ac | PP | = peak-to-peak (used in parts list) | UF | = microfarad (used in parts list) |
| GE | = germanium | mVdc | = millivolt, dc | PPM | = pulse-position modulation | UNREG | = unregulated |
| GHz | = gigahertz | mVpk | = millivolt, peak | PREAMPL | = preamplifier | V | = volt |
| GL | = glass | mVp-p | = millivolt, peak-to-peak | PRF | = pulse repetition frequency | VA | = voltampere |
| GND | = ground(ed) | mVrms | = millivolt, rms | PRR | = pulse repetition rate | Vac | = volts ac |
| H | = henry | mW | = milliwatt | ps | = picosecond | VAR | = variable |
| h | = hour | MUX | = multiplex | PT | = point | VCO | = voltage-controlled oscillator |
| HET | = heterodyne | MY | = mylar | PTM | = pulse-time modulation | Vdc | = volts dc |
| HEX | = hexagonal | μA | = microampere | PWM | = pulse-width modulation | VDCW | = volts dc, working (used in parts list) |
| HD | = head | μF | = microfarad | PWV | = peak working voltage | V(F) | = volts, filtered |
| HDW | = hardware | μH | = microhenry | RC | = resistance capacitance | VFO | = variable-frequency oscillator |
| HF | = high frequency | μmho | = microhm | RECT | = rectifier | VHF | = very-high frequency |
| HG | = mercury | μs | = microsecond | REF | = reference | Vpk | = volts peak |
| HI | = high | μV | = microvolt | REG | = regulated | Vp-p | = Volts peak-to-peak |
| HP | = Hewlett-Packard | μVac | = microvolt, ac | REPL | = replaceable | Vrms | = volts rms |
| HPF | = high pass filter | μVdc | = microvolt, dc | RF | = radio frequency | VSWR | = voltage standing wave ratio |
| HR | = hour (used in parts list) | μVpk | = microvolt, peak | RFI | = radio frequency interference | VTO | = voltage-tuned oscillator |
| HV | = high voltage | μVp-p | = microvolt, peak-to-peak | RH | = round head, right hand | VTVM | = vacuum-tube voltmeter |
| Hz | = Hertz | μVrms | = microvolt, rms | RLC | = resistance-inductance-capacitance | V(X) | = volts, switched |
| IC | = integrated circuit | μW | = microwatt | RMO | = rack mount only | W | = watt |
| ID | = inside diameter | nA | = nanoampere | rms | = root-mean-square | W/ | = with |
| IF | = intermediate frequency | NC | = no connection | RND | = round | WIV | = working inverse voltage |
| IMPG | = impregnated | N/C | = normally closed | ROM | = read-only memory | WW | = wirewound |
| in | = inch | NE | = neon | R&P | = rack and panel | W/O | = without |
| INCD | = incandescent | NEG | = negative | RWV | = reverse working voltage | YIG | = yttrium-iron-garnet |
| INCL | = include(s) | nF | = nanofarad | S | = scattering parameter | Zo | = characteristic impedance |
| INP | = input | Ni PL | = nickel plate | s | = second (time) | | |
| INS | = insulation | N/O | = normally open | ... | = second (plane angle) | | |
| INT | = internal | NOM | = nominal | S-B | = slow-blow (fuse (used in parts list) | | |
| kg | = kilogram | NORM | = normal | SCR | = silicon controlled rectifier, screw | | |
| kHz | = kilohertz | NPN | = negative-positive-negative | SE | = selenium | | |
| kΩ | = kilohm | NPO | = negative-positive zero (zero temperature coefficient) | SECT | = sections | | |
| kV | = kilovolt | NRFR | = not recommended for field replacement | SEMICON | = semiconductor | | |
| lb | = pound | NSR | = not separately replaceable | SHF | = superhigh frequency | | |
| LC | = inductance-capacitance | ns | = nanosecond | SI | = silicon | | |
| LED | = light-emitting diode | nW | = nanowatt | SIL | = silver | | |
| LF | = low frequency | OBD | = order by description | SL | = slide | | |
| LG | = long | OD | = outside diameter | SNR | = signal-to-noise ratio | | |
| LH | = left hand | OH | = oval head | SPDT | = single-pole, double-throw | | |
| LIM | = limit | OP AMPL | = operational amplifier | SPG | = spring | | |
| LIN | = linear taper (used in parts list) | OPT | = option | SR | = split ring | | |
| lin | = linear | OSC | = oscillator | SPST | = single-pole, single-throw | | |
| LK WASH | = lockwasher | OX | = oxide | SSB | = single sideband | | |
| LO | = low, local oscillator | oz | = ounce | SST | = stainless steel | | |
| LOG | = logarithmic taper (used in parts list) | Ω | = ohm | STL | = steel | | |
| log | = logarithm(ic) | P | = peak (used in parts list) | SQ | = square | | |
| LPF | = low pass filter | PAM | = pulse-amplitude modulation | SWR | = standing-wave ratio | | |
| LV | = low voltage | PC | = printed circuit | SYNC | = synchronize | | |
| m | = meter (distance) | PCM | = pulse-code modulation, pulse-count modulation | T | = timed (slow-blow fuse) | | |
| mA | = milliamper | PDM | = pulse-duration modulation | TA | = tantalum | | |
| MAX | = maximum | pF | = picofarad | TC | = temperature compensating | | |
| MΩ | = megohm | PH BRZ | = phosphor bronze | TD | = time delay | | |
| MEG | = meg (10 ⁶) (used in parts list) | PHL | = Philips | | | | |
| MET FLM | = metal film | | | | | | |
| MET OX | = metal oxide | | | | | | |
| MF | = medium frequency, microfarad (used in parts list) | | | | | | |
| MFR | = manufacturer | | | | | | |
| mg | = milligram | | | | | | |
| MHz | = megahertz | | | | | | |

NOTE

All abbreviations in the parts list will be in upper case.

MULTIPLIERS

| Abbreviation | Prefix | Multiple |
|--------------|--------|-------------------|
| T | tera | 10 ¹² |
| G | giga | 10 ⁹ |
| M | mega | 10 ⁶ |
| k | kilo | 10 ³ |
| da | deka | 10 |
| d | deci | 10 ⁻¹ |
| c | centi | 10 ⁻² |
| m | milli | 10 ⁻³ |
| μ | micro | 10 ⁻⁶ |
| n | nano | 10 ⁻⁹ |
| p | pico | 10 ⁻¹² |
| f | femto | 10 ⁻¹⁵ |
| a | atto | 10 ⁻¹⁸ |

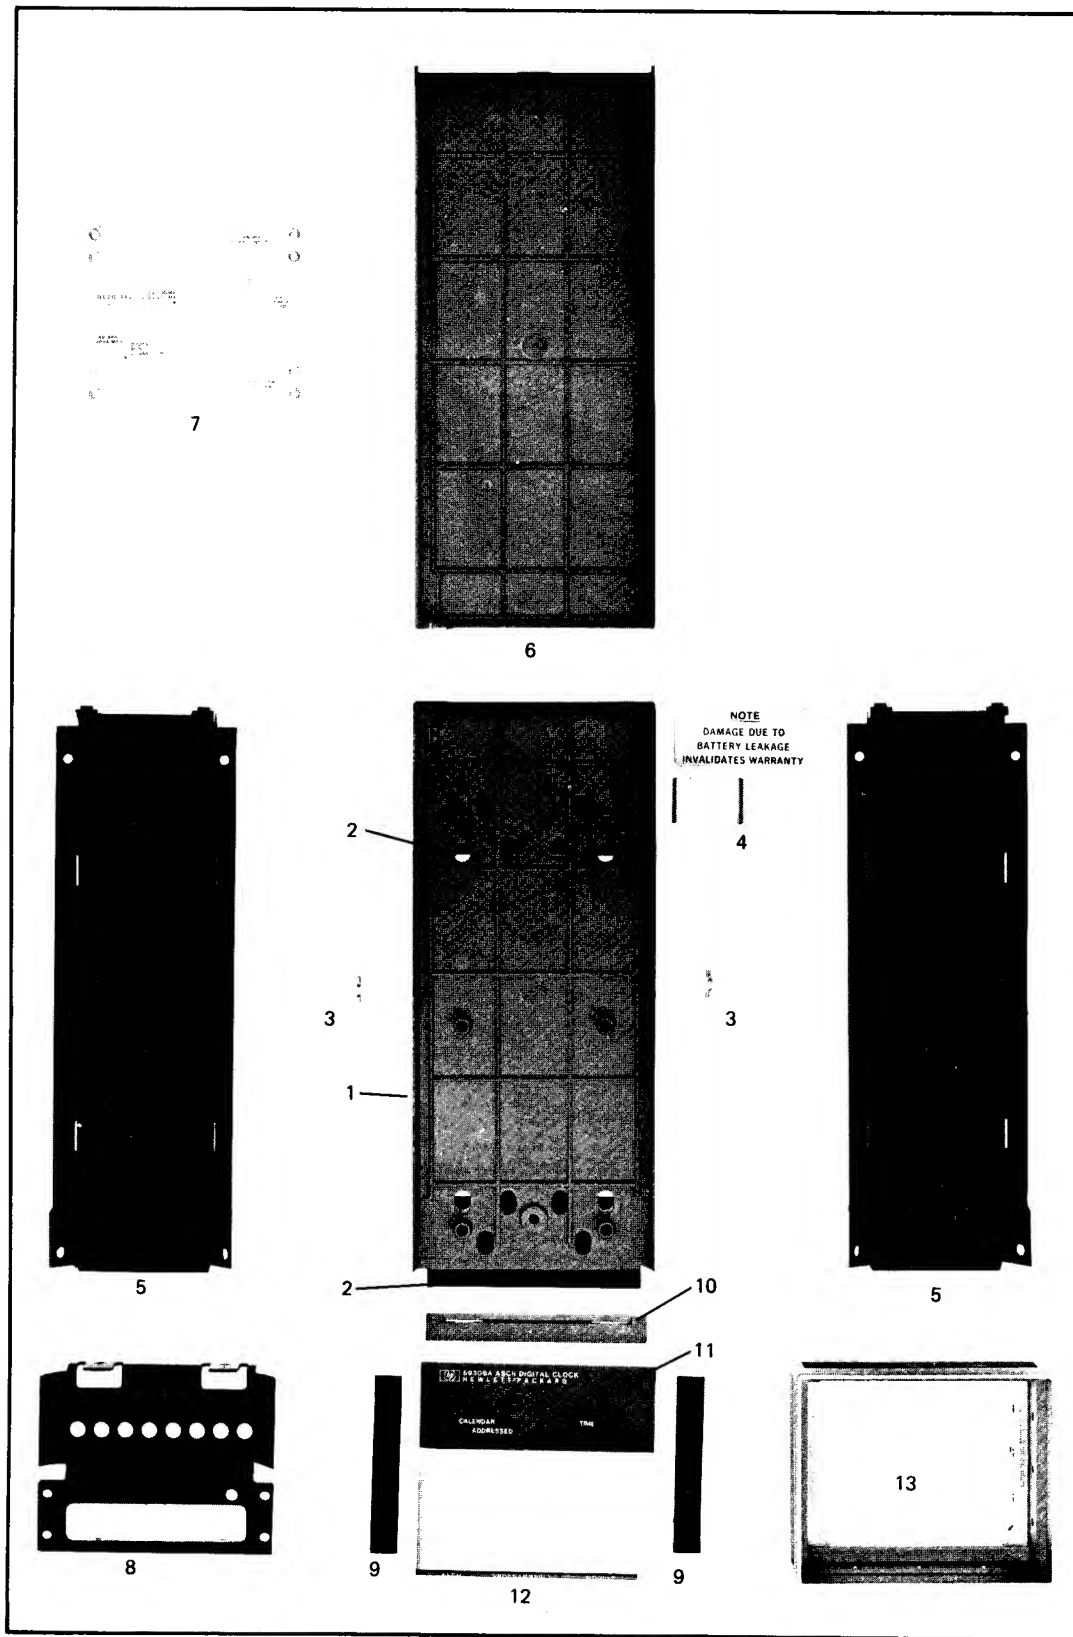


Figure 6-1. 59309A Cabinet Parts

6-4. ORDERING INFORMATION

6-5. To obtain replacement parts, address order of inquiry to your local Hewlett-Packard Sales and Service Office. Identify parts by their Hewlett-Packard part number.

6-6. To obtain a part that is not listed, include:

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

6-7. HP PART NUMBER ORGANIZATION

6-8. Following is a general description of the HP part number system.

6-9. Component Parts and Materials

6-10. Generally, the prefix of HP part numbers identifies the type of device. Eight-digit part numbers are used, where the four-digit prefix identifies the type of component, part, or material and the four-digit suffix indicates the specific type. Following is a list of some of the more commonly used prefixes for component parts. The list includes HP manufactured parts and purchased parts:

| Prefix | Component/Part/Material |
|------------------|--|
| 0121- | Capacitors, Variable (mechanical) |
| 0122- | Capacitors, Voltage Variable (semiconductor) |
| 0140- | Capacitors, Fixed |
| 0150- | Capacitors, Fixed |
| 0160- | Capacitors, Fixed |
| 0180- | Capacitors, Fixed Electrolytic |
| 0330- | Insulating Materials |
| 0340- | Insulators, Formed |
| 0370- | Knobs, Control |
| 0380- | Spacers and Standoffs |
| 0410- | Crystals |
| 0470- | Adhesives |
| 0490- | Relays |
| 0510- | Fasteners |
| 0674- thru 0778- | Resistors, Fixed (non wired wound) |
| 0811- thru 0831- | Resistors (wire wound) |
| 1200- | Sockets for components |
| 1205- | Heat Sinks |
| 1250- | Connectors (RF and related parts) |
| 1251- | Connectors (non RF and related parts) |
| 1410- | Bearings and Bushings |
| 1420- | Batteries |
| 1820- | Monolithic Digital Integrated Circuits |
| 1826- | Monolithic Linear Integrated Circuits |
| 1850- | Transistors, Germanium PNP |
| 1851- | Transistors, Germanium NPN |
| 1853- | Transistors, Silicon PNP |
| 1854- | Transistors, Silicon NPN |
| 1855- | Field-Effect-Transistors |

| | |
|------------------|--|
| 1900- thru 1912- | Diodes |
| 1920- thru 1952- | Vacuum Tubes |
| 1990- | Semiconductor Photosensitive and Light-Emitting Diodes |
| 3100- thru 3106- | Switches |
| 8120- | Cables |
| 9100- | Transformers, Coils, Chokes, Inductors, and Filters |

6-11. For example, 1854-0037, 1854-0221, and 1851-0192 are all NPN transistors. The first two are silicon and the last is germanium.

6-12. General Usage Parts

6-13. The following list gives the prefixes for HP manufactured parts used in several instruments, e.g., side frames, feet, top and bottom covers, etc. These are eight-digit part numbers with the four-digit prefix identifying the type of parts as shown below:

| Type of Part | Prefix |
|--------------|----------------|
| Sheet Metal | 5000- to 5019- |
| Machined | 5020- to 5039- |
| Molded | 5040- to 5059- |
| Assemblies | 5060- to 5079- |
| Components | 5080- to 5099- |

6-14. Specific Instrument Parts

6-15. These are HP manufactured parts for use in individual instruments or series of instruments. For these parts, the prefix indicates the instrument and the suffix indicates the type of part. For example, 59309-60001 is an assembly used in the 59309A. Following is a list of suffixes commonly used.

| Type of Part | P/N Suffix |
|---------------|------------------|
| Sheet Metal | -00000 to -00499 |
| Machined | -20000 to -20499 |
| Molded | -40000 to -40499 |
| Assembly | -60000 to 60499 |
| Component | -80000 to -80299 |
| Documentation | -90000 to -90249 |

Table 6-1. 59309A Cabinet Parts

| Ref. | HP Part No. | Qty. | Description | Mfr. Code | Mfr. Part No. |
|------|-------------|------|----------------------|-----------|---------------|
| 1 | 5040-7211 | 1 | COVER, BOTTOM | 28480 | 5040-7211 |
| 2 | 5040-7205 | 2 | FOOT | 28480 | 5040-7205 |
| 3 | 59309-00004 | 2 | BRACKET, MOTHERBOARD | 28480 | 59309-00004 |
| 4 | 59309-00006 | 1 | BRACKET, BATTERY | 28480 | 59309-00006 |
| 5 | 5040-7212 | 2 | COVER, SIDES | 28480 | 5040-7212 |
| 6 | 5040-7210 | 1 | COVER, TOP | 28480 | 5040-7210 |
| 7 | 59309-00003 | 1 | PANEL, REAR | 28480 | 59309-00003 |
| 8 | 59309-00001 | 1 | SUBPANEL, FRONT | 28480 | 59309-00001 |
| 9 | 5001-0438 | 2 | TRIM, SIDE | 28480 | 5001-0438 |
| 10 | 5040-7204 | 1 | TRIM, TOP | 28480 | 5040-7204 |
| 11 | 59309-40002 | 1 | WINDOW, FRONT | 28480 | 59309-40002 |
| 12 | 59309-00002 | 1 | PANEL, FRONT DOOR | 28480 | 59309-00002 |
| 13 | 59304-20003 | 1 | FRAME, MODIFIED | 28480 | 59304-20003 |

Table 6-2. Replaceable Parts

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|--|----------|-----------------|
| A1 | 59309-60001 | 1 | BOARD ASSEMBLY, DISPLAY | 20480 | 59309-60001 |
| A1C1 | 0160-3879 | 8 | CAPACITOR-FXD .01UF +-20% 100WVDC CER | 28480 | 0160-3879 |
| A1C2 | 0160-3879 | | CAPACITOR-FXD .01UF +-20% 100WVDC CER | 28480 | 0160-3879 |
| A1C3 | 0180-0210 | 1 | CAPACITOR-FXD 3.3UF+-20% 15VDC TA | 56289 | 1500335X0015A2 |
| A1CR1 | 1901-0535 | 3 | DIODE-SCHOTTKY | 28480 | 1901-0535 |
| A1CR2 | 1901-0535 | | DIODE-SCHOTTKY | 28480 | 1901-0535 |
| A1DS1 | 1990-0465 | 3 | DISPLAY NUM SEG 4 CHAR .109 IN HIGH | 28480 | 1990-0465 |
| A1DS2 | 1990-0465 | | DISPLAY NUM SEG 4 CHAR .109 IN HIGH | 28480 | 1990-0465 |
| A1DS3 | 1990-0465 | | DISPLAY NUM SEG 4 CHAR .109 IN HIGH | 28480 | 1990-0465 |
| A1DS4 | 1990-0442 | 1 | LED (ADDRESSED) | 28480 | 1990-0442 |
| A1J1 | 1251-3489 | 1 | CONNECTOR-PC EDGE 18-CONT/ROW 2-ROWS | 05574 | 3VM18/1JV12/279 |
| A1Q1 | 1854-0071 | 9 | TRANSISTOR NPN SI PD=300MW FT=200MHZ | 28480 | 1854-0071 |
| A1Q2 | 1854-0071 | | TRANSISTOR NPN SI PD=300MW FT=200MHZ | 28480 | 1854-0071 |
| A1Q3 | 1854-0071 | | TRANSISTOR NPN SI PD=300MW FT=200MHZ | 28480 | 1854-0071 |
| A1Q4 | 1854-0071 | | TRANSISTOR NPN SI PD=300MW FT=200MHZ | 28480 | 1854-0071 |
| A1Q5 | 1854-0071 | | TRANSISTOR NPN SI PD=300MW FT=200MHZ | 28480 | 1854-0071 |
| A1Q6 | 1854-0071 | | TRANSISTOR NPN SI PD=300MW FT=200MHZ | 28480 | 1854-0071 |
| A1Q7 | 1854-0071 | | TRANSISTOR NPN SI PD=300MW FT=200MHZ | 28480 | 1854-0071 |
| A1Q8 | 1854-0071 | | TRANSISTOR NPN SI PD=300MW FT=200MHZ | 28480 | 1854-0071 |
| A1Q9 | 1853-0C15 | 1 | TRANSISTOR PNP SI PD=200MW FT=500MHZ | 28480 | 1853-0C15 |
| A1R1 | 0683-1115 | 8 | RESISTOR 110 5% .25W FC TC=-400/+600 | 01121 | C81115 |
| A1R2 | 0683-1115 | | RESISTOR 110 5% .25W FC TC=-400/+600 | 01121 | C81115 |
| A1R3 | 0683-1115 | | RESISTOR 110 5% .25W FC TC=-400/+600 | 01121 | C81115 |
| A1R4 | 0683-1115 | | RESISTOR 110 5% .25W FC TC=-400/+600 | 01121 | C81115 |
| A1R5 | 0683-1115 | | RESISTOR 110 5% .25W FC TC=-400/+600 | 01121 | C81115 |
| A1R6 | 0683-1115 | | RESISTOR 110 5% .25W FC TC=-400/+600 | 01121 | C81115 |
| A1R7 | 0683-1115 | | RESISTOR 110 5% .25W FC TC=-400/+600 | 01121 | C81115 |
| A1R8 | 0683-1115 | | RESISTOR 110 5% .25W FC TC=-400/+600 | 01121 | C81115 |
| A1R9 | 0683-2725 | 9 | RESISTOR 2.7K 5% .25W FC TC=-400/+700 | 01121 | C82725 |
| A1R10 | 0683-2725 | | RESISTOR 2.7K 5% .25W FC TC=-400/+700 | 01121 | C82725 |
| A1R11 | 0683-2725 | | RESISTOR 2.7K 5% .25W FC TC=-400/+700 | 01121 | C82725 |
| A1R12 | 0683-2725 | | RESISTOR 2.7K 5% .25W FC TC=-400/+700 | 01121 | C82725 |
| A1R13 | 0683-4725 | 2 | RESISTOR 4.7K 5% .25W FC TC=-400/+700 | 01121 | C84725 |
| A1R14 | 0683-5115 | 1 | RESISTOR 510 5% .25W FC TC=-400/+600 | 01121 | C85115 |
| A1R15 | 0683-1045 | 1 | RESISTOR 100K 5% .25W FC TC=-400/+800 | 01121 | C81045 |
| A1R16 | 0683-1035 | 12 | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | C81035 |
| A1R17 | 1810-0041 | 2 | NETWORK-RES 9-PIN-SIP .15-PIN-SPCG | 28480 | 1810-0041 |
| A1S1 | 3101-0878 | 2 | SWITCH-TGL SUBMIN SPDT NS 2A 250VAC | 28480 | 3101-0878 |
| A1S2 | 3101-0858 | 5 | SWITCH-PB SPDT MOM 1A 115VAC | 09353 | P8121-C |
| A1S3 | 3101-0692 | 1 | SWITCH-TGL SUBMIN DPDT NS .02A 20VAC/DC | 28480 | 3101-0692 |
| A1S4 | 3101-0858 | | SWITCH-PB SPDT MOM 1A 115VAC | 09353 | P8121-C |
| A1S5 | 3101-0878 | | SWITCH-TGL SUBMIN SPDT NS 2A 250VAC | 28480 | 3101-0878 |
| A1S6 | 3101-0858 | | SWITCH-PB SPDT MOM 1A 115VAC | 09353 | P8121-C |
| A1S7 | 3101-0858 | | SWITCH-PB SPDT MOM 1A 115VAC | 09353 | P8121-C |
| A1S8 | 3101-0858 | | SWITCH-PB SPDT MOM 1A 115VAC | 09353 | P8121-C |
| A1U1 | 1820-1199 | 4 | IC SN74LS04N TTL LS HEX | 01295 | SN74LS04N |
| A1U2 | 1620-0914 | 1 | IC DECODER | 07263 | 93070C |
| A1U3 | 1826-0180 | 1 | IC NE 555 TIMER | 18324 | NE555V |
| A1XDS1 | 1200-0601 | 3 | SOCKET-IC 14-CONT W-WRAP-TERMS | 28480 | 1200-0601 |
| A1XDS2 | 1200-0601 | | SOCKET-IC 14-CONT W-WRAP-TERMS | 28480 | 1200-0601 |
| A1XDS3 | 1200-0601 | | SOCKET-IC 14-CONT W-WRAP-TERMS | 28480 | 1200-0601 |
| A2 | 59309-60002 | 1 | BOARD ASSEMBLY, MB/POWER SUPPLY | 28480 | 59309-60002 |
| A2C1 | 0180-2154 | 1 | CAPACITOR-FXD 1900UF+-75-10% 15VDC AL | 56289 | 39D198G015GL4 |
| A2C2 | 0160-3879 | | CAPACITOR-FXD .01UF +-20% 100WVDC CER | 28480 | 0160-3879 |
| A2C3 | 0180-1735 | 2 | CAPACITOR-FXD .22UF+-10% 35VDC TA | 56289 | 1500224X9035A2 |
| A2C4 | 0160-3879 | | CAPACITOR-FXD .01UF +-20% 100WVDC CER | 28480 | 0160-3879 |
| A2C5 | 0160-3879 | | CAPACITOR-FXD .01UF +-20% 100WVDC CER | 28480 | 0160-3879 |
| A2C6 | 0160-3879 | | CAPACITOR-FXD .01UF +-20% 100WVDC CER | 28480 | 0160-3879 |
| A2C7 | 0160-3879 | | CAPACITOR-FXD .01UF +-20% 100WVDC CER | 28480 | 0160-3879 |
| A2CR1 | 1906-0027 | 1 | DIODE-MULT FULL WAVE BRIDGE RECTIFIER | 04713 | MDA922-6 |
| A2CR2 | 1901-0028 | 3 | DIODE-PWR RECT 400V 750NA DO-29 | 04713 | SR1358-9 |
| A2CR3 | 1901-0028 | | DIODE-PWR RECT 400V 750NA DO-29 | 04713 | SR1358-9 |
| A2CR4 | 1901-0028 | | DIODE-PWR RECT 400V 750NA DO-29 | 04713 | SR1358-9 |
| A2CR5 | 1902-3122 | 1 | DIODE-ZNR 6.65V 2% DO-7 PD=.4W TC=+.038% | 04713 | SZ 10939-132 |
| A2CR6 | 1901-0040 | 19 | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A2CR7 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A2CR8 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A2CR9 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A2CR10 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Continued)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|--|----------|----------------------|
| A2CR11 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A2J1 | | | NCT ASSIGNED | | |
| A2J2 | 1251-3283 | 1 | CONNECTOR; 24-CONT; FEM; MICROBIBCON | 28480 | 1251-3283 |
| A2Q1 | 1854-0053 | 1 | TRANSISTOR NPN 2N2218 SI TO-5 PD=800MW | 04713 | 2N2218 |
| A2Q2 | 1854-0210 | 1 | TRANSISTOR NPN 2N2222 SI TO-18 PD=500MW | 04713 | 2N2222 |
| A2Q3 | 1854-0575 | 1 | TRANSISTOR NPN SI PD=625MW FT=100MHZ | 28480 | 1854-0575 |
| | 1205-0011 | 1 | HEAT-DISSIPATOR SGL TO-5/TO-39 PKG | 28480 | 1205-0011 |
| A2R1 | 0683-0275 | 2 | RESISTOR 2.7 5% .25W FC TC=-400/+500 | 01121 | C827G5 |
| A2R2 | 0683-0275 | | RESISTOR 2.7 5% .25W FC TC=-400/+500 | 01121 | C827G5 |
| A2R3 | 0683-3335 | 1 | RESISTOR 33K 5% .25W FC TC=-400/+800 | 01121 | C83335 |
| A2R4 | 0683-2225 | 1 | RESISTOR 2.2K 5% .25W FC TC=-400/+700 | 01121 | C82225 |
| A2R5 | 0683-1235 | 1 | RESISTOR 12K 5% .25W FC TC=-400/+800 | 01121 | C81235 |
| A2S1 | 3101-1573 | 1 | SWITCH-SL 7-1A-NS DIP-SLIDE-ASSY .1A | 11237 | 206 TYPE |
| A2S2 | 3101-1313 | 1 | SWITCH-SL DP3T-NS MINTR .5A 125VAC/DC PC | 79727 | G1285-0004 |
| A2XA3 | 1251-2035 | | CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS | 71785 | 252-15-30-300 |
| A2XA4 | 1251-2035 | 5 | CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS | 71785 | 252-15-30-300 |
| A2XA4B | 1251-2035 | | CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS | 71785 | 252-15-30-300 |
| A2XA5A | 1251-2035 | | CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS | 71785 | 252-15-30-300 |
| A2XA5B | 1251-2035 | | CONNECTOR-PC EDGE 15-CONT/ROW 2-ROWS | 71785 | 252-15-30-300 |
| A2XDS1 | 1200-0485 | 1 | SOCKET-IC 14-PIN PC MOUNTING | 28480 | 1200-0485 |
| | | | A2 MISCELLANEOUS | | |
| | 1400-0454 | 1 | STUD, SNAP-ON(FOR INTERNAL BT.(-)) | 28480 | 1400-0454 |
| | 1400-0456 | 1 | SOCKET, SNAP-ON(FOR INTERNAL BT.(+)) | 28480 | 1400-0456 |
| | 1530-1098 | 2 | FASTENER:0.136" DIA 6-32 THREAD | 00000 | 080 |
| | 0380-0046 | 4 | STANDOFF-RVT-ON .375LG .152ID .250D BRS | 28480 | 0380-0046 |
| A3 | 59309-60003 | 1 | BOARD ASSEMBLY, CALNDR OSC | 28480 | 59309-60003 |
| A3C1 | 0160-3879 | | CAPACITOR-FXD .01UF +-20% 100MVDC CER | 28480 | 0160-3879 |
| A3C2 | 0140-0210 | 2 | CAPACITOR-FXD 270PF +-5% 300MVDC MICA | 72136 | DM15F271J0300WV1CR |
| A3C3 | 0121-0180 | 1 | CAPACITOR-V TRMR-CER 15/60PF 200V PC-MTG | 00865 | 304324 15/60PF NI500 |
| A3C4 | 0140-0175 | 2 | CAPACITOR-FXD 39PF +-2% 300MVDC MICA | 72136 | DM15E390G0300WV1CR |
| A3C5 | 0140-0175 | | CAPACITOR-FXD 39PF +-2% 300MVDC MICA | 72136 | DM15E390G0300WV1CR |
| A3C6 | 0160-3878 | 1 | CAPACITOR-FXD 1000PF +-20% 100MVDC CER | 28480 | 0160-3878 |
| A3C7 | 0140-0210 | | CAPACITOR-FXD 270PF +-5% 300MVDC MICA | 72136 | DM15F271J0300WV1CR |
| A3CR1 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A3CR2 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A3CR3 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A3CR4 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A3CR5 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A3Q1 | 1854-0009 | 1 | TRANSISTOR NPN 2N709 SI TO-18 PD=300MW | 28480 | 1854-0009 |
| A3R1 | 0757-0442 | 2 | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | C4-1/8-T0-1002-F |
| A3R2 | 0757-0442 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | C4-1/8-T0-1002-F |
| A3R3 | 0683-1025 | 1 | RESISTOR 1K 5% .25W FC TC=-400/+600 | 01121 | C81025 |
| A3R4 | 0683-1035 | | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | C81035 |
| A3R5 | 0683-2725 | | RESISTOR 2.7K 5% .25W FC TC=-400/+700 | 01121 | C82725 |
| A3R6 | 0757-0438 | 2 | RESISTOR 5.11K 1% .125W F TC=0+-100 | 24546 | C4-1/8-T0-5111-F |
| A3R7 | 0757-0438 | | RESISTOR 5.11K 1% .125W F TC=0+-100 | 24546 | C4-1/8-T0-5111-F |
| A3R8 | 0683-2265 | 1 | RESISTOR 22M 5% .25W FC TC=-900/+1200 | 01121 | C82265 |
| A3R9 | 0683-6835 | 1 | RESISTOR 68K 5% .25W FC TC=-400/+800 | 01121 | C86835 |
| A3R10 | 0683-1045 | | RESISTOR 100K 5% .25W FC TC=-400/+800 | 01121 | C81045 |
| A3R11 | 0683-1035 | | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | C81035 |
| A3R12 | 0683-1045 | | RESISTOR 100K 5% .25W FC TC=-400/+800 | 01121 | C81045 |
| A3TP1 | 0360-0124 | 12 | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A3TP2 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A3TP3 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A3TP4 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A3U1 | 1820-1189 | 2 | IC MC14510CP COUNTER | 04713 | MC14510CP |
| A3U2 | 1820-1189 | | IC MC14510CP COUNTER | 04713 | MC14510CP |
| A3U3 | 1820-0939 | 2 | IC CD4013AE FLIP-FLOP | 02735 | CD4013AE |
| A3U4 | 1820-0939 | | IC CD4013AE FLIP-FLOP | 02735 | CD4013AE |
| A3U5 | 1820-0979 | 2 | IC CD4009AE BUFFER | 02735 | CD4009AE |
| A3U6 | 1820-0949 | 4 | IC CD4011AE GATE | 02735 | CD4011AE |
| A3U7 | 1820-0978 | 1 | IC CD4007AE DIGITAL | 02735 | CD4007AE |
| A3U8 | 1820-0950 | 1 | IC CD4012AE GATE | 02735 | CD4012AE |
| A3U9 | 1820-0943 | 3 | IC CD4023AE GATE | 02735 | CD4023AE |
| A3U10 | 1820-0943 | | IC CD4023AE GATE | 02735 | CD4023AE |
| A3U11 | 1820-0949 | | IC CD4011AE GATE | 02735 | CD4011AE |
| A3U12 | 1820-0055 | 1 | IC:SN7490N | 01295 | SN7490N |

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Continued)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|--|----------|-----------------|
| A3Y1 | 0410-0142 | 1 | CRYSTAL:QUARTZ 1.0 MHZ A3 MISCELLANEOUS | 28480 | 0410-0142 |
| | 5000-9043 | 3 | PIN:P.C. BOARD EXTRACTOR | 28480 | 5000-9043 |
| | 5040-6843 | 3 | EXTRACTOR, P.C. BOARD | 28480 | 5040-6843 |
| A4 | 59309-60004 | 1 | BOARD ASSEMBLY, TIME BOARD | 28480 | 59309-60004 |
| A4C1 | 0160-2204 | 2 | CAPACITOR-FXD 100PF \pm 5% 300WVDC MICA | 28480 | 0160-2204 |
| A4C2 | 0160-2204 | | CAPACITOR-FXD 100PF \pm 5% 300WVDC MICA | 28480 | 0160-2204 |
| A4R1 | 1810-0055 | 4 | NETWORK-RES 9-PIN-SIP .15-PIN-SPCG | 28480 | 1810-0055 |
| A4R2 | 0683-1045 | | RESISTOR 10K 5% .25W FC TC=-400/+800 | 01121 | C81045 |
| A4R3 | 0683-1035 | | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | C81035 |
| A4R4 | 0683-1035 | | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | C81035 |
| A4R5 | 0683-1035 | | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | C81035 |
| A4R6 | 0683-1035 | | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | C81035 |
| A4R7 | 0683-1035 | | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | C81035 |
| A4R8 | 0683-1035 | | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | C81035 |
| A4TP1 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A4TP2 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A4TP3 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A4TP4 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A4U1 | 1820-1122 | 6 | IC MC14518CP COUNTER | 04713 | MC14518CP |
| A4U2 | 1820-1122 | | IC MC14518CP COUNTER | 04713 | MC14518CP |
| A4U3 | 1820-0949 | | IC CD4011AE GATE | 02735 | CD4011AE |
| A4U4 | 1820-1122 | | IC MC14518CP COUNTER | 04713 | MC14518CP |
| A4U5 | 1820-0949 | | IC CD4011AE GATE | 02735 | CD4011AE |
| A4U6 | 1820-0943 | | IC CD4023AE GATE | 02735 | CD4023AE |
| A4U7 | 1820-0979 | | IC CD4009AE BUFFER | 02735 | CD4009AE |
| A4U8 | 1820-1198 | 8 | IC SN74LS03N TTL LS QUAD 2 NAND | 01295 | SN74LS03N |
| A4U9 | 1820-1198 | | IC SN74LS03N TTL LS QUAD 2 NAND | 01295 | SN74LS03N |
| A4U10 | 1820-1198 | | IC SN74LS03N TTL LS QUAD 2 NAND | 01295 | SN74LS03N |
| A4U11 | 1820-1198 | | IC SN74LS03N TTL LS QUAD 2 NAND | 01295 | SN74LS03N |
| A4U12 | 1820-0980 | 1 | IC CD4010AE BUFFER | 02735 | CD4010AE |
| A4U13 | 1820-1122 | | IC MC14518CP COUNTER | 04713 | MC14518CP |
| A4U14 | 1820-1122 | | IC MC14518CP COUNTER | 04713 | MC14518CP |
| A4U15 | 1820-1122 | | IC MC14518CP COUNTER | 04713 | MC14518CP |
| A4U16 | 1820-1198 | | IC SN74LS03N TTL LS QUAD 2 NAND | 01295 | SN74LS03N |
| A4U17 | 1820-1199 | | IC SN74LS04N TTL LS HEX | 01295 | SN74LS04N |
| A4U18 | 1820-0491 | 1 | IC TTL BCD-TC-DECIMAL DECODER/DRIVER | 01295 | SN74145N |
| A4U19 | 1820-1199 | | IC SN74LS04N TTL LS HEX | 01295 | SN74LS04N |
| A4U20 | 1820-1198 | | IC SN74LS03N TTL LS QUAD 2 NAND | 01295 | SN74LS03N |
| A4U21 | 1820-1198 | | IC SN74LS03N TTL LS QUAD 2 NAND | 01295 | SN74LS03N |
| A4U22 | 1820-1198 | | IC SN74LS03N TTL LS QUAD 2 NAND | 01295 | SN74LS03N |
| A4J23 | 1820-0946 | 1 | IC CD4001AE GATE | 02735 | CD4001AE |
| | | | A4 MISCELLANEOUS | | |
| | 5000-9043 | | PIN:P.C. BOARD EXTRACTOR | 28480 | 5000-9043 |
| | 5040-6843 | | EXTRACTOR, P.C. BOARD | 28480 | 5040-6843 |
| A5 | 59309-60005 | 1 | BOARD ASSEMBLY, BUS I/O | 28480 | 59309-60005 |
| A5C1 | 0160-0158 | 2 | CAPACITOR-FXD 5600PF \pm 10% 200WVDC POLYE | 56289 | 292P56292 |
| A5C2 | 0180-0106 | 1 | CAPACITOR-FXD 60UF \pm 20% 6VDC TA | 56289 | 1500606X000682 |
| A5C3 | 0160-0158 | | CAPACITOR-FXD 5600PF \pm 10% 200WVDC POLYE | 56289 | 292P56292 |
| A5CR1 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR2 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR3 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR4 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR5 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR6 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR7 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR8 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR9 | 1901-0535 | | DIODE-SCHOTTKY | 28480 | 1901-0535 |
| A5Q1 | 1854-0071 | | TRANSISTOR NPN SI PD=300MW FT=200MHZ | 28480 | 1854-0071 |
| A5R1 | 0683-1035 | | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | C81035 |
| A5R2 | 1810-0055 | | NETWORK-RES 9-PIN-SIP .15-PIN-SPCG | 28480 | 1810-0055 |
| A5R3 | 1810-0055 | | NETWORK-RES 9-PIN-SIP .15-PIN-SPCG | 28480 | 1810-0055 |
| A5R4 | 1810-0055 | | NETWORK-RES 9-PIN-SIP .15-PIN-SPCG | 28480 | 1810-0055 |
| A5R5 | 0683-2725 | | RESISTOR 2.7K 5% .25W FC TC=-400/+700 | 01121 | C82725 |
| A5R6 | 1810-0164 | 1 | NETWORK-RES 9-PIN-SIP .15-PIN-SPCG | 28480 | 1810-0164 |
| A5R7 | 1810-0136 | 2 | NETWORK-RES 10-PIN-SIP .1-PIN-SPCG | 28480 | 1810-0136 |
| A5R8 | 1810-0136 | | NETWORK-RES 10-PIN-SIP .1-PIN-SPCG | 28480 | 1810-0136 |
| A5R9 | 1810-0041 | | NETWORK-RES 9-PIN-SIP .15-PIN-SPCG | 28480 | 1810-0041 |
| A5R10 | 0683-2725 | | RESISTOR 2.7K 5% .25W FC TC=-400/+700 | 01121 | C82725 |

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Continued)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|---|---|-----------------------|--|---|---|
| A5R11 A5R12 A5R13 A5R14 A5R15 | 0683-2725 0683-1035 0683-1215 0683-1035 0683-2725 | 1 | RESISTOR 2.7K 5% .25W FC TC=-400/+700 RESISTOR 10K 5% .25W FC TC=-400/+700 RESISTOR 120 5% .25W FC TC=-400/+600 RESISTOR 10K 5% .25W FC TC=-400/+700 RESISTOR 2.7K 5% .25W FC TC=-400/+700 | 01121 01121 01121 01121 01121 | C82725 C81035 C81215 C81035 C82725 |
| A5R16 | 0683-4725 | | RESISTOR 4.7K 5% .25W FC TC=-400/+700 | 01121 | C84725 |
| A5S1 | 3101-1841 | 1 | SWITCH-SL 4-1A-NS DIP SLIDE-ASSY .1A | 71450 | 206 TYPE |
| A5TP1 A5TP2 A5TP3 A5TP4 | 0360-0124 0360-0124 0360-0124 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG TERMINAL-STUD SGL-PIN PRESS-MTG TERMINAL-STUD SGL-PIN PRESS-MTG TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 28480 28480 28480 | 0360-0124 0360-0124 0360-0124 0360-0124 |
| A5U1 A5U2 A5U3 A5U4 A5U5 | 1820-0788 1818-2153 1820-1112 1820-1112 1820-1112 | 1 1 3 | IC SN74 174 N FLIP-FLOP IC 4K RCM MCS IC SN74LS74N TTL LS DUAL IC SN74LS74N TTL LS DUAL IC SN74LS74N TTL LS DUAL | 01295 28480 01295 01295 01295 | SN74174N SN74LS74N SN74LS74N SN74LS74N SN74LS74N |
| A5U6 A5U7 A5U8 A5U9 A5U10 | 1820-0054 1820-1470 1820-0658 1820-1202 1820-1197 | 1 1 1 1 1 | IC SN7400N IC SN74LS157N TTL LS QUAD 2 IC MUXR IC SN74LS10N TTL LS TPL 3 NAND IC SN74LS00N TTL LS QUAD 2 NAND | 01295 01295 07263 01295 01295 | SN7400N SN74LS157N 93L120C SN74LS10N SN74LS00N |
| A5U11 A5U12 A5U13 A5U14 A5U15 | 1820-1144 1820-0595 1820-1144 1820-0628 1816-0353 | 2 1 1 1 1 | IC SN74LS02N TTL LS QUAD 2 NOR IC DM74L 73N FLIP-FLOP IC SN74LS02N TTL LS QUAD 2 NOR IC SN74 89N 64-BIT RAM TTL IC 256-BIT RCM TTL | 01295 27014 01295 01295 28480 | SN74LS02N DM74L73N SN74LS02N SN7489N 1816-0353 |
| A5U16 A5U17 A5U18 A5U19 A5U20 | 1820-0621 1820-0702 1816-0354 1820-0904 1820-0621 | 2 1 1 1 1 | IC SN74 38 N BUFFER IC DECODER IC SN74 187N 1K RCM TTL IC COMPTN IC SN74 38 N BUFFER | 01295 07263 28480 07263 01295 | SN7438N 93L110C 1816-0354 93L240C SN7438N |
| A5U21 | 1820-1199 | | IC SN74LS04N TTL LS HEX | 01295 | SN74LS04N |
| A5XU2 A5XU15 A5XU18 | 1200-0469 1200-0473 1200-0473 | 1 2 | SOCKET, ELEC, IC 28-CONT DIP SLDR TERM SOCKET-IC 16-CONT DIP-SLDR SOCKET-IC 16-CONT DIP-SLDR | 06776 28480 28480 | IC-286-S2 1200-0473 1200-0473 |
| | | | A5 MISCELLANEOUS | | |
| | 5000-9043 5040-6843 | | PIN:P.C. BOARD EXTRACTOR EXTRACTOR, P.C. BOARD | 28480 28480 | 5000-9043 5040-6843 |
| | | | CHASSIS PARTS | | |
| C1 C2 | 0160-3333 0180-1735 | 1 | CAPACITOR FXD .005 UF 20% 250WVAC CER CAPACITOR-FXD .22UF+-10% 35VDC TA | 28480 56289 | 0160-3333 1500224X9035A2 |
| F1 F1 | 2110-0201 2110-0202 | 1 1 | FUSE .25A 250V 1.25X.25 UL IEC (230VAC) FUSE .5A 250V 1.25X.25 UL IEC (115VAC) | 71400 71400 | AGC-1/4 AGC 1/2 |
| J1 J2 | 1251-2357 1250-0083 | 1 2 | CONNECTOR-AC PWR HP-9 MALE FLG MTG CONNECTOR-RF BNC FEM SGL HOLE FR (STORY POWER) | 2848C 24931 | 1251-2357 28JR-130-1 |
| J3 | 1250-0083 | | CONNECTOR-RF BNC FEM SGL HOLE FR (EXT FREQUENCY STANDARD) | 24931 | 28JR-130-1 |
| MP1 MP1 MP2 MP2 MP3 | 5040-7211 59309-00001 5040-7205 59309-00002 59309-00003 | 1 1 2 1 1 | COVER, BOTTOM SUB-PANEL, FRONT FOOT, 1/4 FRONT PANEL, DOOR PANEL, REAR | 28480 28480 28480 28480 28480 | 5040-7211 59309-00001 5040-7205 59309-00002 59309-00003 |
| MP4 MP5 MP5 MP6 MP6 | 59309-00004 59309-00005 5040-7212 5040-7210 59309-00006 | 2 1 2 1 1 | BRACKET, MOTHER BOARD BRACKET, TRANSISTOR COVER, SIDES COVER, TOP BRACKET, BATTERY | 28480 28480 28480 28480 28480 | 59309-00004 59309-00005 5040-7212 5040-7210 59309-00006 |
| MP7 MP8 MP9 MP10 MP13 | 59309-00007 59309-00008 5001-0438 5040-7204 59304-20003 | 1 1 2 1 1 | PLATE, SWITCH INSULATOR, POWER INPUT TRIM SIDE TRIM, TOP FRAME, MODIFIED | 28480 28480 28480 28480 28480 | 59309-00007 59309-00008 5001-0438 5040-7204 59304-20003 |
| MP16 | 59309-40002 | 1 | WINDOW, FRONT | 28480 | 59309-40002 |
| S1 | 3101-1234 | 1 | SWITCH-SL DPDT-NS STD 1.5A 250VAC SLDR (115/230V) | 82389 | 11A-1242A |
| T1 | 9100-3040 | 1 | TRANSFORMER POWER INPUT | 28480 | 9100-3040 |
| U1 | 1820-0430 | 1 | IC LM 309 V RGLTR | 27014 | LM309K |

See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Continued)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|---|----------|-----------------|
| w1 | 8120-1378 | 1 | CABLE ASSY 3-COND 18-AWG (PLUGS INTC A2J2) | 28480 | 8120-1378 |
| w2 | 8120-1833 | 1 | CABLE ASSY 24-COND 24-AWG | 28480 | 8120-1833 |
| w3 | 59308-60007 | 1 | STRAP, GFCUND | 28480 | 59308-60007 |
| w4 | 59309-60006 | 1 | CABLE ASSEMBLY, REGULATOR | 28480 | 59309-60006 |
| XF1 | 1400-0085 | 1 | FUSEHOLDER-EXTR POST 15A 250V UL | 75915 | 340297 |
| XU1 | 1200-0456 | 1 | SOCKET-XSTR 2-CONT TO-3-PKG | 28480 | 1200-0456 |
| | | | MISCELLANEOUS PARTS | | |
| | 0380-0644 | 2 | STANDOFF-HEX HD .336 LG; 6-32 INT/EXT | 28480 | 0380-0579 |
| | 2420-0022 | 6 | NUT-SPCLY 6-32-THD .23-THK .354-A/F STL | 77122 | NR632005 |
| | 3050-0454 | 4 | WASHER-FL MTLN NO.-4 .125-IN-ID | 00141 | 84-1 |
| | 3101-1820 | 5 | CAP-PB WHITE; .2-IN DIA; .155-IN L; FOR | 09353 | 7089-1 |
| | 7120-2699 | 1 | LABEL-IDENT *59309A ASCII DIGITAL CLOCK | 28480 | 7120-2699 |
| | 59309-20010 | 1 | LITE PIPE (USED WITH AIDS4) | 28480 | 59309-20010 |

See introduction to this section for ordering information

Table 6-3. Manufacturers Code List

| MFR NO. | MANUFACTURERS NAME AND ADDRESS | ZIP CODE |
|---------|--|----------|
| 00141 | PIC DESIGN CORP, RIDGEFIELD CT | 06877 |
| 00865 | STETTNER-TRUSH INC., CAZENOVIA NY | 13035 |
| 001121 | ALLEN-BRADLEY CO, MILWAUKEE WI | 53212 |
| 01295 | TEXAS INSTR INC SEMICOND CMPNT DIV, DALLAS TX | 75231 |
| 02735 | RCA CORP SOLID STATE DIV, SOMMERVILLE NJ | 08876 |
| 04713 | MOTOROLA SEMICONDUCTOR PRODUCTS, PHOENIX AZ | 85008 |
| 05574 | VIKING INDUSTRIES INC, CHATSWORTH CA | 91311 |
| 06776 | ROBINSON NUGENT INC, NEW ALBANY IN | 47150 |
| 07263 | FAIRCHILD SEMICONDUCTOR DIV, MOUNTAIN VIEW CA | 94040 |
| 09353 | C AND K COMPONENTS INC, WATERTOWN MA | 02172 |
| 11237 | CTS KEENE INC, PASO ROBLES CA | 93446 |
| 18324 | SIGNETICS CORP, SUMMYVALE CA | 94086 |
| 24546 | CORNING GLASS WORKS (BRADFORD), BRADFORD PA | 16701 |
| 24931 | SPECIALTY CONNECTOR CO INC., INDIANAPOLIS IN | 46227 |
| 27014 | NATIONAL SEMICONDUCTOR CORP, SANTA CLARA CA | 95051 |
| 28480 | HEWLETT-PACKARD CO CORPORATE HQ, PALO ALTO CA | 94304 |
| 56289 | SPRAGUE ELECTRIC CO, NORTH ADAMS MA | 01247 |
| 71400 | BUSSMAN MFG DIV OF MCGRAW-EDISON CO, ST LOUIS MO | 63017 |
| 71450 | CTS CORP, ELKART IN | 46514 |
| 71785 | TRW ELEK COMPONENTS CINCH DIV, ELK GROVE VIL IL | 60007 |
| 72136 | ELECTO MOTIVE MFG CO INC, WILLIMANTIC CT | 06226 |
| 75915 | LITTELFUSE INC, DES PLAINES IL | 60016 |
| 77122 | PALNUT CO UNITED-CARR DIV TRW INC, MTSIDE NJ | 07092 |
| 79727 | C-W INDUSTRIES, WARMINSTER PA | 18974 |
| 82389 | SWITCHCRAFT INC, CHICAGO IL | 60630 |

SECTION VII

MANUAL CHANGES AND OPTIONS

7-1. OPTIONS

7-2. No options are presently available for the 59309A. Some earlier instruments were equipped with an Option 001, Julian Calendar Display which is now available as a special option. The configurations for the standard instrument and Option 001 instrument and their respective schematics and parts list are as follows:

| Assy No. | Std. Instr. 59309- | For Schem see Page | For Parts see Table | Opt. Instr. 59309- | For Schem. see Page | For Parts see Table |
|----------|-----------------------|-----------------------|------------------------|-----------------------|------------------------|------------------------|
| A1 | 60001 | 8-3 | 6-4 | 60009 | 8-3 | 7-2 |
| A2 | 60002 | 8-4 | 6-4 | 60002 | 8-4 | 6-4 |
| A3 | 60003 | 8-5 | 6-4 | 60007 | 7-3 | 7-2 |
| A4 | 60004 | 8-6 | 6-4 | 60004 | 8-6 | 6-4 |
| A5 | 60005 | 8-7 | 6-4 | 60008 | 8-7 | 7-2 |

7-3. MANUAL CHANGES

7-4. This manual applies directly to Model 59309A having serial prefix 1632A (refer to paragraph 1-23).

7-5. Newer Instruments

7-6. As changes are made, newer instruments may have serial prefixes that are not listed in this manual. Manuals for these instruments are supplied with a manual change sheet, containing the required information. Contact the nearest Hewlett-Packard Sales and Service Office for information if this sheet is missing.

7-7. Older Instruments

7-8. Manual Changes listed in Table 7-1 apply to Model 59309A with serial prefix numbers below 1632A.

Table 7-1. Manual Changes for Older Instruments

| Instrument Prefix | Make Manual Changes |
|-------------------|---------------------|
| 1604A | 1 |
| 1600A | 1,2 |
| 1544A | 1,2,3 |
| 1524A | 1,2,3,4 |
| 1428A | 1,2,3,4,5 |

CHANGE 1 (1604A)

Table 6-2:

For series 1604A and below, A1U1 was an 1820-0586, an 1820-1199 is the preferred parts replacement.

For series 1604A and below, A2Q3 was an 1854-0533, an 1854-0575 is the preferred parts replacement. Some instruments with series 1604A have an 1854-0575 installed.

For series 1604A and below, A4U8 through A4U11, U20 through U22 and U16 were 1830-0585's, 1820-1198 is the preferred parts replacement.

For series 1604A and below, A4U17 and U19 were 1820-0586's, the preferred parts replacement is an 1820-1199.

For series 1604A and below, A5U3 through U5 were 1820-0596's, the preferred parts replacement is 1820-1112.

For series 1604A and below, A5U7 was an 1820-0710, the preferred parts replacement is 1820-1470.

For series 1604A and below, A5U9 was an 1820-0587, the preferred parts replacement is 1820-1202.

For series 1604A and below, A5U10 was an 1820-0583, the preferred parts replacement is 1820-1197.

For series 1604A and below, A5U11 and U13 were 1820-0584's, the preferred parts replacement is 1820-1144.

For series 1604A and below, A5U21 was an 1820-0586, the preferred parts replacement is 1820-1199.

CHANGE 2 (1660A)

Capacitor C1 (chassis component on input power module) was HP Part Number 0160-3043 (a dual .005 UF). The capacitors were connected from one side of the line to chassis ground.

CHANGE 3 (1544A)

Table 6-2, Chassis Parts:

Change F1, 2110-0201 to 2110-0004.

Change F1, 2110-0202 to 2110-0012.

Table 6-2, Miscellaneous Parts:

Change Standoff-Hex. 0380-0644 to 0380-0579.

CHANGE 4 (1524A)

Table 6-2, A1 Display Assembly:

Change A1DS1 from 1990-0465 to 1990-0335.

Change A1DS2 from 1990-0465 to 1990-0468.

Change A1 Series number to 1428.

Change A1S2, 4, 6, 7, 8 from 3101-0858 to 3101-1261.

Change manual title page to 1524.

CHANGE 5 (1428A)

Table 6-2, A2 Assembly:

Change A2S1 from 3101-1973 to 3101-1826.

Table 7-2, A5 Assembly:

(For earlier units available as Option 001.)

Change A5S1 from 3101-1841 to 3101-1817.

Change A5C2 from 0180-0106, cap. 60 μ f to 0180-0376, cap. .47 μ f.

Change A5C2 value in Figure 8-7 for Option 001 instruments.

HEWLETT  PACKARD

MANUAL CHANGES

MANUAL DESCRIPTION

INSTRUMENT: 59309A HP-IB Digital Clock
Operating and Service Manual

SERIAL PREFIX: 1632A

DATE PRINTED: DEC 1976

HP PART NO: 59309-90004

MICROFICHE NO: 59309-90005

CHANGE DATE December 13, 1977

(This change supersedes all earlier dated changes)

- Make all changes listed as ERRATA.
- Check the following table for your instrument's serial prefix or serial number and make listed change(s) to manual.

| IF YOUR INSTRUMENT HAS SERIAL PREFIX OR SERIAL NUMBER | MAKE THE FOLLOWING CHANGES TO YOUR MANUAL | IF YOUR INSTRUMENT HAS SERIAL PREFIX OR SERIAL NUMBER | MAKE THE FOLLOWING CHANGES TO YOUR MANUAL |
|---|---|---|---|
| 1704A | 1 | | |
| 1712A | 1, 2 | | |

► NEW OR REVISED ITEM

ERRATA

Page 6-9, Table 6-2, A5 (59309-60005) Replaceable Parts:

Change A5U9 to 1820-0587; IC SN74L10N TTL L TPL 3 NAND 01295; SN74L10N.

Page 7-2, Manual Changes, Series 1604 and below:

Delete sixth sentence which reads as follows:

"For series 1604A and below, A5U9 was an 1820-0587, the preferred parts replacement is 1820-1202".

Change the series prefix number for CHANGE 2 from 1660A to 1600A. No 59309A instruments with a 1660A serial prefix number have ever been made.

Page 7-5, Table 7-2, A5 (59309-60008) Replaceable Parts:

Change A5U9 to 1820-0587; IC SN74L10N TTL L TPL 3 NAND; 01295; SN74L10N.

Page 8-17, Figure 8-7, Sheet 2 of 2; A5 Schematic Diagram:

Change U9 in TABLE OF ACTIVE ELEMENTS to HP PART NUMBER 1820-0587 and MFG OR INDUSTRY PART NUMBER to SN74L10N.

Page 6-6, Table 6-2, A2 (59309-60002) Replaceable Parts:

Change A2CR1 from 1906-0027 to 1901-0366; DIODE FW BRIDGE 400V 1A; 02037; SDA-10185-6.

► Page 6-8, Table 6-2, A5 (59309-60005) Replaceable Parts:

Change A9CR2 to 1901-0535; DIODE-SCHOTTKY; 28480; 1901-0535.

Change A9CR9 to 1901-0040; DIODE-SWITCHING 30V 50 NA 2NS DO-35; 28480; 1901-0040.

► Page 8-17, Figure 8-7, TABLE OF ACTIVE ELEMENTS:

Change listing in table for CR1 thru CR9 to the following:

| | | |
|----------|-----------|-----------|
| CR1, 3-9 | 1901-0040 | 1901-0040 |
| CR2 | 1901-0535 | 1901-0535 |

CHANGE 1 (1704A)

Page 6-7, Table 6-2, A3 (59309-60003) Replaceable Parts:

Add "(SERIES 1704)" to A3 description.

Change A3C4 and A3C5 from 0140-0175 (39 pF) to 0160-2199; CAPACITOR 30 pF 5% 300VDCW.

Change A3R6 and A3R7 from 0757-0438 (5110 Ω) to 0683-1025; RESISTOR 5.11K 1% .125W F
TC = 0 \pm 100.

Page 8-9, Figure 8-5, A3 (59309-60003) Schematic Diagram:

Change series number, at top of diagram, from 1600A to 1704.

Change A3C4 and A3C5 from 39 to 30 pF.

Add an asterisk (*) to A3C4 and A3C5.

Change A3R6 and A3R7 from 5110 to 1000 ohms.

Add an asterisk (*) adjacent to A3R6 and A3R7.

CHANGE 2 (1712A)

Pages 6-8 and 6-9, Table 6-2, A5 (59309-60005) Replaceable Parts:

Add "SERIES 1712" to A5 description.

Change A5U13 from 1820-1144 (SN74LS02N) to 1820-0328; IC GATE TTL NOR QUAD
DUAL INPUT; 01295; SN7402N.

Change A5U21 from 1820-1199 (SN74LS04N) to 1820-1416; IC SCHMITT-TRIG TTLS INV
HEX 1-INPUT; 01295; SN74LS14N.

Page 18, Figure 8-7 Sheet 1 of 2, A5 (59309-60005) Schematic Diagram:

Change A5 series number, at top of schematic, from 1600A to 1712.

Page 19, Figure 8-7 Sheet 2 of 2, A5 Schematic Diagram:

Change A5 series number, at top of schematic, from 1600A to 1712.

Change TABLE OF ACTIVE ELEMENTS to reflect the above changes in Table 6-2;
U13 to 1820-0328 type SN7402N and U21 to 1820-1416 type SN74LS14N.

7-9. A3 JULIAN OSCILLATOR (OPTION 001) 59309-60007

7-10. This circuit includes the External Frequency Divider, the 1 MHz Oscillator, the Day-of-Year Counter, and the Clock Error FF.

7-11. EXTERNAL FREQUENCY DIVIDER (A3U10). This divider and transistor A3Q7 receive operating voltages through the EXT position of the EXT INT switch on the front panel. The output of an external frequency standard, connected to the EXT FREQ STD connector, is divided by A3U10 to supply 1 MHz through gates A3U9D and A3U9C.

7-12. 1 MHz OSCILLATOR (A3U5). The internal oscillator supplies 1 MHz through gates A3U9A and A3U9C when the EXT INT switch on the front panel is set to INT.

7-13. The 1 Hz signal, from either the External Frequency Divider or the Internal 1 MHz Oscillator is the time base for the 59309A and is supplied to the Time Base Divider on A4 and to Clock Error FF A3U1B.

7-14. DAY-OF-YEAR COUNTER (A3U7 and A3U8). This counter receives the 1 Day signal from gate A4U6B. The day units are counted by A3U7, tens are counted by A3U8B and hundreds are counted by A3U8A. A reset signal is generated when the count reaches 366 with switch A3S1 in the 365 position. A reset occurs when the count reaches 367 with switch A3S1 in the 366 position. The outputs of the counters are sent to the A4 board and combined with the appropriate digit position bit to synchronize the strobing of the day-of-year display via the Data Bus.

7-15. CLOCK ERROR FF (A3U3A). The Clock Error FF provides an error signal which illuminates all decimal points in the front-panel display. In addition, the error signal is sent to Qualifier Selector A5U8 to result in an ASCII question mark as the first character in the talk output format to the HP-IB. The error signal is generated when the operation of the oscillator is initiated or disrupted, for example, by initial application of power, or when an external frequency standard is first connected into the circuit, or when the oscillator output fails.

Table 7-2. Julian Oscillator Option 001, Replaceable

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|--|----------|----------------------|
| A1 | 59309-60009 | 1 | (SEE A1 OF STANDARD INSTRUMENT FOR OPTION 001 PARTS BREAKDOWN) | 28480 | 59309-60009 |
| A3 | 59309-60007 | 1 | BOARD ASSEMBLY, JULIAN OSCILLATOR (OPTION 001 ONLY) | 28480 | 59309-60007 |
| A3C1 | 0160-3879 | 1 | CAPACITOR-FXD .01UF +-20% 100WVDC CER | 28480 | 0160-3879 |
| A3C2 | 0140-0210 | 1 | CAPACITOR-FXD 270PF +-5% 300WVDC MICA | 72136 | DM15F271J0300WV1CR |
| A3C3 | 0121-0180 | 1 | CAPACITOR-V TRMR-CER 15/60PF 200V PC-MTG | 00865 | 304324 15/60PF N1500 |
| A3C4 | 0140-0175 | 2 | CAPACITOR-FXD 39PF +-2% 300WVDC MICA | 72136 | DM15E390G0300WV1CR |
| A3C5 | 0140-0175 | 2 | CAPACITOR-FXD 39PF +-2% 300WVDC MICA | 72136 | DM15E390G0300WV1CR |
| A3C6 | 0160-3878 | 1 | CAPACITOR-FXD 1000PF +-20% 100WVDC CER | 28480 | 0160-3878 |
| A3CR1 | 1901-0040 | 12 | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A3CR2 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A3CR3 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A3CR4 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A3Q1 | 1854-0009 | 1 | TRANSISTOR NPN 2N769 SI TO-18 PD=300MW | 28480 | 1854-0009 |
| A3R1 | 0757-0442 | 2 | RESISTOR 10K 1% .125W F TC=0+/-100 | 24546 | C4-1/8-T0-1002-F |
| A3R2 | 0757-0442 | 2 | RESISTOR 10K 1% .125W F TC=0+/-100 | 24546 | C4-1/8-T0-1002-F |
| A3R3 | 0683-1035 | 4 | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | CB1035 |
| A3R4 | 0683-1025 | 1 | RESISTOR 1K 5% .25W FC TC=-400/+600 | 01121 | CB1025 |
| A3R5 | 0683-2725 | 5 | RESISTOR 2.7K 5% .25W FC TC=-400/+700 | 01121 | CB2725 |
| A3R6 | 0757-0438 | 2 | RESISTOR 5.11K 1% .125W F TC=0+/-100 | 24546 | C4-1/8-T0-5111-F |
| A3R7 | 0757-0438 | 2 | RESISTOR 5.11K 1% .125W F TC=0+/-100 | 24546 | C4-1/8-T0-5111-F |
| A3R8 | 0683-2265 | 1 | RESISTOR 22M 5% .25W FC TC=-900/+1200 | 01121 | CB2265 |
| A3R9 | 0683-6835 | 1 | RESISTOR 68K 5% .25W FC TC=-400/+800 | 01121 | CB6835 |
| A3R10 | 0683-1045 | 3 | RESISTOR 100K 5% .25W FC TC=-400/+800 | 01121 | CB1045 |
| A3R11 | 0683-1045 | | RESISTOR 100K 5% .25W FC TC=-400/+800 | 01121 | CB1045 |
| A3R12 | 0683-1045 | | RESISTOR 100K 5% .25W FC TC=-400/+800 | 01121 | CB1045 |
| A3TP1 | 0360-0124 | 8 | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A3TP2 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A3TP3 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A3TP4 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A3U1 | 1820-0939 | 1 | IC CD4013AE FLIP-FLOP | 02735 | CD4013AE |
| A3U2 | 1820-0949 | 2 | IC CD4011AE GATE | 02735 | CD4011AE |
| A3U3 | 1820-0979 | 1 | IC CD4009AE BUFFER | 02735 | CD4009AE |
| A3U4 | 1820-0950 | 2 | IC CD4012AE GATE | 02735 | CD4012AE |
| A3U5 | 1820-0978 | 1 | IC CD4007AE DIGITAL | 02735 | CD4007AE |
| A3U6 | 1820-0950 | | IC CD4012AE GATE | 02735 | CD4012AE |
| A3U7 | 1820-1189 | 1 | IC MC14510CP COUNTER | 04713 | MC14510CP |
| A3U8 | 1820-1122 | 1 | IC MC14518CP COUNTER | 04713 | MC14518CP |
| A3U9 | 1820-0949 | | IC CD4011AE GATE | 02735 | CD4011AE |
| A3U10 | 1820-0655 | 1 | IC:SN7490N | 01295 | SN7490N |
| A3Y1 | 0410-0142 | 1 | CRYSTAL:QUARTZ 1.0 MHZ A3 MISCELLANEOUS (OPT 001 ONLY) | 28480 | 0410-0142 |
| | 5000-9043 | 2 | PIN:P.C. BOARD EXTRACTOR | 28480 | 5000-9043 |
| | 5040-6843 | 2 | EXTRACTOR, P.C. BOARD | 28480 | 5040-6843 |
| A5 | 59309-60008 | 1 | BOARD ASSEMBLY, JULIAN I/O (OPTION 001 ONLY) | 28480 | 59309-60008 |
| A5C1 | 0160-0158 | 2 | CAPACITOR-FXD 5600PF +-10% 200WVDC POLYE | 56289 | 292P56292 |
| A5C2 | 0180-0106 | 1 | CAPACITOR-FXD 60UF+-20% 6VDC TA | 56289 | 150D606X0006B2 |
| A5C3 | 0160-0158 | 1 | CAPACITOR-FXD 5600PF +-10% 200WVDC POLYE | 56289 | 292P56292 |
| A5CR1 | 1901-0040 | 1 | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR2 | 1901-0535 | | DIODE-SCHOTTKY | 28480 | 1901-0535 |
| A5CR3 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR4 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR5 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR6 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR7 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR8 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5CR9 | 1901-0040 | | DIODE-SWITCHING 30V 50NA 2NS DO-35 | 28480 | 1901-0040 |
| A5Q1 | 1854-0071 | 1 | TRANSISTOR NPN SI PD=300MW FT=200MHZ | 28480 | 1854-0071 |
| A5R1 | 0683-1035 | 3 | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | CB1035 |
| A5R2 | 1810-0055 | | NETWORK-RES 9-PIN-SIP .15-PIN-SPCG | 28480 | 1810-0055 |
| A5R3 | 1810-0055 | | NETWORK-RES 9-PIN-SIP .15-PIN-SPCG | 28480 | 1810-0055 |
| A5R4 | 1810-0055 | | NETWORK-RES 9-PIN-SIP .15-PIN-SPCG | 28480 | 1810-0055 |
| A5R5 | 0683-2725 | | RESISTOR 2.7K 5% .25W FC TC=-400/+700 | 01121 | CB2725 |

See introduction to this section for ordering information

Table 7-2. Julian Oscillator Option 001, Replaceable Parts (Cont'd)

| Reference Designation | HP Part Number | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|--|----------|-----------------|
| A5R6 | 1810-0164 | 1 | NETWORK-RES 9-PIN-SIP .15-PIN-SPCG | 28480 | 1810-0164 |
| A5R7 | 1810-0136 | 2 | NETWORK-RES 10-PIN-SIP .1-PIN-SPCG | 28480 | 1810-0136 |
| A5R8 | 1810-0136 | | NETWORK-RES 10-PIN-SIP .1-PIN-SPCG | 28480 | 1810-0136 |
| A5R9 | 1810-0041 | 1 | NETWORK-RES 9-PIN-SIP .15-PIN-SPCG | 28480 | 1810-0041 |
| A5R10 | 0683-2725 | | RESISTOR 2.7K 5% .25W FC TC=-400/+700 | 01121 | C82725 |
| A5R11 | 0683-2725 | | RESISTOR 2.7K 5% .25W FC TC=-400/+700 | 01121 | C82725 |
| A5R12 | 0683-1035 | | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | C81035 |
| A5R13 | 0683-1215 | 1 | RESISTOR 120 5% .25W FC TC=-400/+600 | 01121 | C81215 |
| A5R14 | 0683-1035 | | RESISTOR 10K 5% .25W FC TC=-400/+700 | 01121 | C81035 |
| A5R15 | 0683-2725 | | RESISTOR 2.7K 5% .25W FC TC=-400/+700 | 01121 | C82725 |
| A5R16 | 0683-4725 | 1 | RESISTOR 4.7K 5% .25W FC TC=-400/+700 | 01121 | C84725 |
| A5S1 | 3101-1841 | 1 | SWITCH-SL 4-1A-NS DIP-SLIDE-ASSY .1A | 71450 | 206 TYPE |
| A5TP1 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A5TP2 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A5TP3 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A5TP4 | 0360-0124 | | TERMINAL-STUD SGL-PIN PRESS-MTG | 28480 | 0360-0124 |
| A5U1 | 1820-0788 | 1 | IC SN74 174 N FLIP-FLOP | 01295 | SN74174N |
| A5U2 | 1818-2236 | 1 | IC MEMORY | 28480 | 1818-2236 |
| A5U3 | 1820-1112 | 3 | IC SN74LS74N TTL LS DUAL | 01295 | SN74LS74N |
| A5U4 | 1820-1112 | | IC SN74LS74N TTL LS DUAL | 01295 | SN74LS74N |
| A5U5 | 1820-1112 | | IC SN74LS74N TTL LS DUAL | 01295 | SN74LS74N |
| A5U6 | 1820-0054 | 1 | IC:SN7400N | 01295 | SN7400N |
| A5U7 | 1820-1470 | 1 | IC SN74LS157N TTL LS QUAD 2 | 01295 | SN74LS157N |
| A5U8 | 1820-0658 | 1 | IC MUXR | 07263 | 93L12DC |
| A5U9 | 1820-1202 | 1 | IC SN74LS10N TTL LS TPL 3 NAND | 01295 | SN74LS10N |
| A5U10 | 1820-1197 | 1 | IC SN74LS00N TTL LS QUAD 2 NAND | 01295 | SN74LS00N |
| A5U11 | 1820-1144 | 2 | IC SN74LS02N TTL LS QUAD 2 NAND | 01295 | SN74LS02N |
| A5U12 | 1820-0595 | 1 | IC DM74L 73N FLIP-FLOP | 27014 | DM74L73N |
| A5U13 | 1820-1144 | | IC SN74LS02N TTL LS QUAD 2 NAND | 01295 | SN74LS02N |
| A5U14 | 1820-0628 | 1 | IC SN74 89N 64-BIT RAM TTL | 01295 | SN7489N |
| A5U15 | 1816-0353 | 1 | IC 256-BIT ROM TTL | 28480 | 1816-0353 |
| A5U16 | 1820-0621 | 2 | IC SN74 38 N BUFFER | 01295 | SN7438N |
| A5U17 | 1820-0702 | 1 | IC DECODER | 07263 | 93L11DC |
| A5U18 | 1816-0354 | 1 | IC SN74 187N 1K ROM TTL | 28480 | 1816-0354 |
| A5U19 | 1820-0904 | 1 | IC CGMPTR | 07263 | 93L24DC |
| A5U20 | 1820-0621 | | IC SN74 38 N BUFFER | 01295 | SN7438N |
| A5U21 | 1820-1199 | 1 | IC SN74LS04N | 01295 | SN74LS04N |
| A5XU2 | 1200-0469 | 1 | SOCKET, ELEC, IC 28-CONT DIP SLDR TERM | 06776 | IC-286-S2 |
| A5XU15 | 1200-0473 | 2 | SOCKET-IC 16-CONT DIP-SLDR | 28480 | 1200-0473 |
| A5XU18 | 1200-0473 | | SOCKET-IC 16-CONT DIP-SLDR | 28480 | 1200-0473 |
| | | | A5 MISCELLANEOUS(OPTION 001) | | |
| | 5000-9043 | | PIN:P.C. BOARD EXTRACTOR | 28480 | 5000-9043 |
| | 5040-6843 | | EXTRACTOR, P.C. BOARD | 28480 | 5040-6843 |

See introduction to this section for ordering information

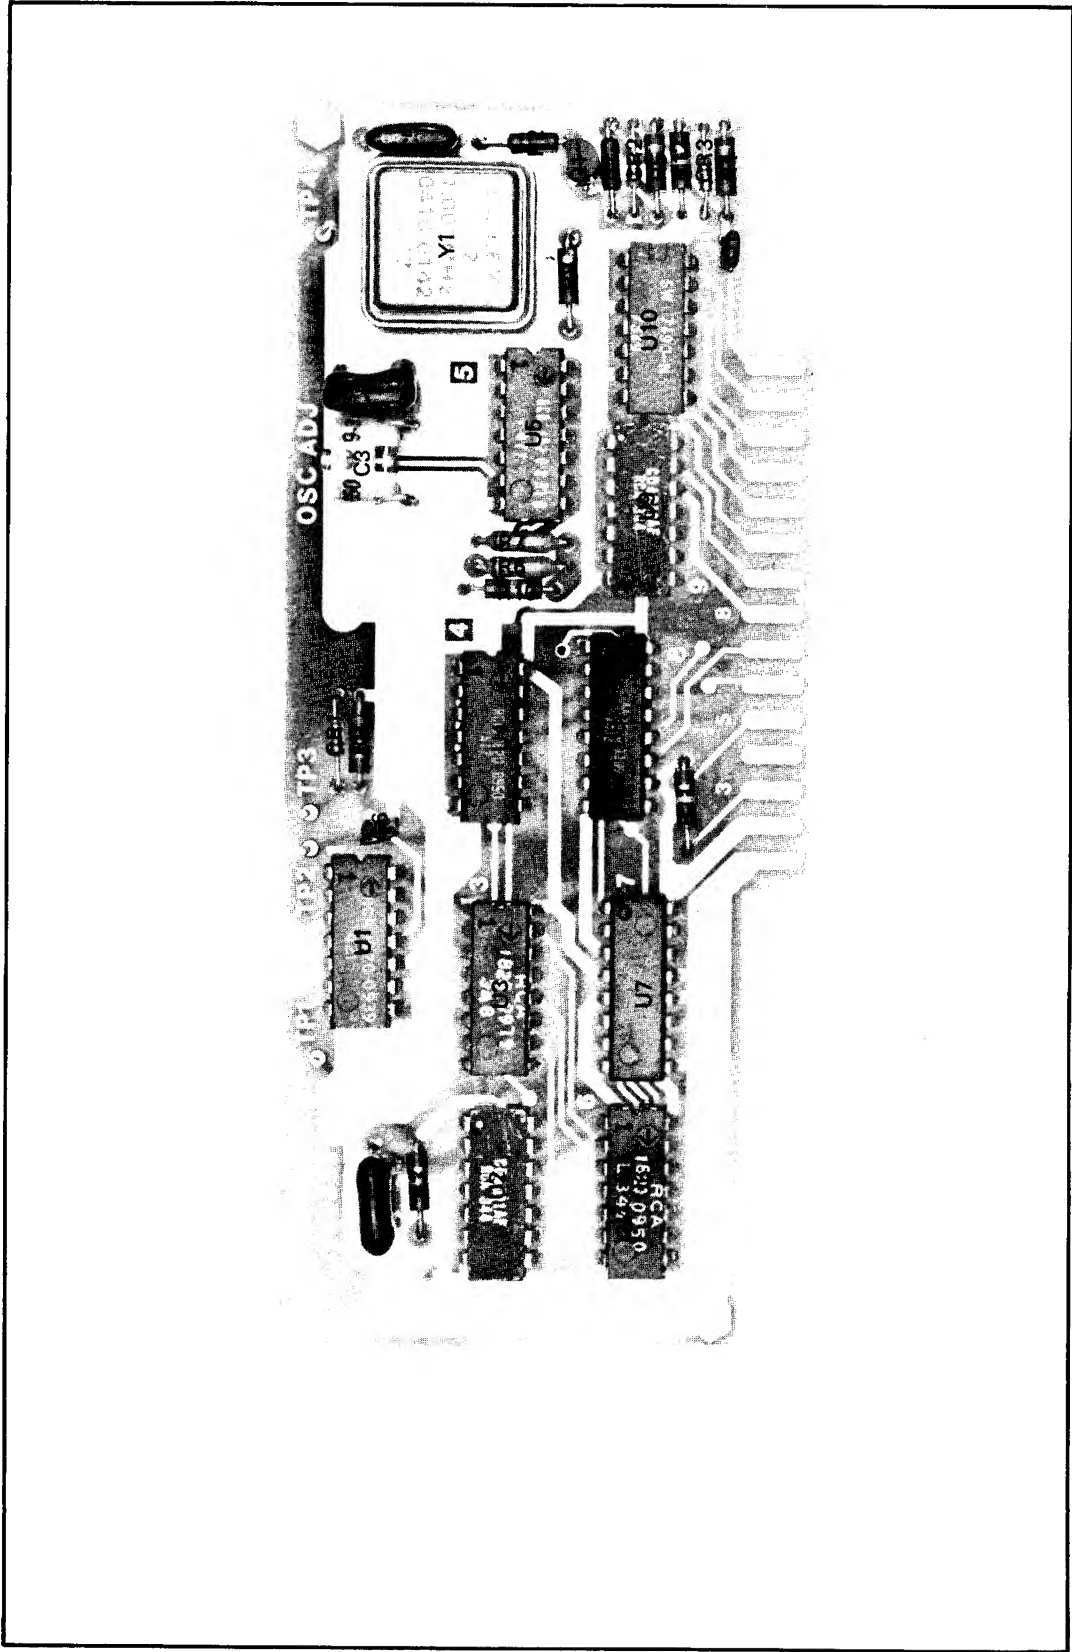


Figure 7-1. Julian Oscillator A3 Option 001, Component Locator

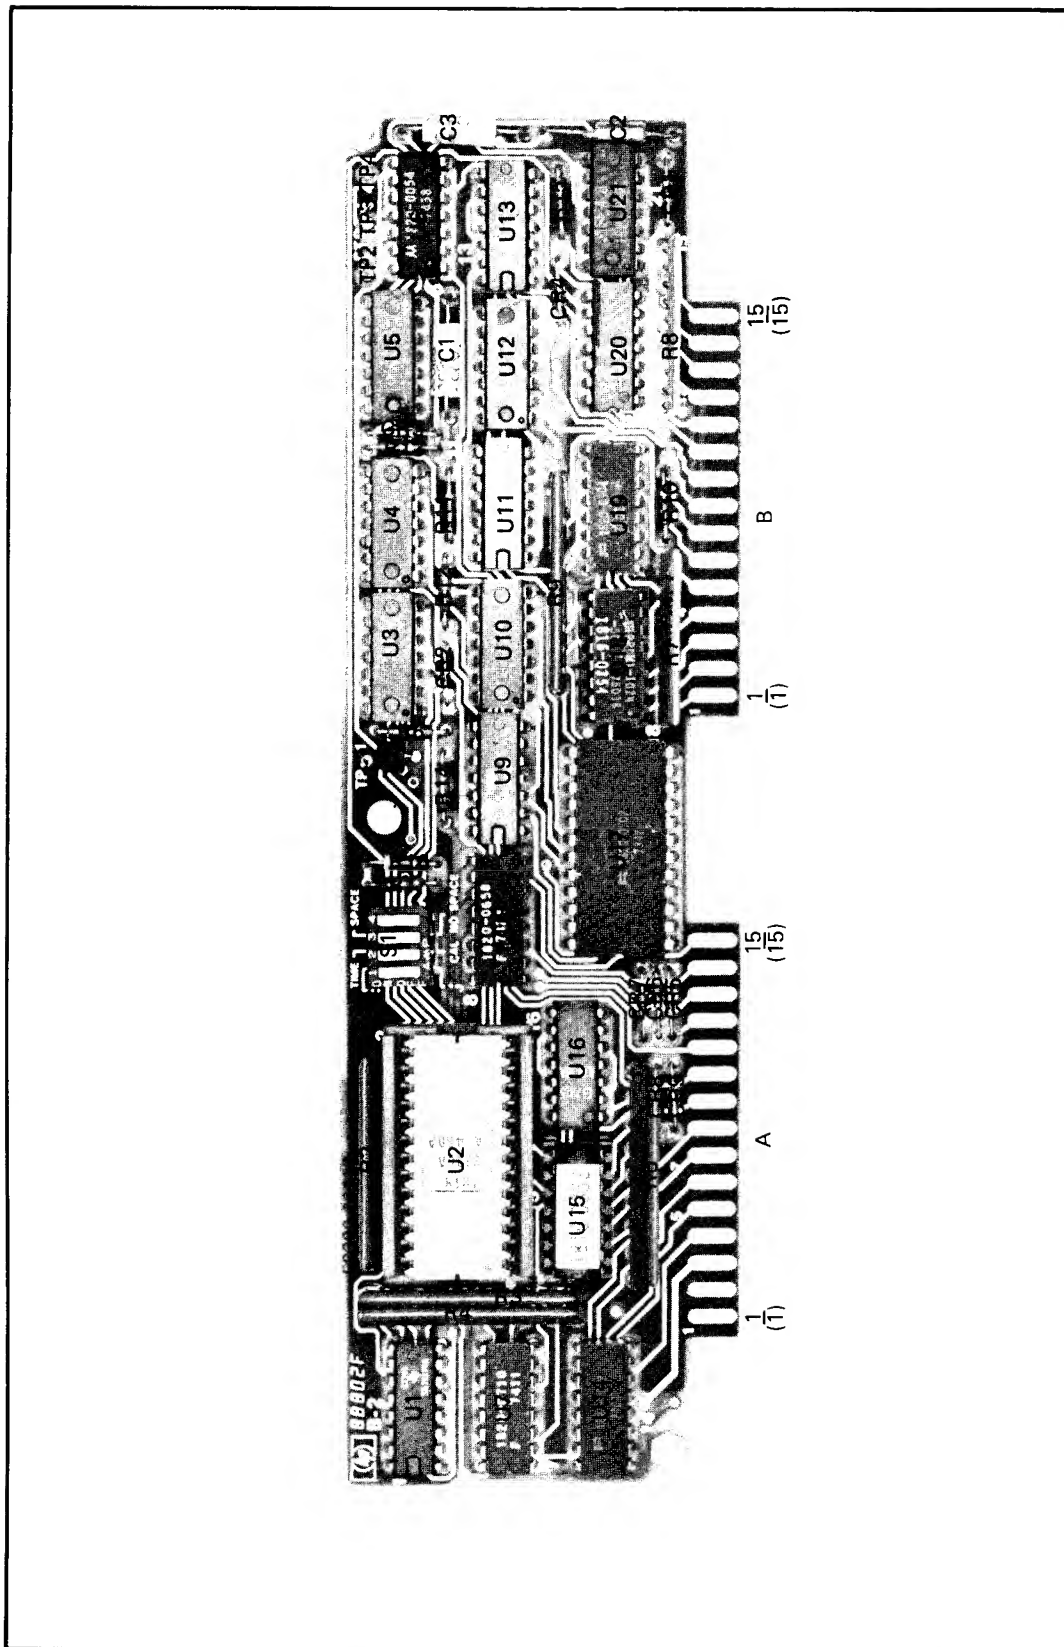


Figure 7-2. Julian I/O Board Assembly A5 Option 001, Component Locator

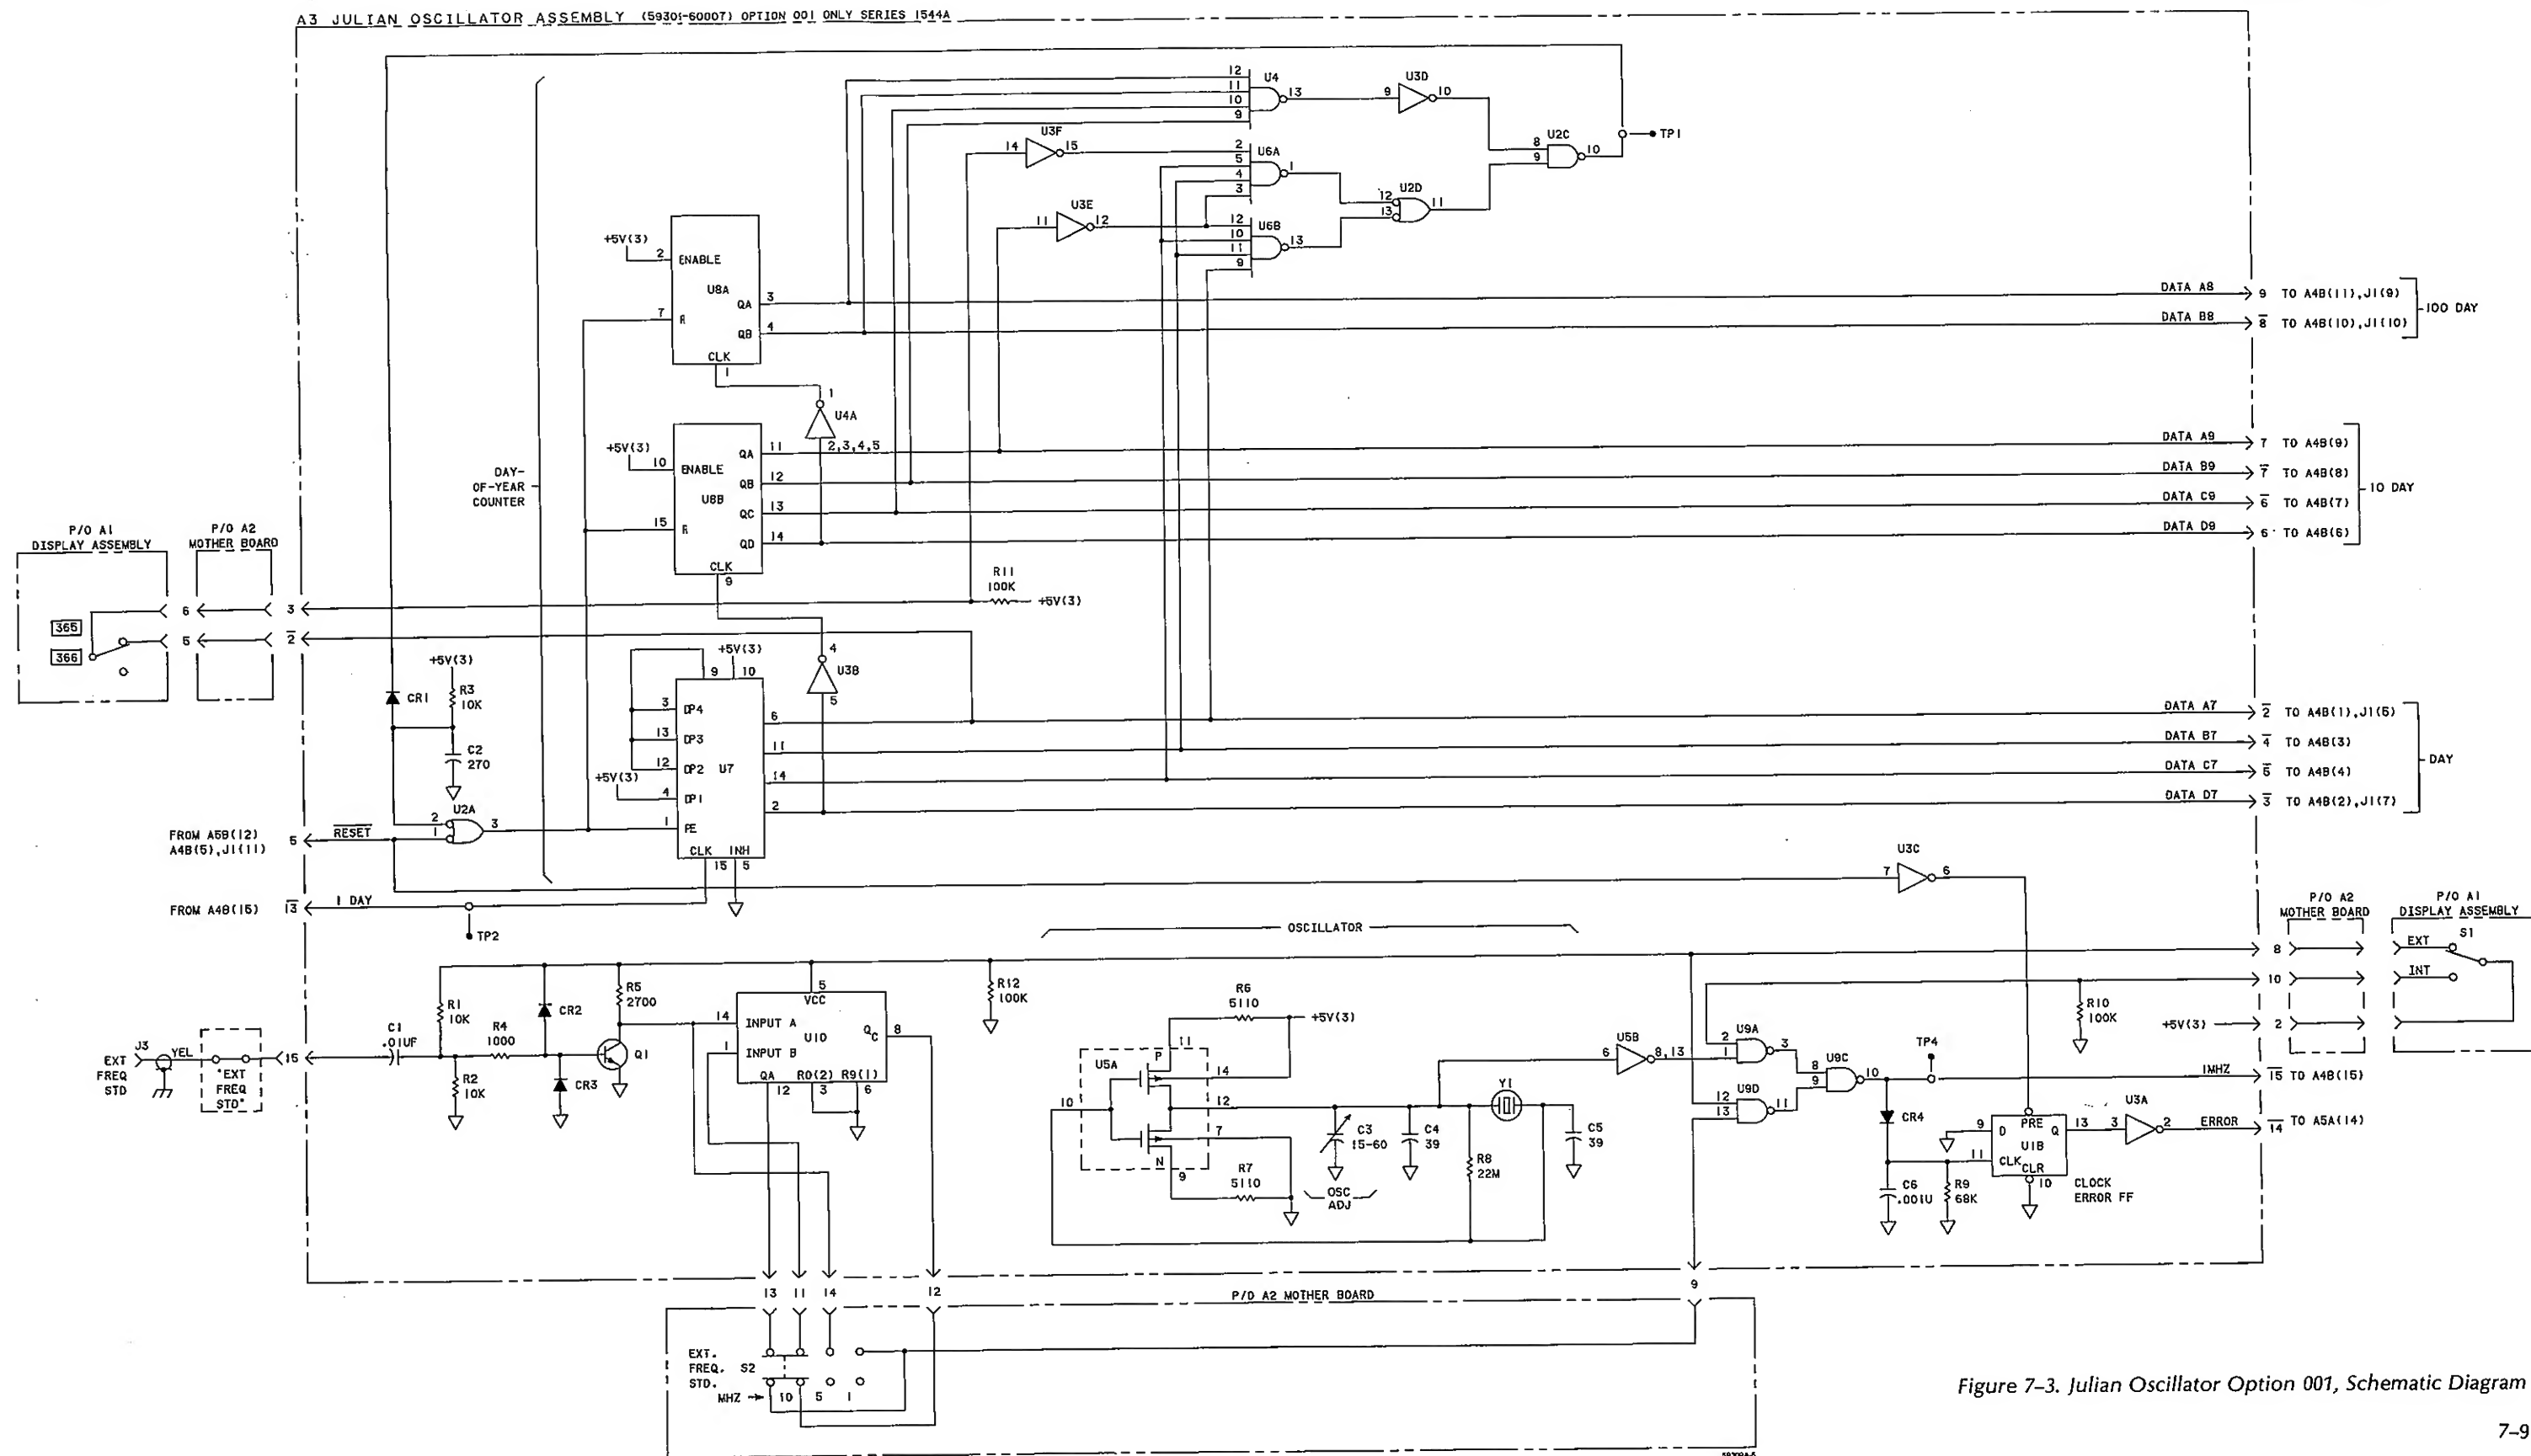


Figure 7-3. Julian Oscillator Option 001, Schematic Diagram

SECTION VIII

SCHEMATIC DIAGRAMS

8-1. INTRODUCTION

8-2. This section includes schematic diagram notes (*Figure 8-1*), Digital Bus Connector pin designations (*Figure 8-2*), component locator illustrations, and schematic diagrams for the PC board assemblies included in the 59309A HP-IB Digital Clock.

8-3. SCHEMATIC DIAGRAM NOTES, ASSEMBLY NUMBERS, AND REFERENCE DESIGNATORS

8-4. *Figure 8-1* shows the symbols used on the schematic diagram. At the bottom of *Figure 8-1*, the system for reference designators, assemblies, and subassemblies are shown. On the schematic, a table of active elements is included which lists the HP part number and manufacturer's part number for IC's, diodes, and transistors.

8-5. Reference Designations

8-6. Assemblies such as printed circuit boards are assigned numbers in sequence, A1, A2, etc. As shown in *Figure 8-1*, subassemblies within an assembly are given a subordinate A number. For example, rectifier subassembly A1 has the complete designator of A25A1. For individual components, the complete designator is determined by adding the assembly number and sub-assembly number if any. For example CR1 on the rectifier assembly is designated A25A1CR1. On the schematic, a table of reference designators is included which lists the number of designations assigned.

8-7. Identification Markings on Printed-Circuit Boards


8-8. HP printed circuit boards (see *Figure 8-1*) have four identification numbers; an assembly part number, a series number, a revision letter, and a production code.

8-9. The assembly part number has 10 digits (such as 05340-60037) and is the primary identification. All assemblies with the same part number are interchangeable. When a production change is made on an assembly that makes it incompatible with previous assemblies, a change in part number is required. The series number (such as 1248A) is used to document minor electrical changes. As changes are made, the series number is incremented. When replacement boards are ordered, you may receive a replacement with a different series number. If there is a difference between the series number marked on the board and the schematic in this manual, a minor electrical difference exists. If the number on the printed-circuit board is lower than that on the schematic, refer to Section VII for backdating information. If it is higher, refer to the looseleaf manual change sheets for this manual. If the manual change sheets are missing, contact your local Hewlett-Packard Sales and Service Office. See the listing on the back cover of this manual.

8-10. Revision letters (A, B, etc.) denote changes in printed circuit layout. For example, if a capacitor type is changed (electrical value may remain the same) and requires different spacing for its leads, the printed circuit board layout is changed and the revision letter is incremented to the next letter. When a revision letter changes, the series number is also usually changed. The production code is the four-digit, seven-segment number used for production purposes.

8-11. COMPONENT LOCATORS

8-12. Component locators for each printed circuit assembly are located next to the schematic diagram.

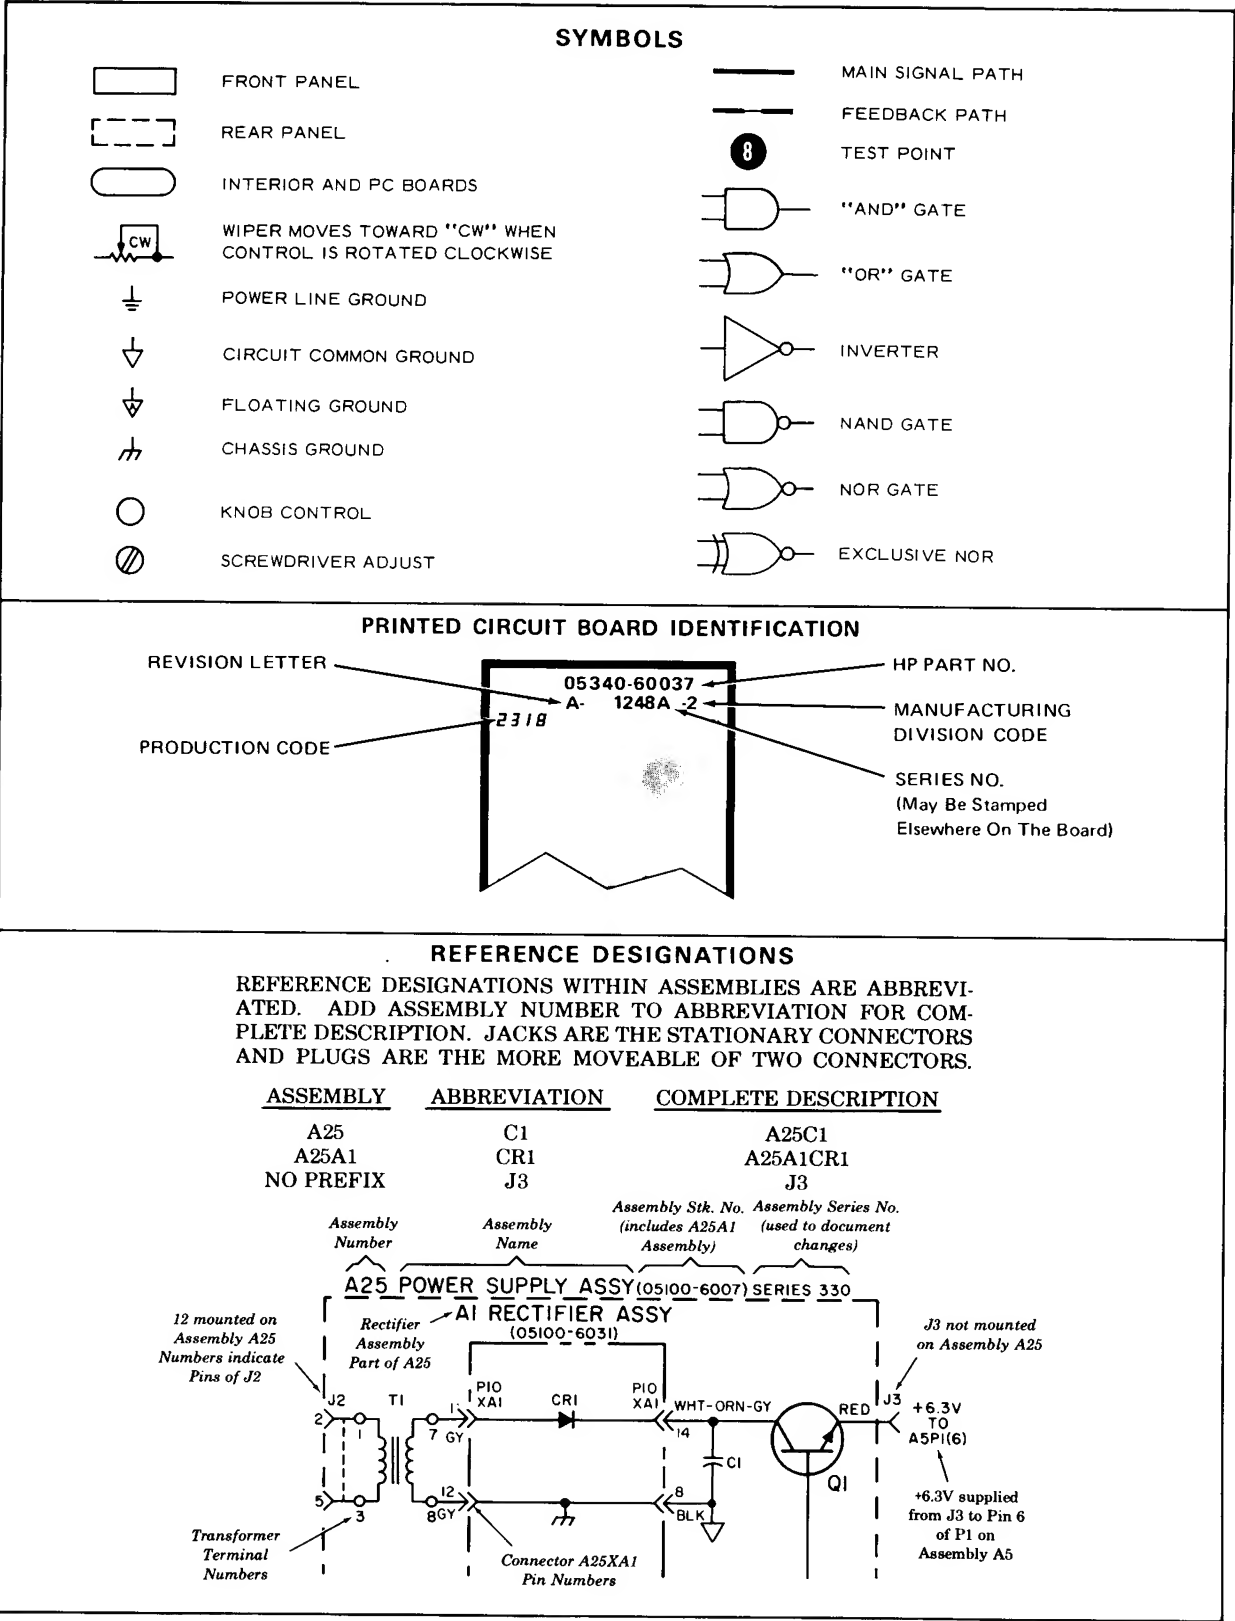

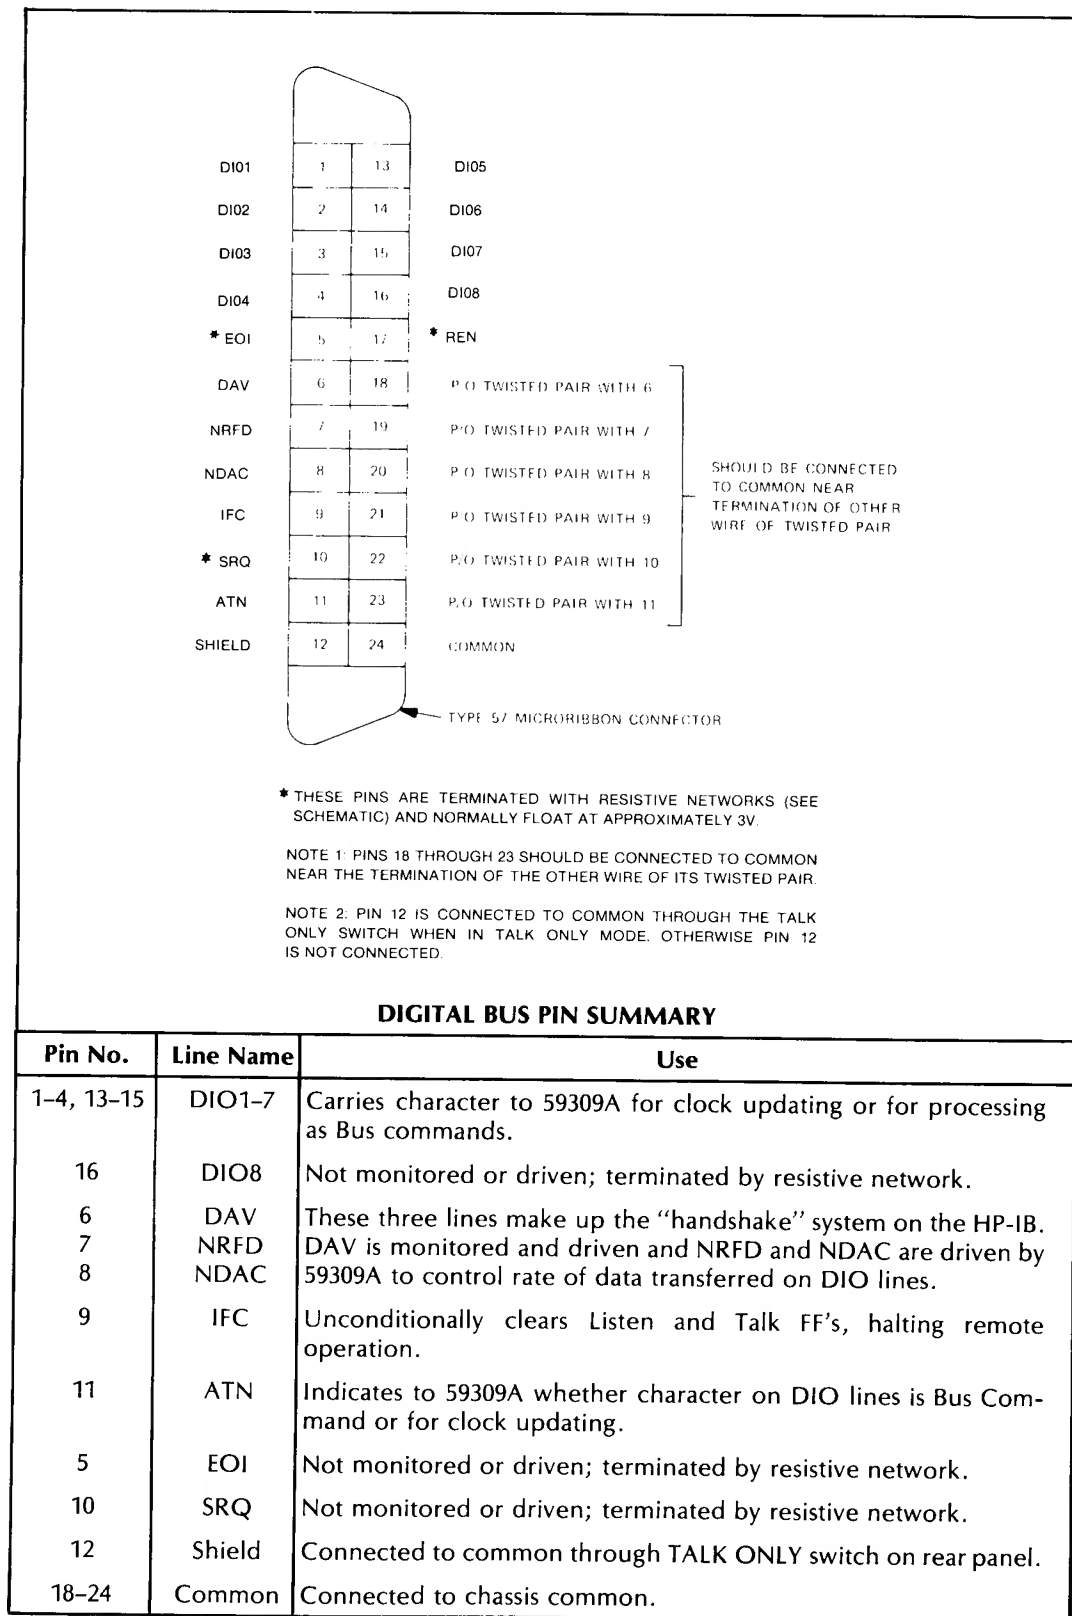


Figure 8-2. Digital Bus Connector Pin Designations

A1 DISPLAY ASSEMBLY (59309-60001)

The display assembly consists of an LED Display, a Seven-Segment Decoder, Segment Drivers, a Clock Loss Detector, an Addressed Indicator, and Front-Panel Switches.

LED DISPLAY (A1DS1, A1DS2, and A1DS3). The display provides seven segments per-digit. Two digits are provided for each of the months, days, hours, minutes, and seconds displayed. A1DS1 contains months and days digits, A1DS2 contains hours digits, and A1DS3 contains minutes and seconds digits. Each of the input lines from the Segment Drivers to A1DS1, A1DS2, and A1DS3 is connected in parallel to each digit.

SEVEN-SEGMENT DECODER (A1U2). The seven-segment decoder receives the 4-bit code from the Data Bus and converts it into control codes. The codes control the illumination of the seven-segments in each digit of the display.

SEGMENT DRIVERS (A1Q1 through A1Q8). Transistors A1Q1 through A1Q7 provide drive to the display segments for the seven-segment decoder. Transistor A1Q8 provides for the Error signal to illuminate the decimal points in the display as an indication of error.

CLOCK LOSS DETECTOR (A1U3). The Clock Loss Detector protects the display from damage by blanking it completely if the strobe signals fail. If the Digit 8 signal is not received within the timing period of the timer circuit (A1U3), a signal is sent from the timer to the blanking input of decoder A1U2 and to transistor A1Q8 in the error circuit to blank the display. The blanking action occurs when the time base oscillator or associated circuitry fails. Blanking also occurs when the EXT INT switch on the front panel is switched to EXT without an external frequency applied.

ADDRESSED INDICATOR (A1DS4). The Addressed Indicator illuminates to indicate that the 59309A is addressed to listen or to talk.

FRONT PANEL SWITCHES (A1S1 through A1S8). Front Panel Switches are provided to start, stop, reset, or update the clock manually. The switches and connector pins are shown on the display assembly schematic diagram. The switches are also shown in the appropriate functional locations on other schematic diagrams for the 59309A.

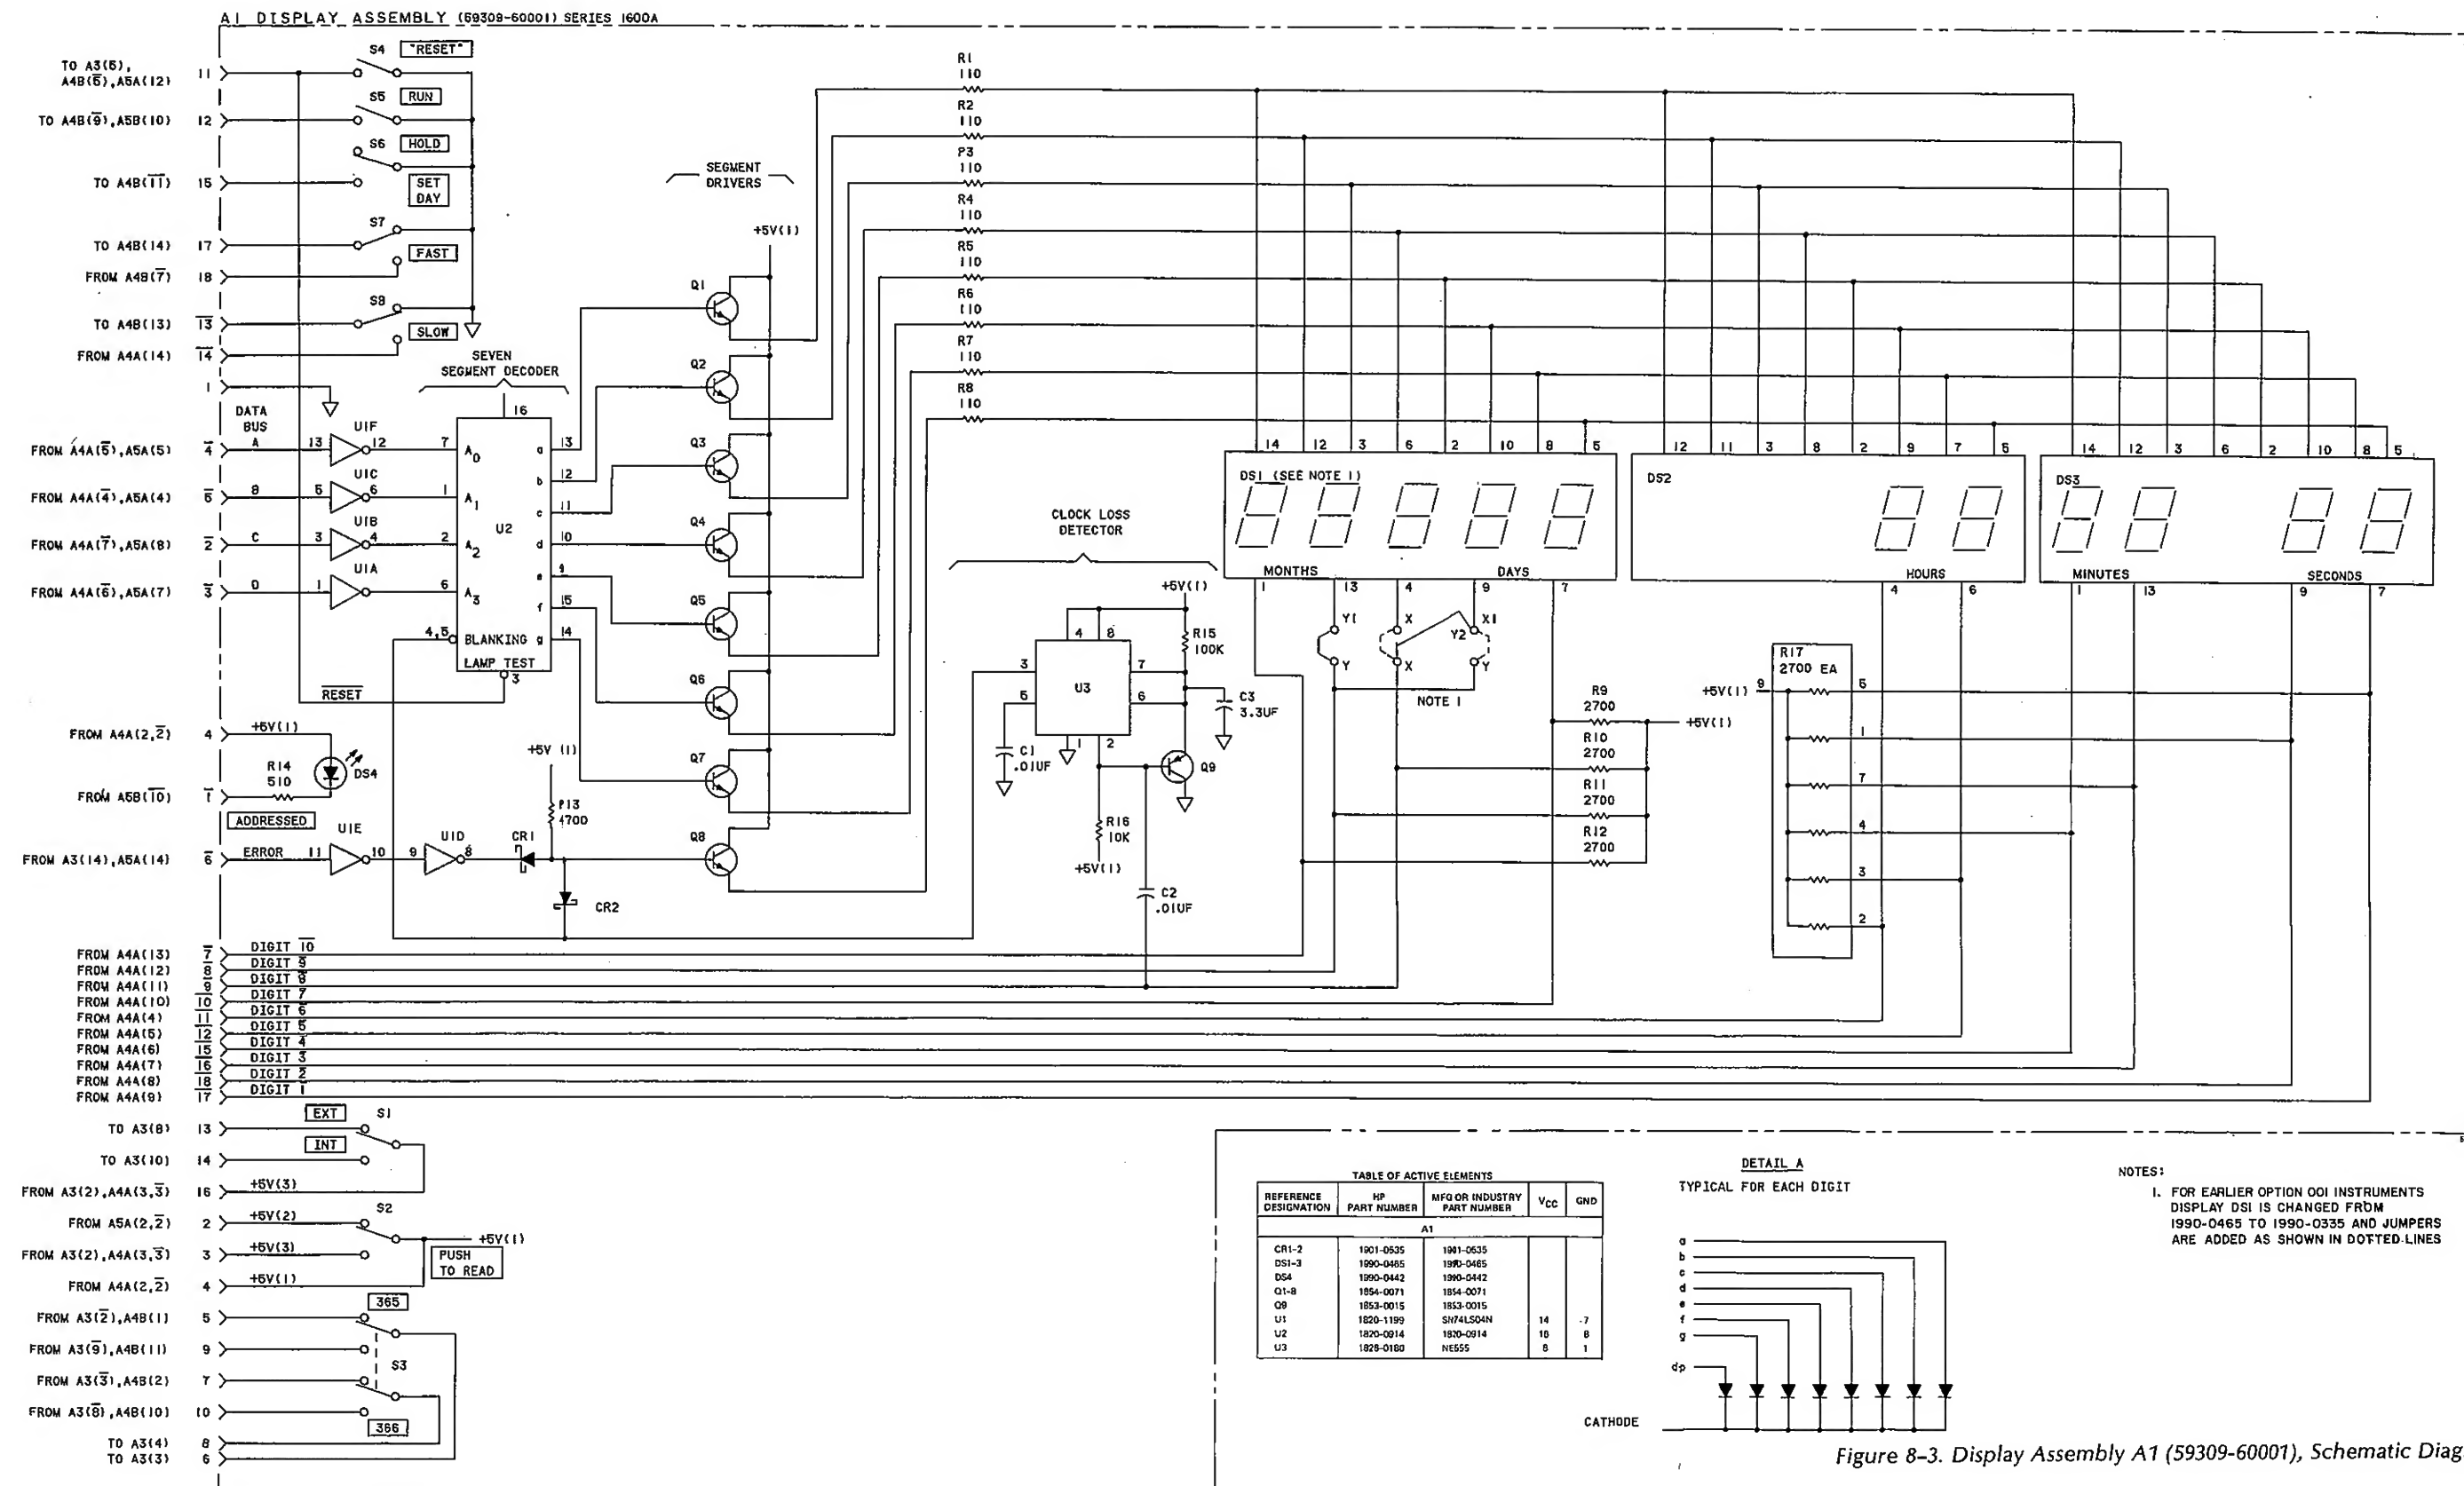
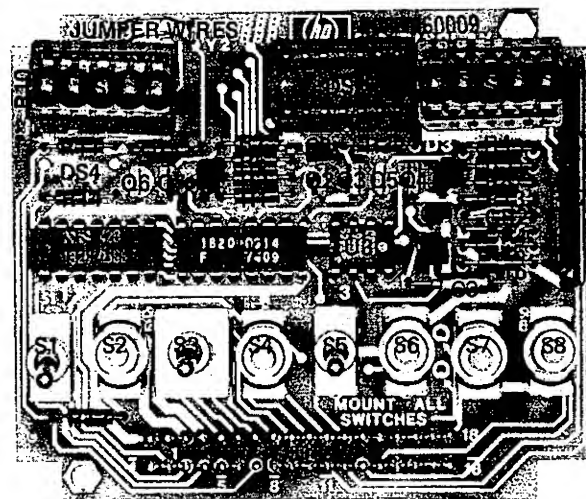


Figure 8-3. Display Assembly A1 (59309-60001), Schematic Diagram

A2 MOTHERBOARD (59309-60002)

The motherboard contains the Power Supply and provides all interconnections for the plug-in cards, the rear-panel connectors and the front-panel (display circuit) connector.

POWER SUPPLY. The Power Supply operates from an ac power source of 115V or 230V, selected by S1. The power input is sent through a transformer, a full-wave bridge rectifier and regulator circuits to provide +5V (1) to the display logic, +5V (2) to the TTL logic, and +5V (3) to the CMOS logic. The C Line signal is a 5-volt square wave returned from the CMOS circuit (A4U15B) to the power supply to develop -2V and +12V. These two voltages are supplied to low-current drain State Machine ROM A5U2. (The C Line signal is also used as Master Clock signal for the circuits in the 59309A).

The **STANDBY POWER INPUT** 9V connector on the rear panel allows connection of an 8- to 10-volt dc power source to maintain operation of the 59309A if the ac power fails. In this mode of operation, the display is not illuminated unless the **PUSH TO READ** button on the front panel is pushed. In addition, the talk output and the remote programming circuits are inoperative (not powered).

A plug-in connector on the motherboard allows installation of a 9-volt dry cell battery to provide standby operation during short periods (up to a day) of power outage. Operation in this mode is similar to the standby operation described in the preceding paragraph except the display cannot be illuminated. A jumper installed between the battery connector terminals must be removed to allow installation of the battery. Removal of the jumper disconnects **PUSH TO READ** switch A1S2.

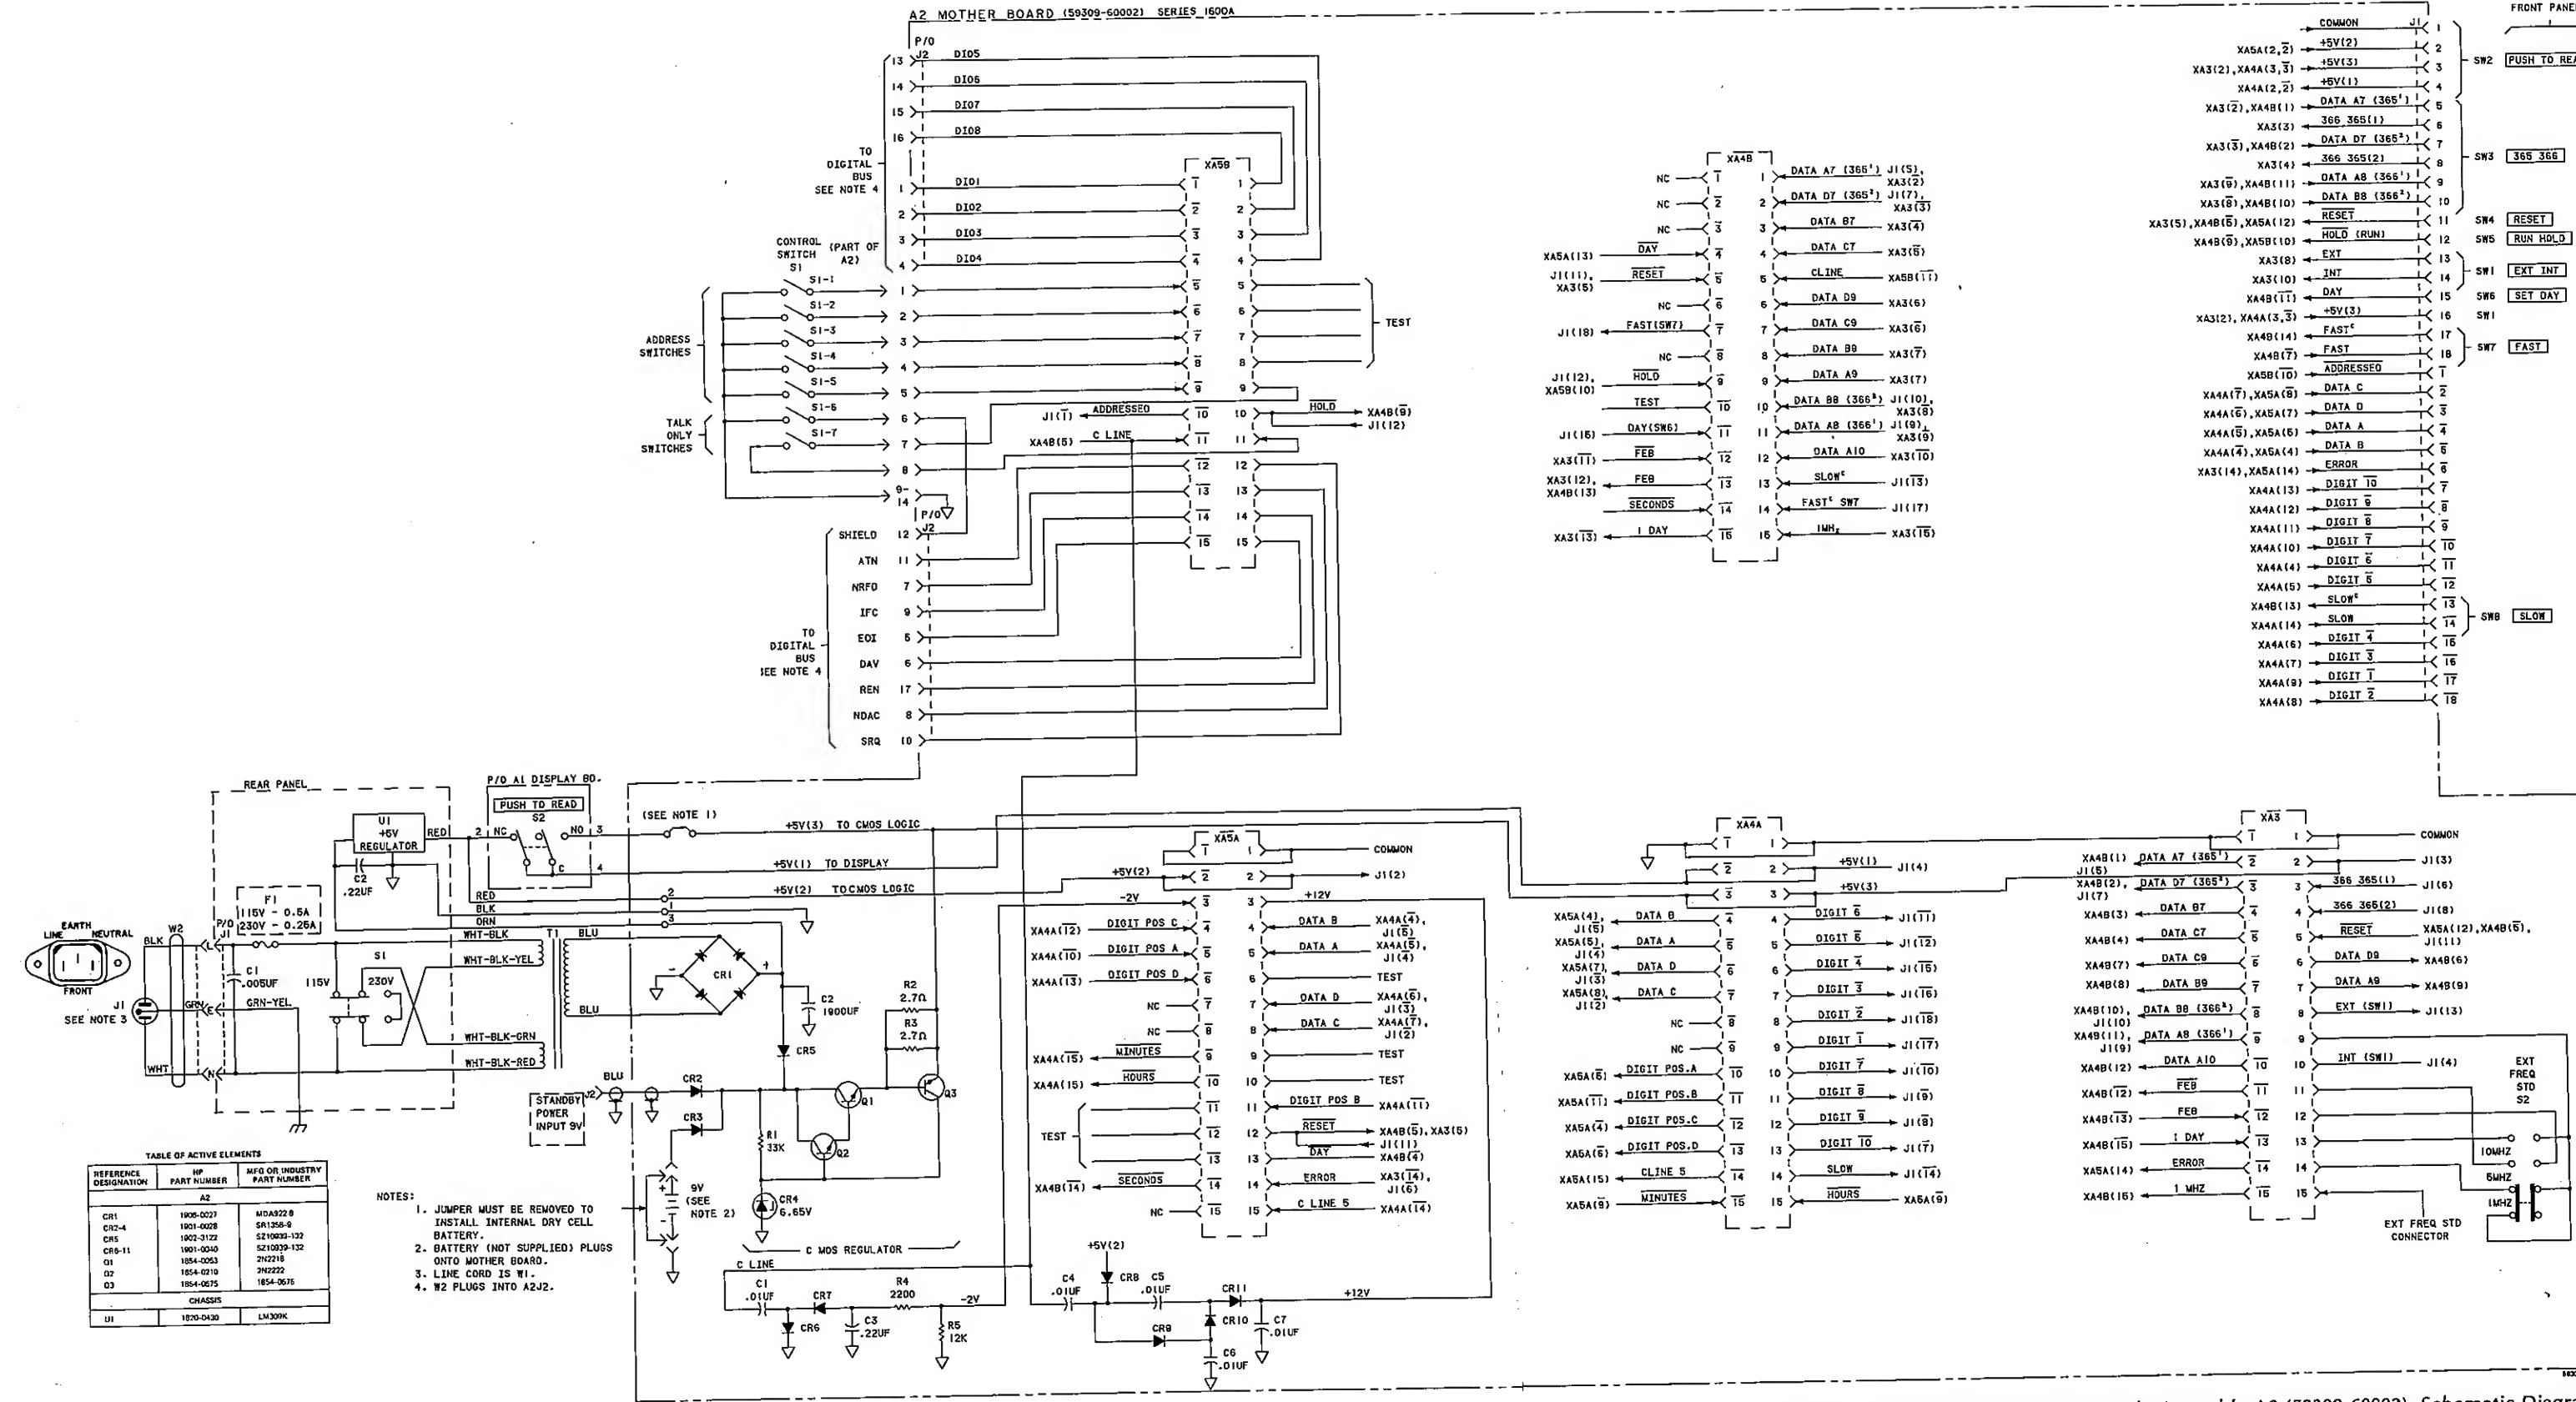
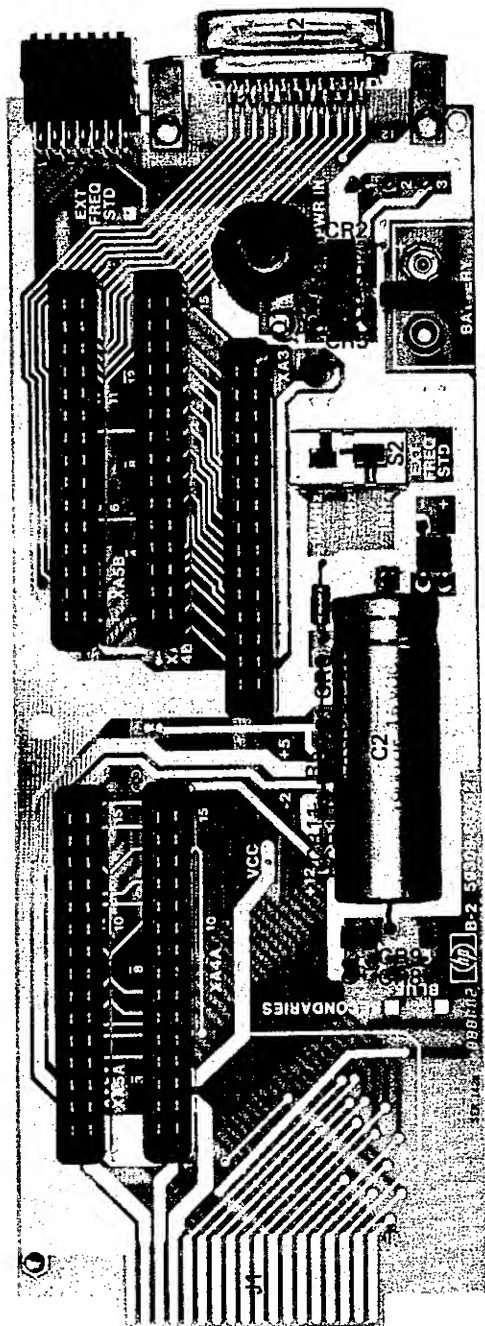


Figure 8-4. Motherboard/Power Supply Assembly A2 (59309-60002), Schematic Diagram

A3 CALENDAR OSCILLATOR ASSEMBLY (59309-60003)

This circuit includes the External Frequency Divider, the 1 MHz oscillator, the Day Counter, the Month Counter and the Clock Error FF.

EXTERNAL FREQUENCY DIVIDER (A3U12). This divider and transistor A3Q1 receive operating voltage through the EXT. position of the EXT INT switch on the front panel. The output of an external frequency standard, connected to the rear-panel EXT FREQ STD connector is divided by A3U12 to supply 1 MHz through gates A3U11D and A3U11C.

1 MHz OSCILLATOR (A3U7). The internal oscillator supplies 1 MHz through gates A3U11A and A3U11C when the EXT INT switch on the front panel is set to INT.


The 1 MHz signal from either the External Frequency Divider or the internal 1 MHz oscillator is the time base for the 59309A and is supplied to the Time Base Divider on board A4 and to Clock Error FF A3U3.

DAY COUNTER (A3U1 and A3U4). The Day Counter receives the 1 day signal from gate A4U6. The day units are counted by A3U1 and the day tens are counted by A3U4. Gates A3U8 and A3U9 provide feedback to reset the counters at the end of the month. A3U8A provides a reset when a 31 count occurs in a 30 day month; A3U8B provides a reset when a 30 count occurs in a 29 day month or when a 29 count occurs in a 28 day month. A3U9B provides a reset when a 32 count occurs in a 31 day month. The outputs of the counters are sent to the A4 board and synchronized by the appropriate digit position bit for output to the display via the Data Bus.


MONTH COUNTER (A3U2 and A3U3B). The Month Counter is clocked by the Day Counter at the end of a month. The month units (0 to 9) are counted by A3U2 and the tens (0 to 1) are counted by A3U3B. At a count of 13 by A3U2 and A3U3B a reset is applied through A3U10C to the counter. The outputs of the counters are sent to the A4 board and synchronized by the appropriate digit position bit for output to the display via the Data Bus.

CLOCK ERROR FF (A3U3A). The Clock Error FF provides an error signal which illuminates all decimal points in the front-panel display. In addition, the error signal is sent to Qualifier Selector A5U8 to result in an ASCII question mark as the first character in the talk output format to the HP-IB. The error signal is generated when the operation of the oscillator is initiated or disrupted, for example by initial application of power, or when an external frequency standard is first connected into the circuit, or when the oscillator output fails.

Figure 8-4
MOTHERBOARD/POWER SUPPLY ASSEMBLY A2
(59309-60002), SCHEMATIC DIAGRAM

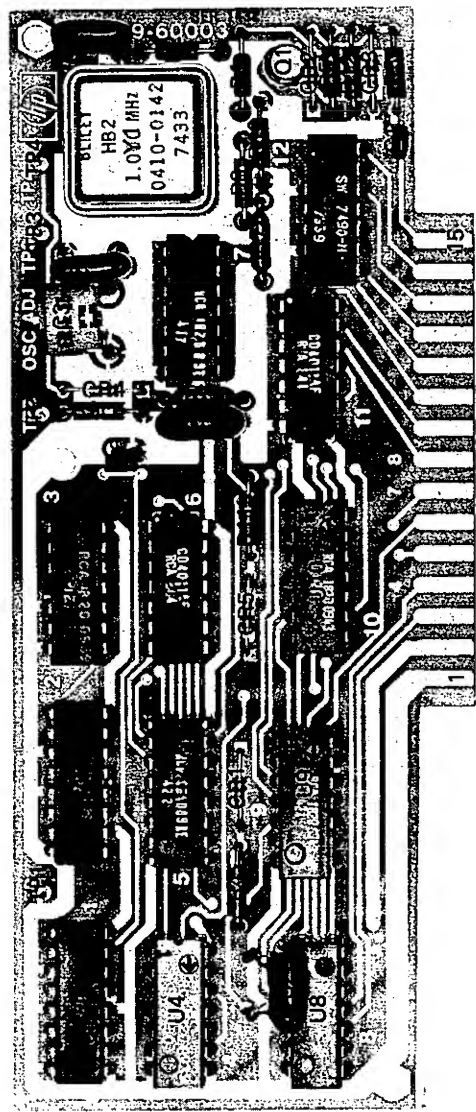

Part of Figure 8-5. Calendar Oscillator Assembly A3

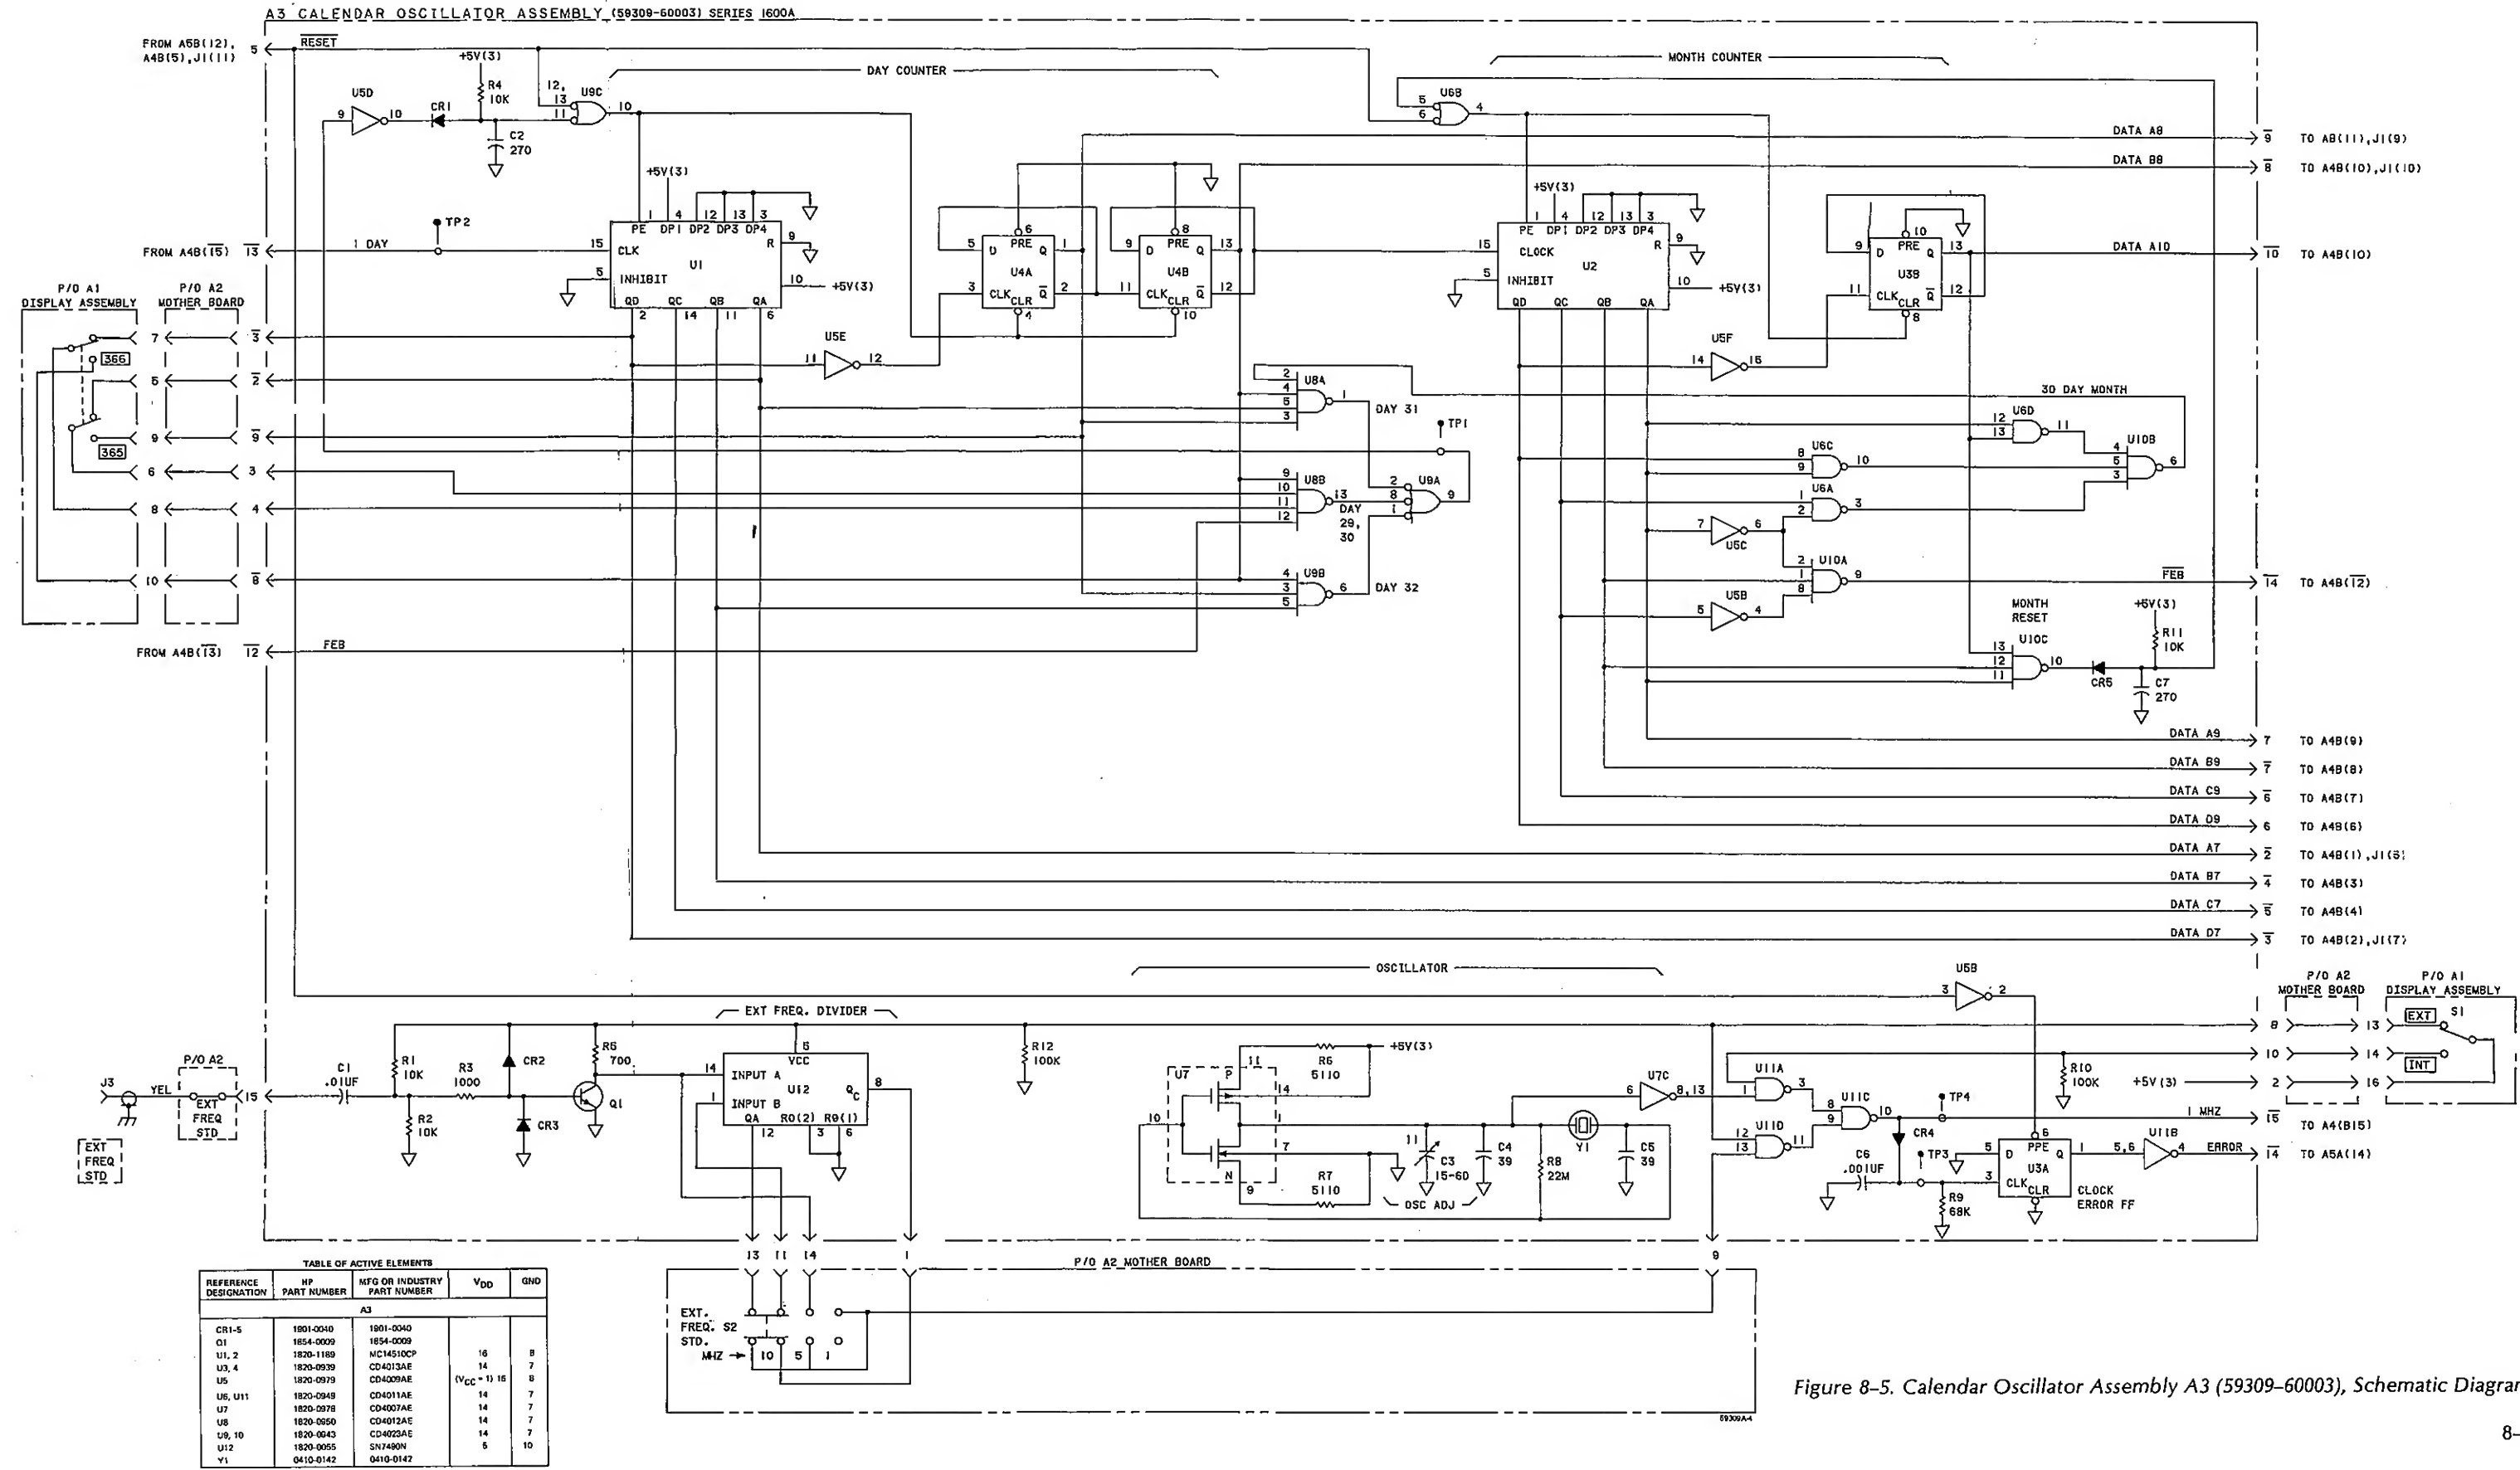

A4 TIME ASSEMBLY (59309-60004)

The Time Assembly contains the Time Base Divider and the counter circuits that develop the information supplied to the Data Bus for the clock display and the talk output.


TIME BASE DIVIDER (A4U13, A4U14, A4U15). The Time Base Divider decades receive the 1 MHz signal from the time base oscillator on the A3 board and divide the signal down to 1 Hz to supply the 1-second signal to the seconds counter. In addition, an output called C Line is supplied by A4U15B. This signal is used by the Handshake Synchronizer on the A5 board, and by the Power Supply (on the A2 board) to develop the -2V and +12V which is supplied to the State Machine ROM A5U2, and is the main clock for the State Machine ROM.

The Time Base Divider circuit also supplies digit position information for the display and provides the C Line 5 signal. The digit position information is generated by four-bit counter (A4U13A) via the Digit Position Bus to Digit Position Decoder (A4U18) and to the RAM Address Counter A5U7. The C-Line-5 signal is used as a qualifier by the Qualifier Selector A5U8.

An output from counter A4U13A is provide through the SLOW switch on the front panel to gate A4U23 for manual slow update of the clock. An output from U14A is provided through the FAST switch for fast update of the Clock.

DIGIT POSITION DECODER (A4U18). This decoder receives a four-bit code from the Time Base Divider and decodes it to a 10-bit output that is sent to the front panel display to illuminate the digit positions. This 10-bit output is also supplied, through drivers (A4U17 and A4U19), to synchronize the outputs of the counters (on the A3 and A4 boards) to the Data Bus for strobing the display.

SECONDS COUNTER (A4U4), MINUTES COUNTER (A4U2), HOURS COUNTER (A4U1B). The Seconds Counter receives the 1 Second signal from gate A4U6B and divides it by 10 (A4U4A), then by 6 (A4U4B), and supplies the output to the Minutes Counter which divides by 10 (A4U2A), then by 6 (A4U2B), and supplies the output to the Hours Counter which divides by 24 to provide the 1 Day signal. The 1 Day signal is sent through gate U6A to the Day Counter on the A3 board. All the BCD outputs of each counter, synchronized by the appropriate digit position bit are output via the Data Bus for display. The counters and gate A4U6 receive update and reset signals from Program Code Decoder A5U17 or from the switches on the front panel.

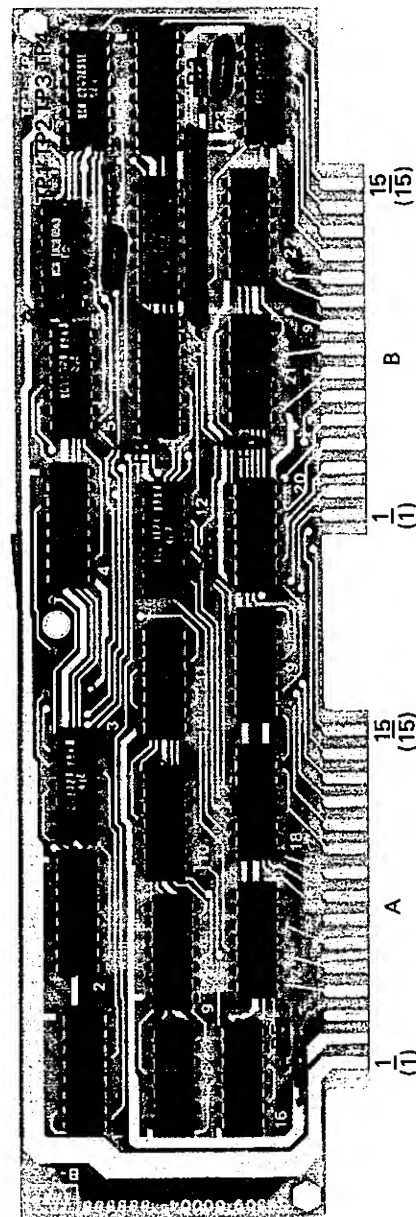

Part of Figure 8-6. Time Assembly A4

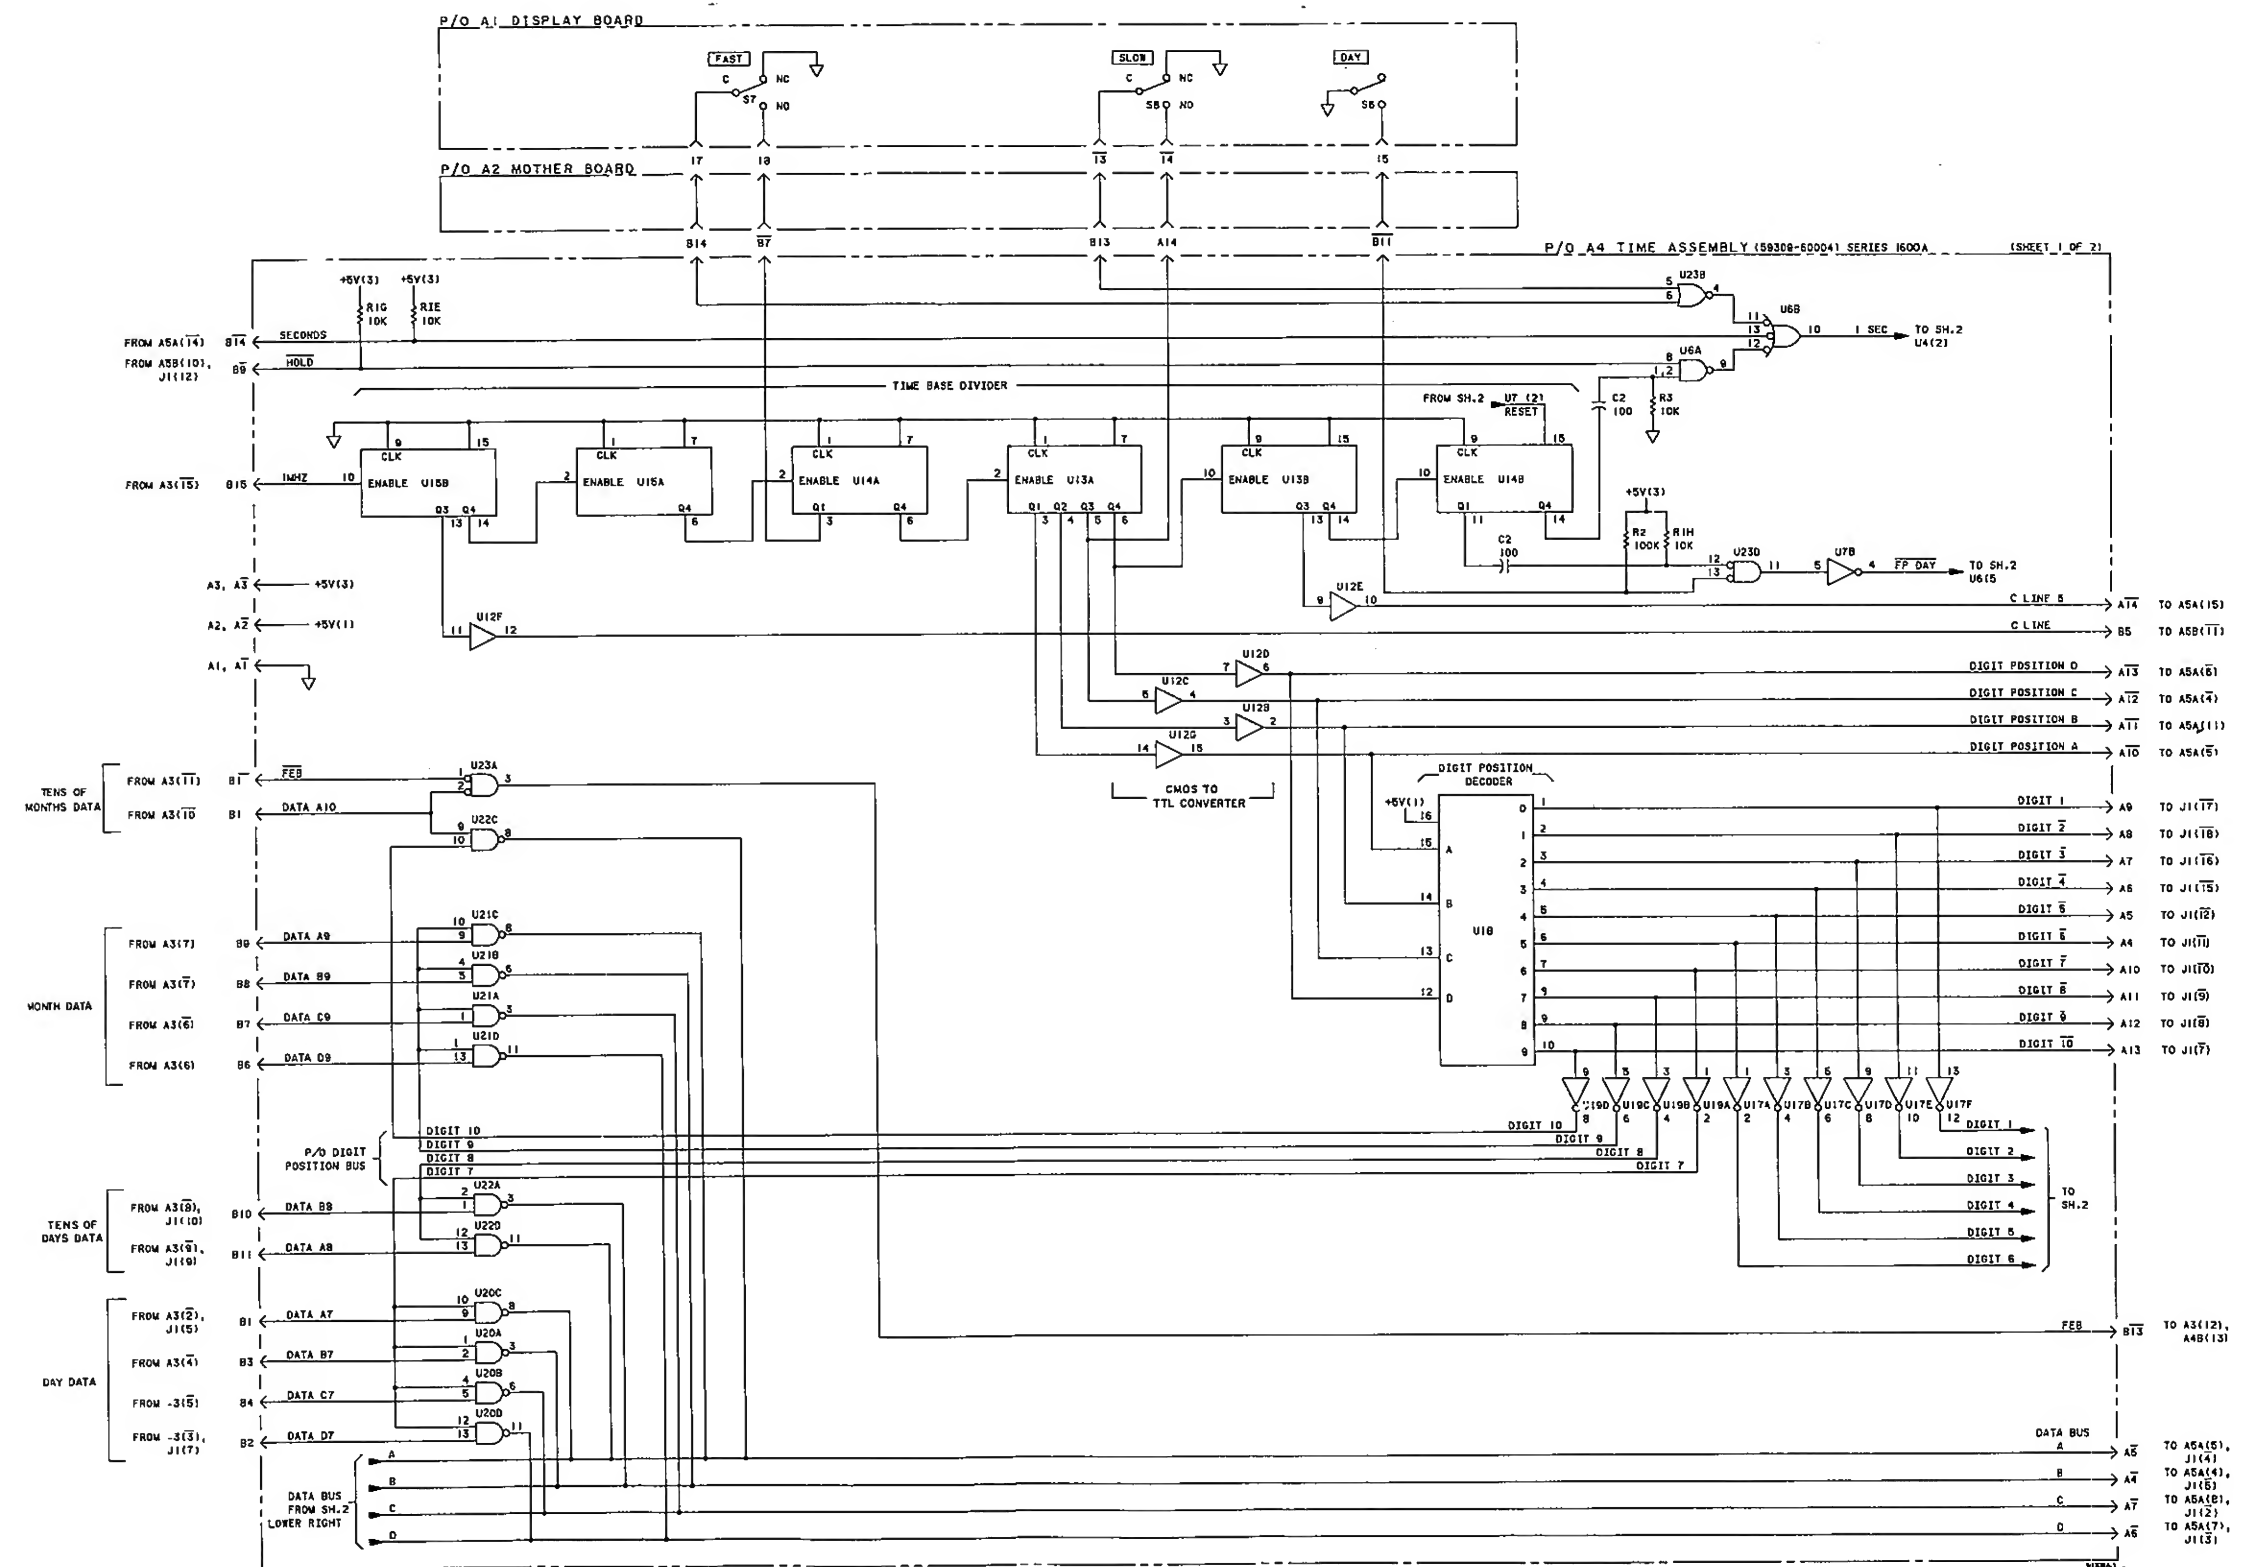


Figure 8-6. Time Assembly A4 (59309-60004), Schematic Diagram
(Sheet 1 of 2)

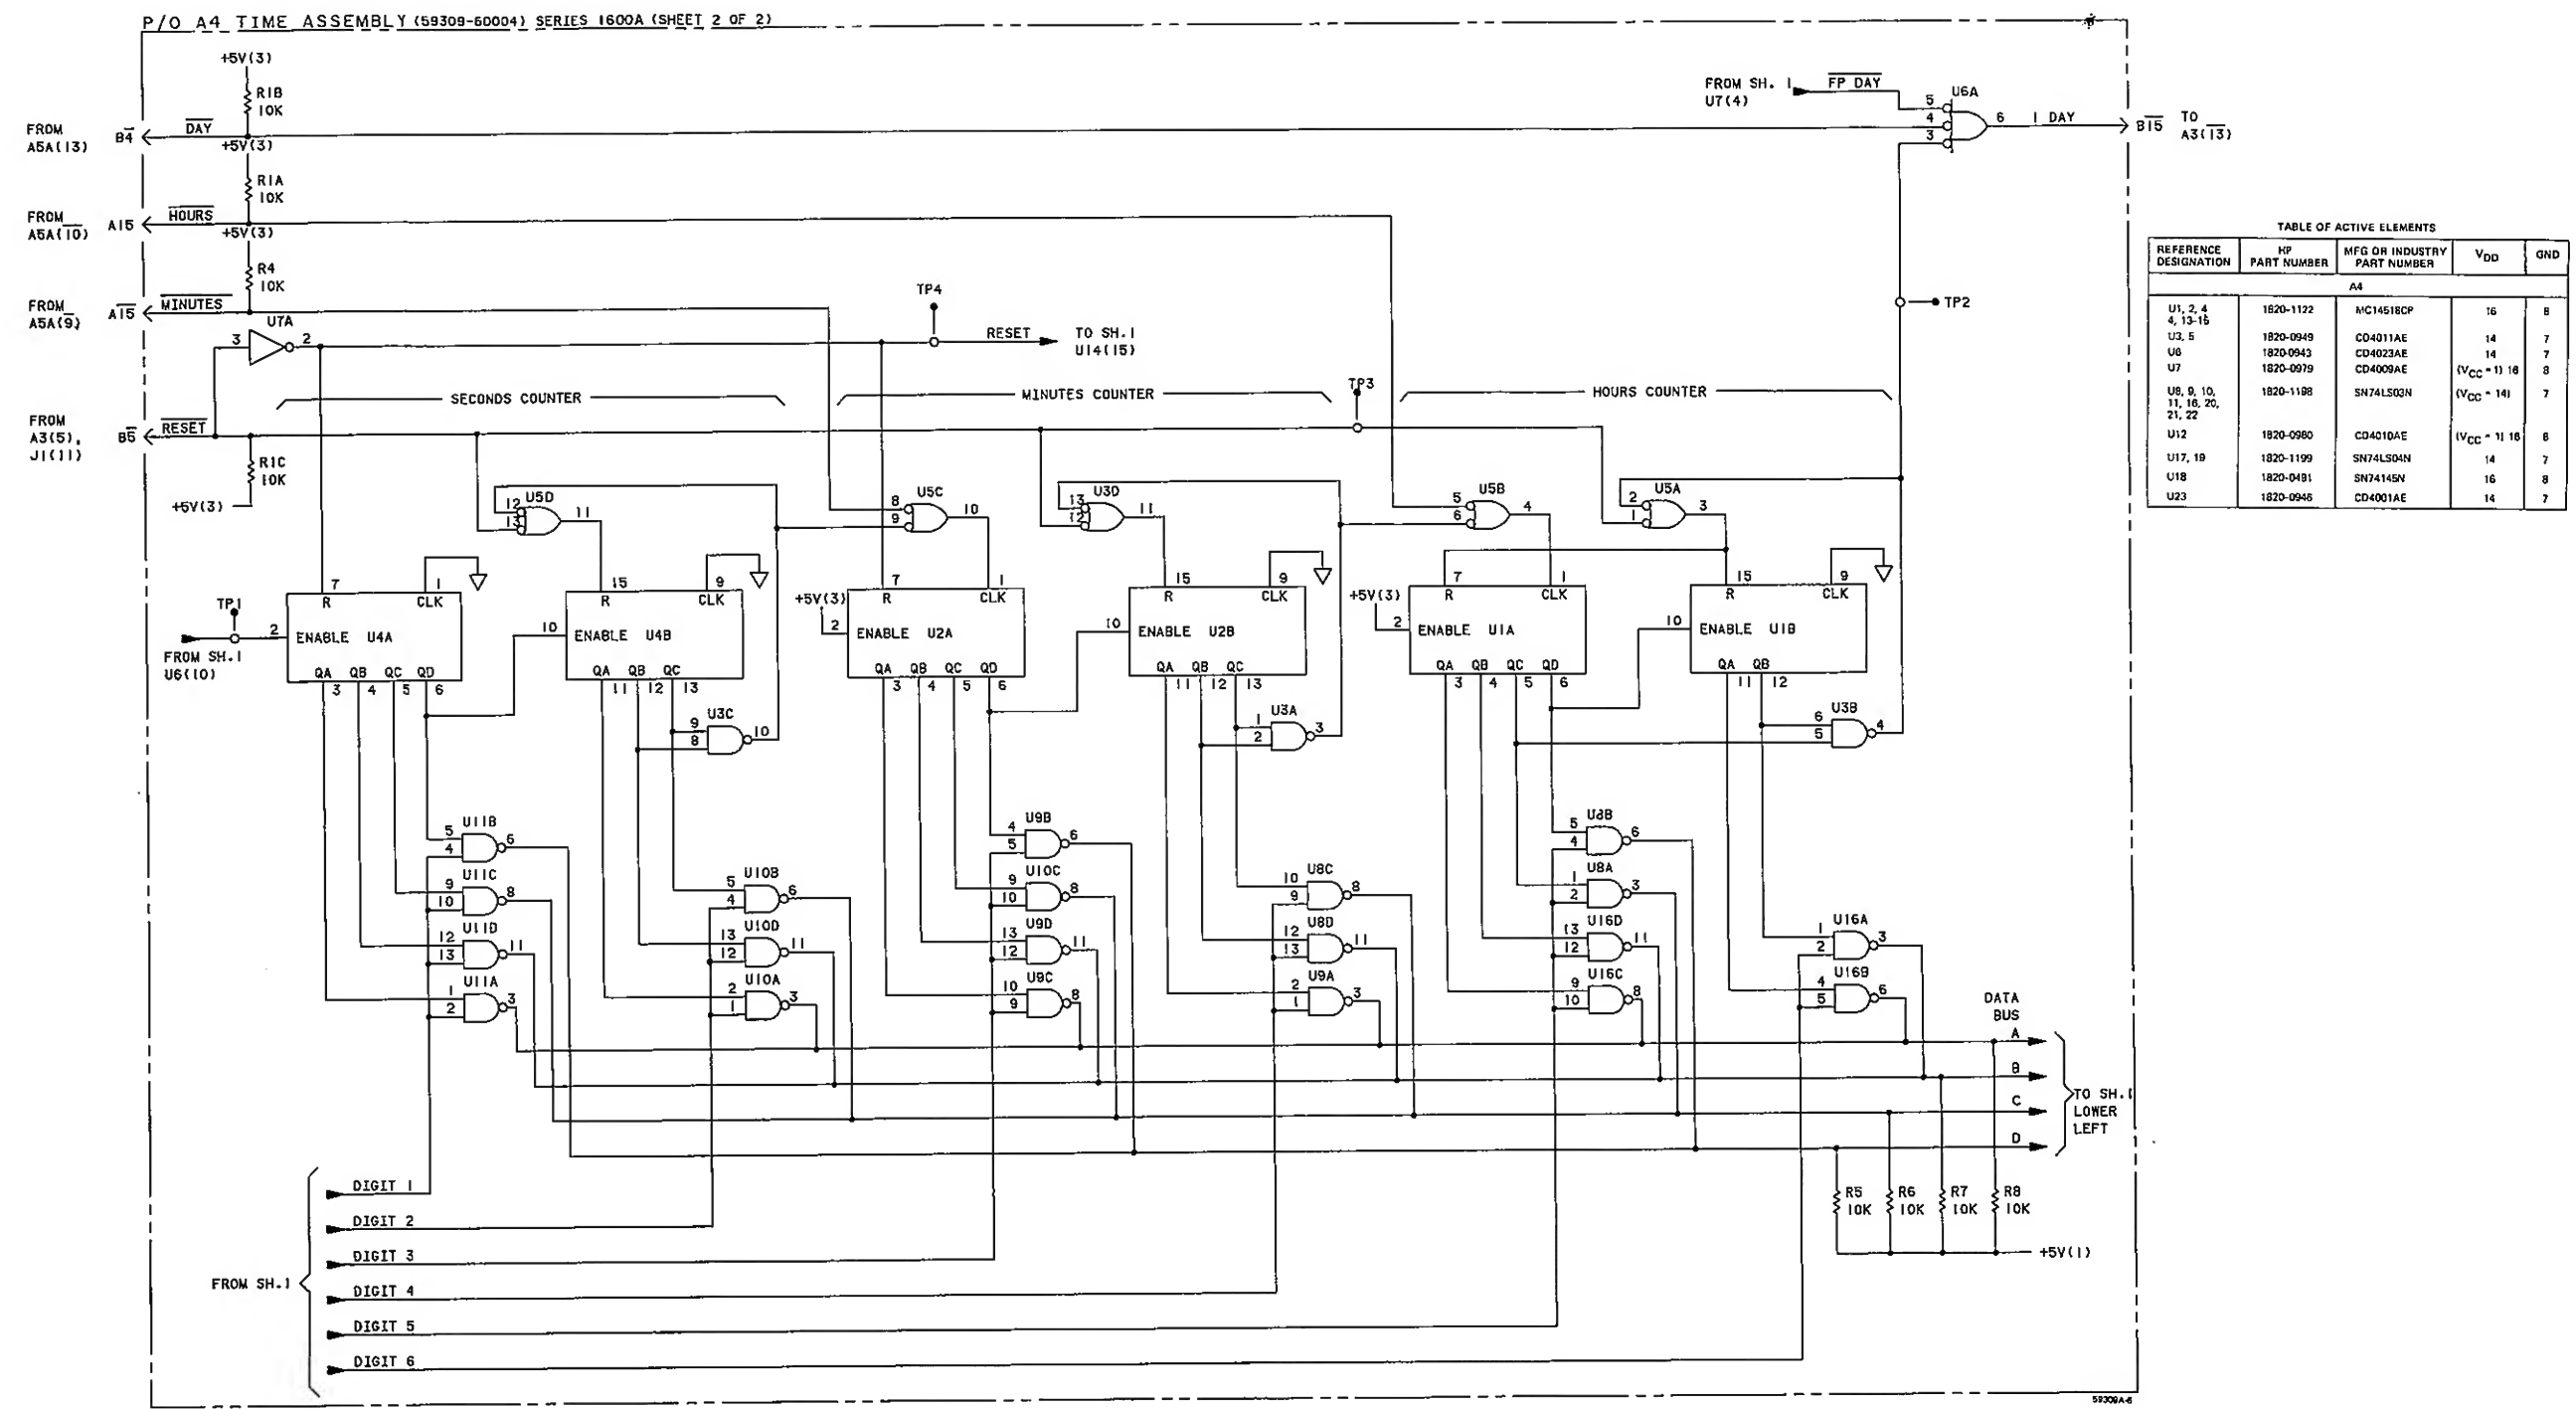


Figure 8-6. Time Assembly A4 (59309-60004), Schematic Diagram
(Sheet 2 of 2)

A5 BUS I/O ASSEMBLY (59309-60005)

The bus I/O assembly contains circuits for communicating with the bus. It also contains circuits for processing software instructions for the remote programming mode of the 59309A.

INPUT DECODER ROM (A5U18). This ROM has two operating modes which are controlled by the state of the ATN signal. When ATN is low the ROM monitors the DIO lines and processes valid Universal Commands. When ATN is high, the ROM processes valid data codes.

ADDRESS COMPARATOR (A5U19). The address Comparator monitors DIO lines 1 through 5 and compares their logic states with the logic states of switches 1 through 5 on the rear-panel address switches of the 59309A. The Address Comparator outputs a high signal (pin 14) to indicate comparison. The output of the Address Comparator combines with the output of the Input Decoder ROM command statement (ATN low) to control the Listen FF and the Talk FF.

LISTEN FF (A5U12A). This FF is set by the $\overline{\text{LISTEN}}$ signal and the address comparison signal from the Address Comparator. When set, this FF indicates the 59309A has been addressed to listen. The Listen FF is cleared by the Unlisten (?) command, and is clocked by the Address Clock signal generated by the Listen Handshake Synchronizer Circuit.

TALK FF (A5U12B). The Talk FF is set by the $\overline{\text{Talk}}$ signal from the Input Decoder ROM in combination with the output of the Address Comparator. When set, this FF indicates the 59309A has been addressed to talk. The Talk FF is cleared by IFC, by the Untalk command, or by a Talk Address that differs from the setting of the Address Switch. The FF is clocked by the Address Clock signal generated by the Listen Handshake Synchronizer circuit.

PROGRAM CODE DECODER (A5U17). The Program Code Decoder monitors the outputs of the Input Decoder ROM and sets various clock update signals in response to software programming codes processed by the Input Decoder ROM. The clock update signals are sent to the A4 Time Assembly for further processing. The program code decoder also supplies the Store signal to the Store FF.

STORE FF (A5U4B). The Store FF receives the $\overline{\text{Store}}$ signal from the Program Code Decoder (when programmed) and supplies a qualifier (Store) to Qualifier Selector A5U8. This action results in the storage of data (representing the time at that moment) in the Output Data Storage RAM A5U14.

RUN/HOLD FF (A5U19). This FF receives the $\overline{\text{Run}}$ signal or the $\overline{\text{Hold}}$ signal from the program code decoder to start (Run) or to stop (Hold) the clock. The output of this FF controls the output of the Time Base Divider on the A4 board.

LISTEN HANDSHAKE SYNCHRONIZER (A5U5). This circuit monitors the DAV signal from the bus and sets the NRFD and NDAC signals in response, on the HP-IB. This cycle (DAV, NRFD, and NDAC) is synchronized by the C Line signal from the Time Base Divider (A4U15B) on board A4. The C Line signal occurs only when the clock time is not updating and ensures that an update command on the bus does not interfere with the time count of the clock.

QUALIFIER SELECTOR (A5U8). This circuit selects one of eight qualifiers for storage in the Qualifier Storage FF. Selection control is provided by the State Machine ROM A5U2.

QUALIFIER STORAGE FF (A5U3A). This FF stores state of the qualifier selected by A5U8 for use in the state machine program.

STATE MACHINE ROM (A5U2). This 4K ROM controls the operation of the circuits that develop the talk output of the 59309A. The operational flowchart is shown in Section V. The number label adjacent to each block in the flowchart represents the state number at that point. The state number represents the octal equivalent of address coming into the ROM from the Next Address Shift Register (U1).

NEXT ADDRESS LATCH (A5U1). This circuit receives the next address from the State Machine ROM next address outputs and stores it until the next clock period of the machine. At the next clock period the address is output to the State Machine ROM as the present address.

OUTPUT DATA STORAGE RAM (A5U14). This RAM receives the four bits of data from the data bus on the A4 board (the same data that is supplied to the display) and stores them in the location defined by the digit position bits (illuminate digit positions) from the RAM Address Multiplexer (A5U7). The RAM outputs this data to the DIO Drivers when the 59309A is addressed to talk.

RAM ADDRESS MULTIPLEXER (A5U7). This circuit acts as a switch to provide digit position or state machine information to address the Output Data Storage RAM.


ASCII ENCODING ROM (A5U15). This ROM, in conjunction with the Output Data Storage RAM, outputs the data string to the bus. The Output Data Storage RAM supplies bit 1 through 4 of the digit information and the ASCII Encoding ROM supplies bit 5, 6, and 7 of the digit information in addition to LF and ? (question mark).

DIO DRIVERS (A5U16 and A5U20). The DIO Drivers are enabled by the Talk Enable Signal to accept the outputs of RAM (A5U14) and ROM (A5U15) to provide the talk output to the DIO lines of the HP-IB.

DAV FF (A5U3B). This FF is set by one of the outputs of the State Machine ROM and clocked by the C Line signal to provide the DAV signal to the HP-IB for the talk handshake.

LOAD FF (A5U4A). The Load FF is controlled by one of the outputs of the State Machine ROM and clocked by the C Line signal for storage of the clock time present just before receipt of the Load Command.

Figure 8-6
TIME ASSEMBLY A4 (59309-60004), SCHEMATIC DIAGRAM
(Sheet 2 of 2)

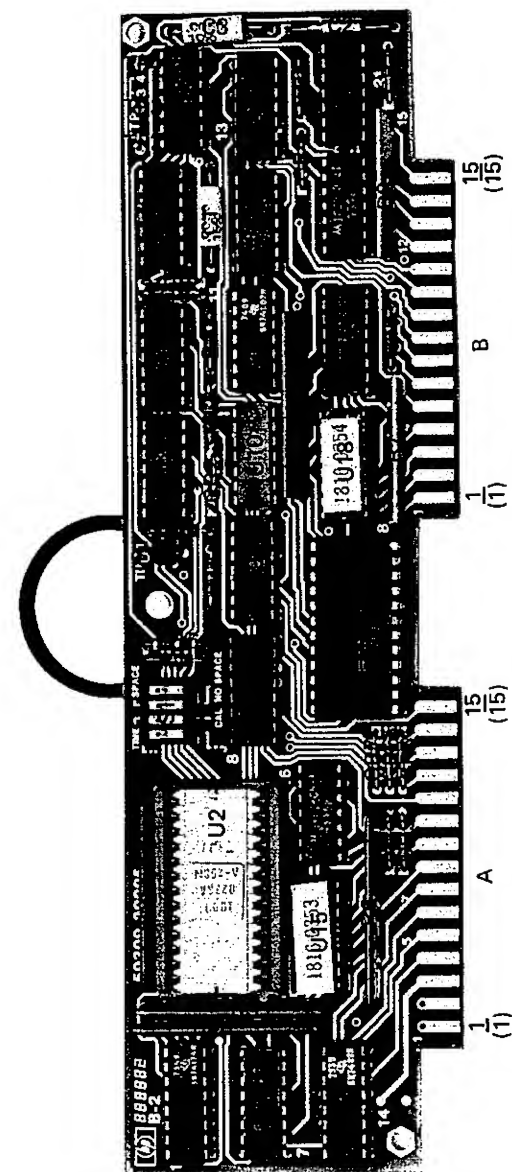

Part of Figure 8-7. Bus I/O Assembly A5

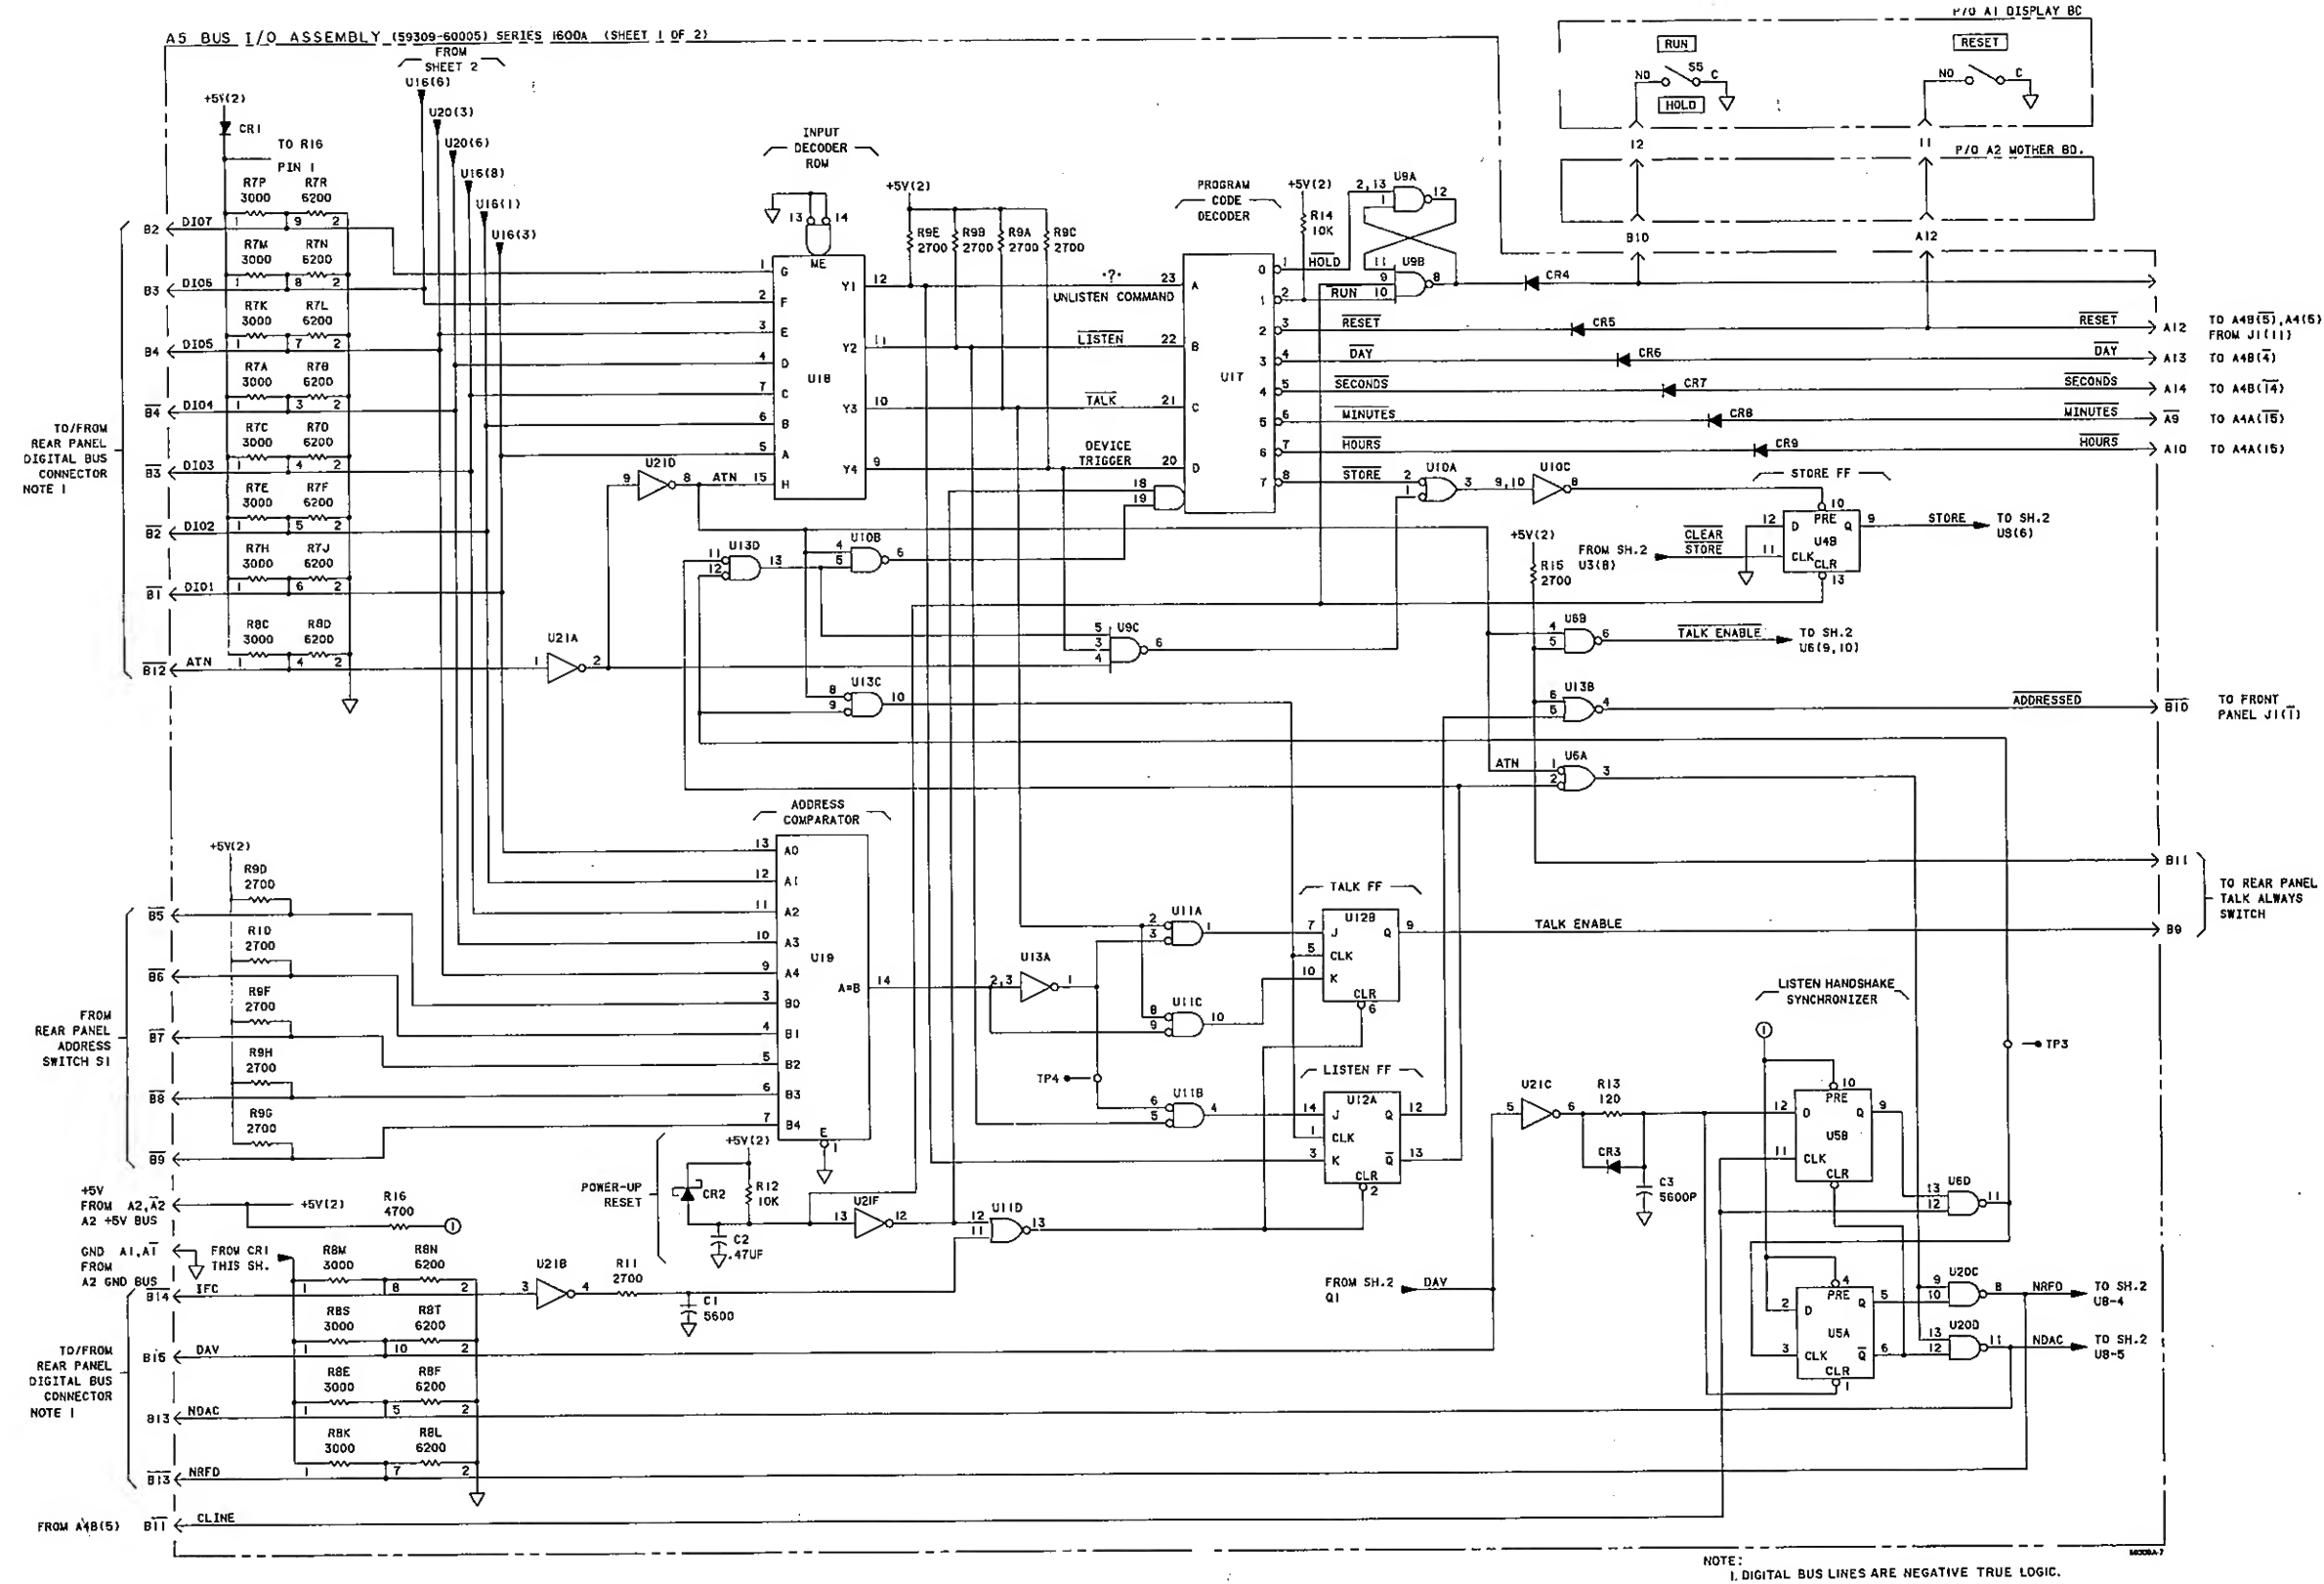


Figure 8-7. Bus I/O Assembly A5 (59309-60005), Schematic Diagram (Sheet 1 of 2)

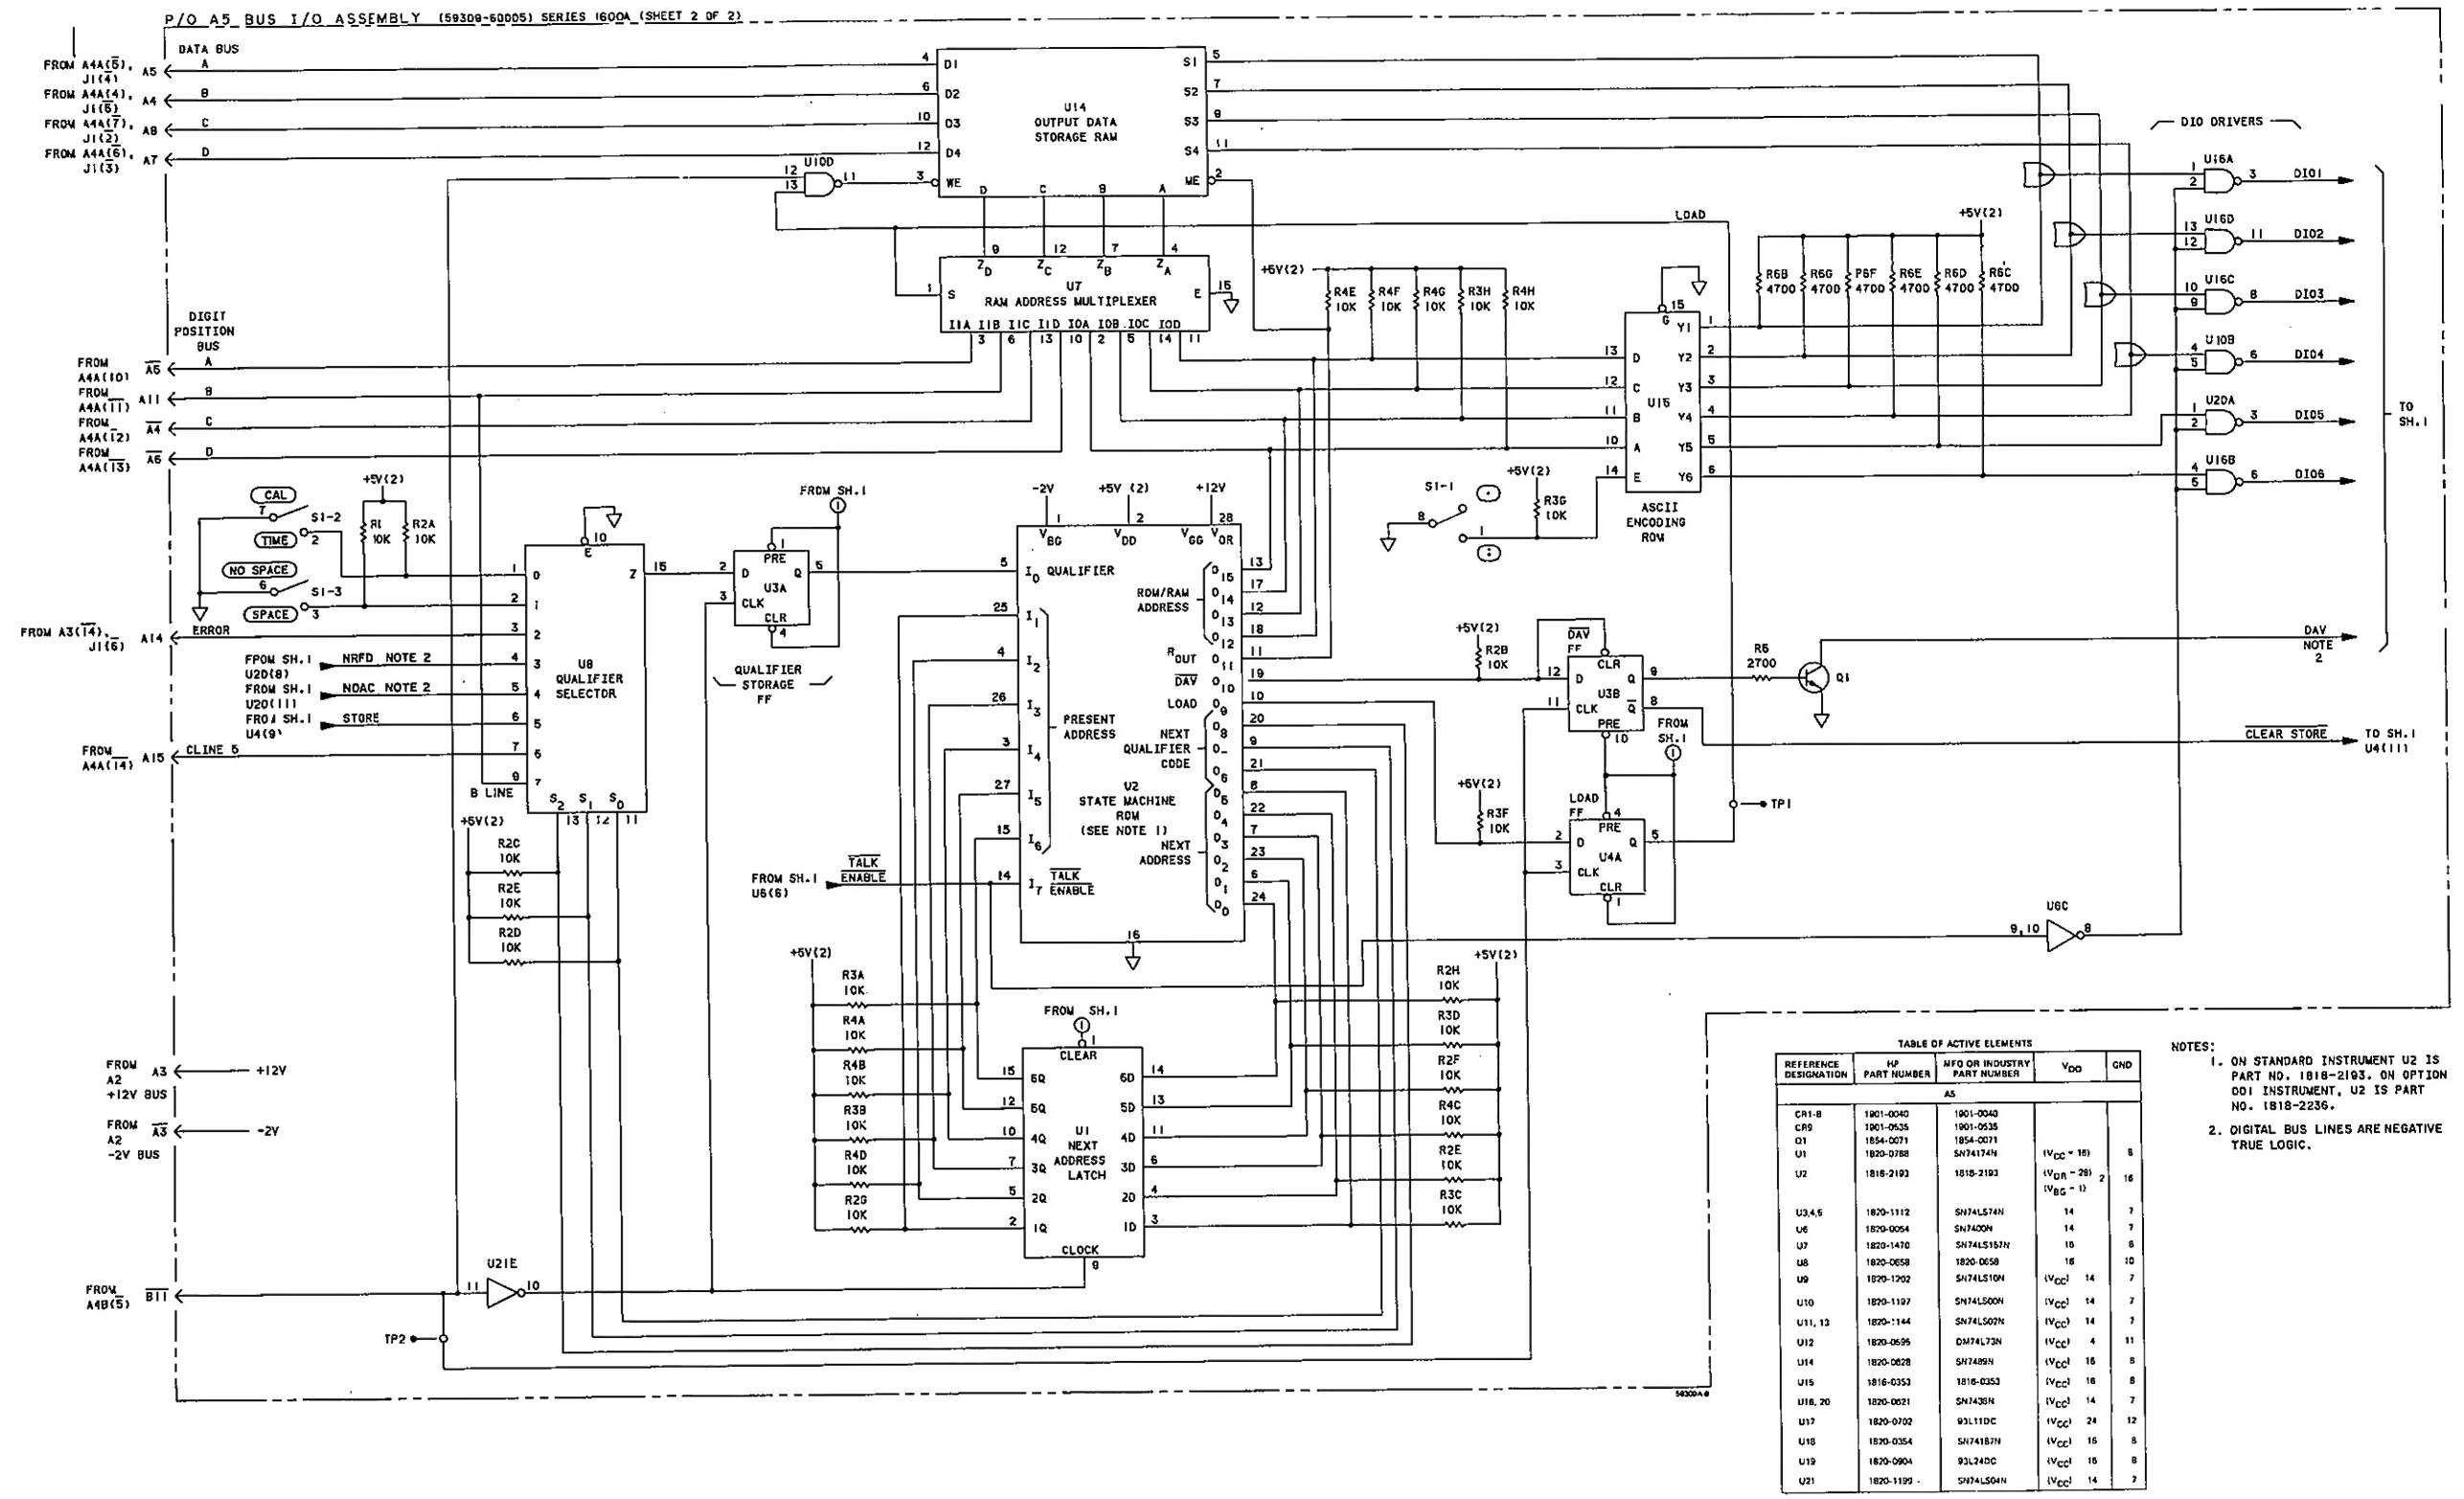


Figure 8-7. Bus I/O Assembly A5 (59309-60005),
Schematic Diagram (Sheet 2 of 2)



SALES & SERVICE OFFICES

AFRICA, ASIA, AUSTRALIA

[illegible]

CANADA

| | | | | | |
|---|---|--|--|---|---|
| ALBERTA Hewlett-Packard (Canada) Ltd. 11745 Kensington Ave. Edmonton T5E 0X5 Tel: (403) 452-3670 TWX: 610-831-9431 EDTH Hewlett-Packard (Canada) Ltd. 915-42 Avenue S. Suite 102 Calgary T2S 1Z1 Tel: (403) 255-1672 TWX: 610-82-941 | BRITISH COLUMBIA Hewlett-Packard (Canada) Ltd. 11745 Kensington Ave. Vancouver V6E 3R2 Tel: (604) 254-0531 TWX: 610-831-9431 EDTH Hewlett-Packard (Canada) Ltd. 915-42 Avenue S. Suite 102 Calgary T2S 1Z1 Tel: (403) 255-1672 TWX: 610-82-941 | MANITOBA Hewlett-Packard (Canada) Ltd. 837 E. Cordova Street St. James Winipeg R3H 0L8 Tel: (204) 765-7581 TWX: 610-831-9431 EDTH Hewlett-Packard (Canada) Ltd. 915-42 Avenue S. Suite 102 Calgary T2S 1Z1 Tel: (403) 255-1672 TWX: 610-82-941 | NOVA SCOTIA Hewlett-Packard (Canada) Ltd. 890 Windmill Park 1415 Century St. P.O. Box 933 Dartmouth NSB 3Z6 Tel: (902) 425-7820 TWX: 610-831-9431 EDTH Hewlett-Packard (Canada) Ltd. 915-42 Avenue S. Suite 102 Calgary T2S 1Z1 Tel: (403) 255-1672 TWX: 610-82-941 | ONTARIO Hewlett-Packard (Canada) Ltd. 1785 Woodbine Dr. Oakville L7M 0P9 Tel: (613) 223-5550 TWX: 610-831-9431 EDTH Hewlett-Packard (Canada) Ltd. 915-42 Avenue S. Suite 102 Calgary T2S 1Z1 Tel: (403) 255-1672 TWX: 610-82-941 | QUEBEC Hewlett-Packard (Canada) Ltd. 2375 Gahagan Street Ste-Foy G1V 4H7 Tel: (418) 688-5710 TWX: 610-831-9431 EDTH Hewlett-Packard (Canada) Ltd. 915-42 Avenue S. Suite 102 Calgary T2S 1Z1 Tel: (403) 255-1672 TWX: 610-82-941 |
|---|---|--|--|---|---|

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada)
Ltd. in Mississauga.

CENTRAL AND SOUTH AMERICA

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------------|--------------------------------------|--|----------------|---|---|---------------|---|--------------|---|-----------------|---|-------------------|---|----------------|---|--------------------|---|------------------|---|---------------|--|-----------------|--|-------------|---|--------------------|---|----------------|--|------------------|---|---------------------------------------|--|
| ARGENTINA | HEWITT-Packard Argentina S.A. | Hewlett-Packard de Brasil L.E.G. Ltda. Rua Siqueira Campos, 55, 4º andar- Copacabana Rio de Janeiro 20030 Tel: 254-481-02/63514 Telex: Public Book | BOLIVIA | Santuma & Riva (Bolivia) Ltda. | Av. Manacal, Santa Cruz 1342 La Paz Tel: 40826, 53163, 5242 Telex: 5860014 Cable: SURMAR Tel: 396515 | BRAZIL | Hewlett-Packard do Brasil L.E.G. Ltda. Rio de Janeiro, RJ Rua Frei Caneca, 11405-252 Paulo-55 01307-50 Paulo-55 Tel: 268-71-11, 267-81-23, 267-61-93 Telex: 259-12-3002 HEWBR Cable: HEWPAKCO, São Paulo Hewlett-Packard do Brasil Rio de Janeiro, RJ Rua Padre Dantas, 32 30000-000 Alegre-RS Tel: 33-22-22-29, 33-22-61 Cable: HEWPAKCO, Porto Alegre | CHILE | Calagali y Asociados Ltda. P.O. Box 1580-01, 850-01 Casilla 2116 Cable: SURMAR Tel: 396515 | COLOMBIA | Hewlett-Packard de Colombia L.E.G. Ltda. Medellin, Antioquia General Machinery Co., Inc. Pavimento 454 Calle 100 No. 2015 Santafé Tel: 311-23, 311-24 Cable: GEMCO | COSTA RICA | Chemica Costarricense S.A. Calle Central, Avenida 1 y 3 Apartado 10159 San José Tel: 2-18-53 Cable: GALLGR SAN JOSE | ECUADOR | Calmet S.A. Medellin, Antioquia A.F. Visciano Compañia Ltda. P.O. Box Aragonias No. 239 Calle 100 No. 2015 Santafé Tel: 242-150, 247-9334 Cable: ECUWAT | EL SALVADOR | El Salvador y Proceso Industria y Comercio Bulevar de los Heroes 41-48 San Salvador Tel: 25787 Cable: GALLGR SAN JOSE | GUATEMALA | IPESA Avenida la Reforma 3-48, Zona 9 Guatemala City Tel: 439-6700 Cable: 4192 Teletico | MEXICO | Hewlett-Packard Mexicana, S.A. de C.V. Torres Aguirre No. 21, 1º piso del Valle Mexico 12, D.F. Tel: (055) 543-42-32 Telex: 24-5201 Cable: 2113 Sagita E | PARAGUAY | 2 J. McLeod S.R.L. Paraguay División Aparatos y Equipos Mecánicos Droger, Aparatos y Equipos S.R.L. Calle de la Industria 2877 Asunción de Correo 370 Cable: 430102 Tel: 43-0102 Cable: RADNUM Montevideo | PERU | Compañía Eléctrica Médica S.A. Los Floresmores 145 San Isidro Calle 1030 Lima 1 Tel: 35-07-37, 35-07-3723 Cable: ELMED LIMA | PUERTO RICO | Hewlett-Packard Inter-Americas P.O. Box 2300 Punjab Road Branch Office 65th Rd. Station San Juan 00929 Cable 272, U.S. Country Club Carolina 00986 Tel: (809) 725-7357/4555 Telex: HPIC-PR 3450514 | URUGUAY | Patio Ferrando S.A. Uruguay Calle de la Industria 2877 Asunción de Correo 370 Cable: 430102 Tel: 43-0102 Cable: RADNUM Montevideo | VENEZUELA | Hewlett-Packard de Venezuela C.A. de C.V. Caracas 50033, Caracas V.I. Edificio Segura Telex Transversal Los Rios Caracas 107 Tel: 35-07-37, 35-07-3723 Cable: ELMED LIMA Tel: 2516 HEWPAK Cable: HEWPAKCAR | FOR AREAS NOT LISTED, CONTACT: | Hewlett-Packard P.O. Box 1459 3000 Hillview Ave. Palo Alto, California 94304 Tel: (415) 951-1501 TWX: 910-373-1260 Cable: HEWPAK PAK Cable: 43-5300, 43-8493 |
|------------------|--------------------------------------|--|----------------|---|---|---------------|---|--------------|---|-----------------|---|-------------------|---|----------------|---|--------------------|---|------------------|---|---------------|--|-----------------|--|-------------|---|--------------------|---|----------------|--|------------------|---|---------------------------------------|--|

Figure 8-7
BUS I/O ASSEMBLY A5 (59309-60005)
SCHEMATIC DIAGRAM (Sheet 2 of 2)

EUROPE, NORTH AFRICA AND MIDDLE EAST

AUSTRIA
Hewlett-Packard Ges m b H
Handelskai 52
P.O. Box 7
A-1205 Vienna
Tel: (0222) 35 16 21 to 27
Cable: HEWPAC Vienna
Telex: 75923 hewpac a

BELGIUM
Hewlett-Packard Benelux
S.A. N.V.
Avenue de Col-Vert, 1
(Grootenkraai) 8
B-1170 Brussels
Tel: (02) 672 22 40
Cable: PALOEN Brussels
Telex: 23 494 paloben br

CYPRUS
Xenophon
19 Gregorou & Xenopoulos Rd
P.O. Box 1152
CY-Nicosia
Tel: (02) 4628 29
Cable: KYPRONICS PANDEHIS
Telex: 3018

CZECHOSLOVAKIA
Vývojová a Pírovní Zakladna
Vysokumym Ústavu v Bechovicích
CSSR-25297
Bechovice u Prahy
Tel: 89 93 41
Telex: 121333

DOR
Entwicklungslabor der TU Dresden
Forschungsinstitut Meinsberg
DDR-7305
Waldheim/Meinsberg
Tel: 37 667
Telex: 518741

DENMARK
Hewlett-Packard A/S
Dalsvej 52
DK-3460 Birkerød
Tel: (02) 81 66 40
Cable: HEWPAC AS
Telex: 166 40 hpas
Hewlett-Packard A/S
Navejvej
DK-8600 Silkeborg
Tel: (06) 82 71 66
Telex: 166 40 hpas
Cable: HEWPAC AS

FINLAND
Hewlett-Packard Oy
Nankausentie 5
P.O. Box 6
SF-00211 Helsinki 21
Tel: 6923031
Cable: HEWPACQ Helsinki
Telex: 12-1563

FRANCE
Hewlett-Packard France
Quartier de Courbevoie
Boulevard de la Seine
F-91400 Orsay Cedex
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

GERMANY
Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

GERMANY
Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

GERMANY
Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

GERMANY
Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

GERMANY
Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

GERMANY
Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

GERMANY
Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

GERMANY
Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

Hewlett-Packard France
Agence Régionale
Rue de la République
F-31300 Toulouse-Le Mirail
Tel: (61) 11 12
Cable: HEWPAC 51957
Telex: 510957

Hewlett-Packard France
Agence Régionale
Aéroport principal de
Marseille-Marganne
F-13721 Marignane
Tel: (91) 89 12 36
Cable: HEWPAC MARGN
Telex: 410770

Hewlett-Packard France
Agence Régionale
63, Avenue de Rochester
Belle Pointe
F-35014 Rennes Cedex
Tel: (99) 36 33 21
Cable: HEWPAC 74912
Telex: 740912

Hewlett-Packard France
Agence Régionale
Aide de la Roberteau
F-67000 Strasbourg
Tel: (88) 35 23 20 21
Cable: HEWPAC STRBG
Telex: 740912

Hewlett-Packard France
Agence Régionale
Centre Valaun
201, rue Colbert
Entree A2
F-59000 Lille
Tel: (20) 51 44 14
Telex: 820744

GERMAN FEDERAL REPUBLIC
Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Bernsteinstrasse 117
Postfach 560 140
D-6000 Frankfurt 56
Tel: (0611) 50 04 04
Cable: HEWPACSA Frankfurt
Telex: 04 13249 hpfmd

Hewlett-Packard GmbH
Technisches Büro Böttingen
Herrenbergstrasse 110
D-7030 Böttingen Württemberg
Tel: (07031) 68 71
Cable: HEWPAC Böttingen
Telex: 07255739 bbn

Hewlett-Packard GmbH
Technisches Büro Düsseldorf
Emanuel-Leutze-Straße 1 (Seestert)
D-4000 Düsseldorf
Tel: (0211) 59 71-1
Telex: 085 86 53 hppd d

Hewlett-Packard GmbH
Technisches Büro Hamburg
Wendenstrasse 23
D-2000 Hamburg 1
Tel: (040) 24 13 93
Cable: HEWPACSA Hamburg
Telex: 21 63 032 hpph d

Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

Hewlett-Packard France
Le Saquin
Chemin des Moulins
Boulevard de la Seine
F-91400 Orsay
Tel: (1) 907 78 25
Cable: HEWPAC Orsay
Telex: 600048

Hewlett-Packard GmbH
Technisches Büro Nuremberg
Pöschelstr. 90
D-8500 Nuremberg
Tel: (0911) 56 30 83 85
Telex: 0623 6860

Hewlett-Packard GmbH
Technisches Büro München
Unterhachinger Strasse 28
ISAR Center
D-8012 Ottobrunn
Tel: (089) 601 30 61-7
Cable: HEWPACSA München
Telex: 0524985

Hewlett-Packard GmbH
Technisches Büro Berlin
Kerth Strasse 2-4
D-1000 Berlin 30
Tel: (030) 24 90 86
Telex: 18 3405 hpbldn d

GREECE
Kostas Karayannis
18, Ermou Street
GR-Athens 126
Tel: 3237371
Cable: RAKAR Athens
Telex: 21 59 62 nkar gr

GREECE
Analytical Only
"INTECO"
G. Papathanassiou & Co
Marmi 17
GR-Athens 103
Tel: 522 1915
Cable: INTERAKA Athens
Telex: 21 5329 INTE GR

HUNGARY
MTA
Muszerügyi és Mérésztechnika
Szcolglatok
Lenn Krt 67
1391 Budapest VI
Tel: 42 03 38
Cable: VISCONTI
Telex: 22 51 14

ICELAND
Medical Only
Eding Trading Company Inc
Hafnarhvoli - Tryggvavogi
IS-Reykjavik
Tel: 07255739 bbn
Cable: ELINDG Reykjavik
Telex: 07255739 bbn

IRAN
Hewlett-Packard Iran Ltd
Mir-Emad Avenue
14th Street No. 13
P.O. Box 472419
IR-Tehran
Tel: 05 10 82 86
Telex: 21 25 74 khm ir

IRELAND
Hewlett-Packard Ltd
King Street Lane
GB-Winnerham, Wokingham
Berkshire RG11 5AR
Tel: (0734) 78 47 74
Telex: 847178 848179

ITALY
Hewlett-Packard Italiana S.p.A.
P.O. Box 51
20100 Milano
Tel: (02) 6251 10 (lines)
Cable: HEWPACQ Milano
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via Pietro Maroncelli 40
(Ang. Via Varesini)
I-35100 Padova
Tel: (49) 66 46 88
Telex: 41612 Hewpack
Medical only

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
P.O. Box 51
20100 Milano
Tel: (02) 6251 10 (lines)
Cable: HEWPACQ Milano
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via Pietro Maroncelli 40
(Ang. Via Varesini)
I-35100 Padova
Tel: (49) 66 46 88
Telex: 41612 Hewpack
Medical only

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

ITALY
Hewlett-Packard Italiana S.p.A.
Via d'Agliardi, 7
I-56100 Pisa
Tel: (050) 2 32 04
Telex: 32046 via Milano
Cable: HEWPACQ Italiana S.p.A.
Telex: 32046

NORWAY
Hewlett-Packard Norge A/S
Nesveien 13
N-1344 Haslum
Tel: (02) 53 83 60
Telex: 16621 hpnas n

POLAND
Biuro Informacji Technicznej
Hewlett-Packard
Ul. Stawki 2 GP
00-950 Warszawa
Tel: 39 67 43
Telex: 81 24 53 hepa pl

POLAND
Zaklad Doswiadczalny
Budowy Aparatury Naukowej
Ul. Krapkowicki 1
Narutowej 51-55
00-800 Warszawa
Tel: 81 46 48
Telex: 81 46 48

POLAND
Zaklad Naprawy Sprzetu
Medycznego
Plac Komuny Paryskiej 6
90-007 Lodz
Tel: 334-1 337-83
Cable: MEASUREMENTS
Slochow
Telex: 10721

POLAND
Teletec Empresa Técnica de
Equipamentos Eléctricos S. r. l.
Rua Rodrigo da Fonseca 103
P.O. Box 1331
P-Lisbon 1
Tel: (01) 68 60 72
Telex: 12598

POLAND
Medical only
Mundinter
Intercomércio Mundial de Comércio
S. r. l.
Av. A. de Aguiar 138
I-40013 Bologna
P.O. Box 2761
Tel: (051) 30 75 87
Cable: INTERCAMBIO Lisbon
Telex: 12598

RUMANIA
Hewlett-Packard Reprezentanta
BD N. Bulevardu 16
Bucharest
Tel: 158023-138885
Telex: 12440
I.R.U.C.
Interprendera Penru
Intineraria
S. Reprezenta Utilizator de Calcul
Bd. prof. Dimitrie Pompei 6
Bucharest-Sectorul 2
Tel: 12 64 30
P.O. Box 01163716

SAUDI ARABIA
Modern Electronic Establishment
King Abdul Aziz str (Head office)
P.O. Box 1228
Tel: 25 16 76 25 90-99
Cable: GERP Casa
Telex: 23739

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667
NL-Amstelveen 1134
Tel: (020) 47 82 21
Cable: PALOEN Amsterdam
Telex: 13 216 hepa nl

NETHERLANDS
Hewlett-Packard Benelux N.V.
Van Heuven Goedhartweg 121
P.O. Box 667

HEWLETT *hp* PACKARD

MANUAL PART NO. 59309-90004

PRINTED IN U.S.A.